

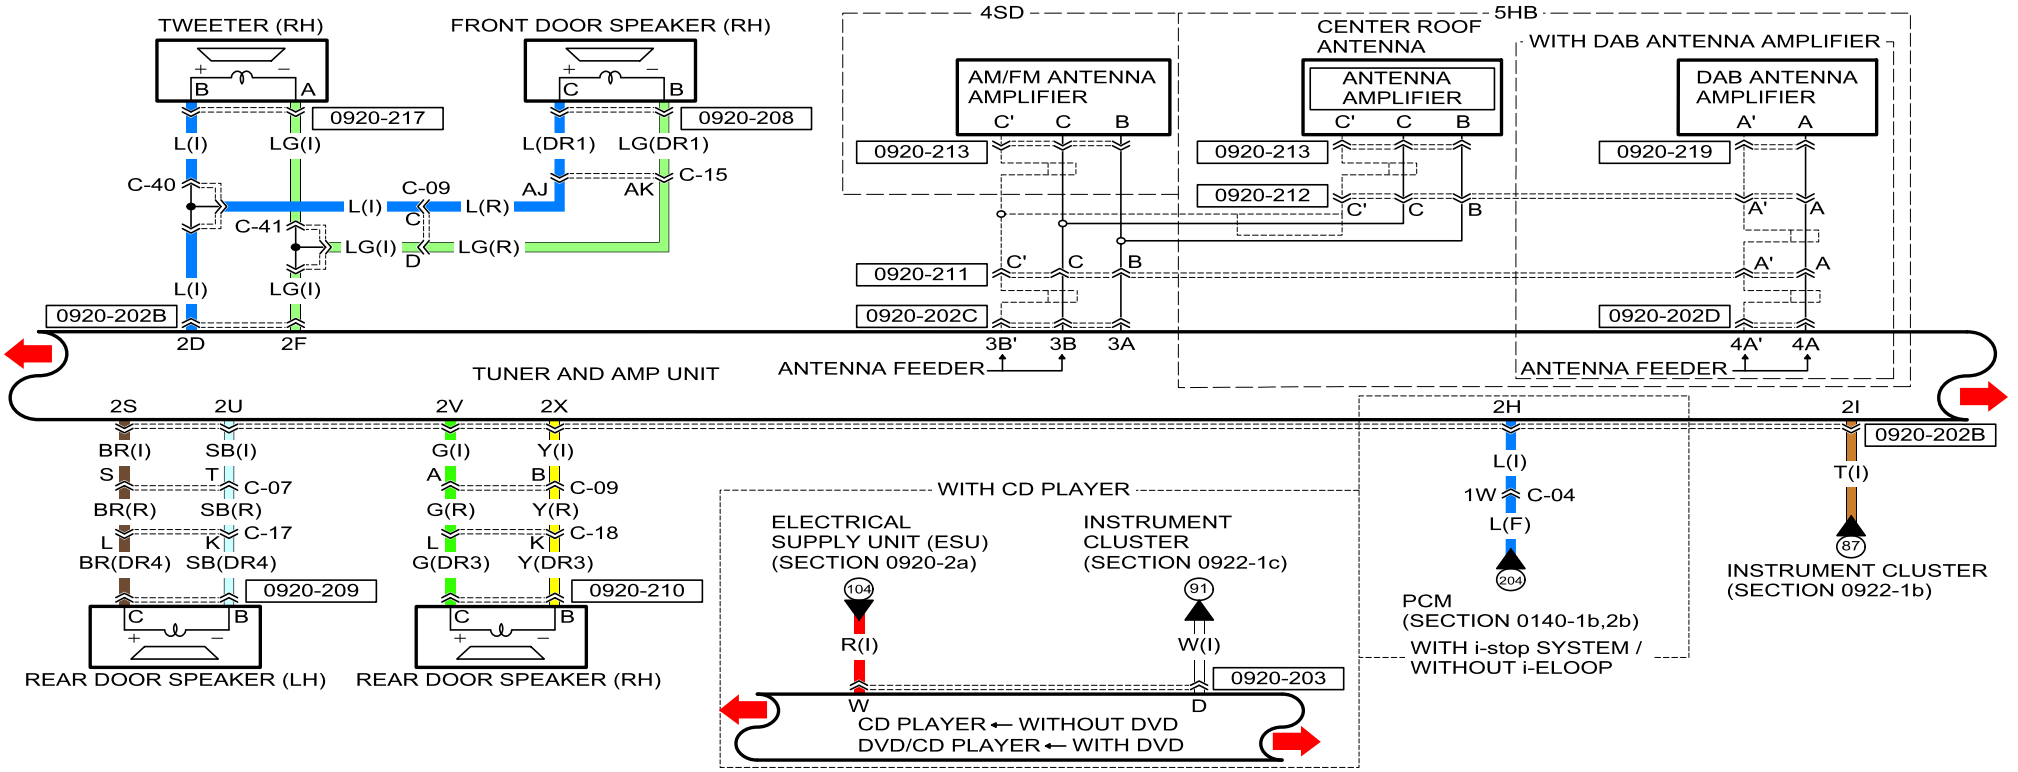



0920-202B
TUNER AND AMP UNIT

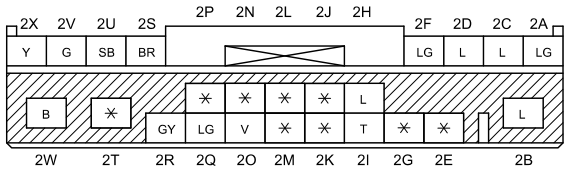


0920-203
CD PLAYER ← WITHOUT DVD
DVD/CD PLAYER ← WITH DVD

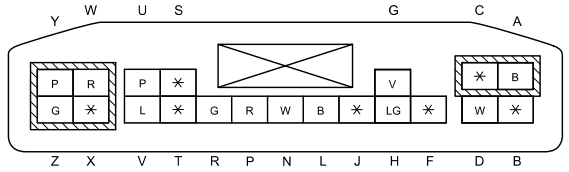


0920-211
ANTENNA FEEDER No.1-ANTENNA FEEDER No.2

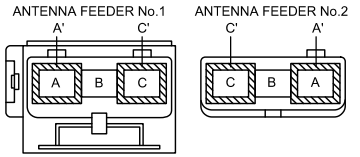


0920-213
AM/FM ANTENNA AMPLIFIER ← 4SD
CENTER ROOF ANTENNA ← 5HB

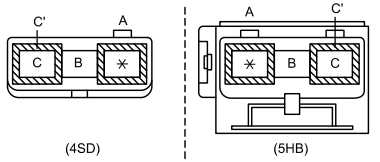


0920-212
ANTENNA FEEDER No.2-ANTENNA FEEDER No.3

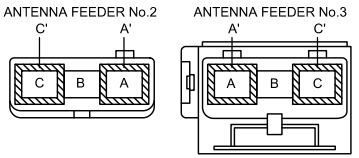


0920-202C
TUNER AND AMP UNIT




0920-202D
TUNER AND AMP UNIT




0920-208
FRONT DOOR SPEAKER (RH)



0920-209
REAR DOOR SPEAKER (LH)



0920-210
REAR DOOR SPEAKER (RH)




0920-217
TWEETER (RH)



0920-219
DAB ANTENNA AMPLIFIER



Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

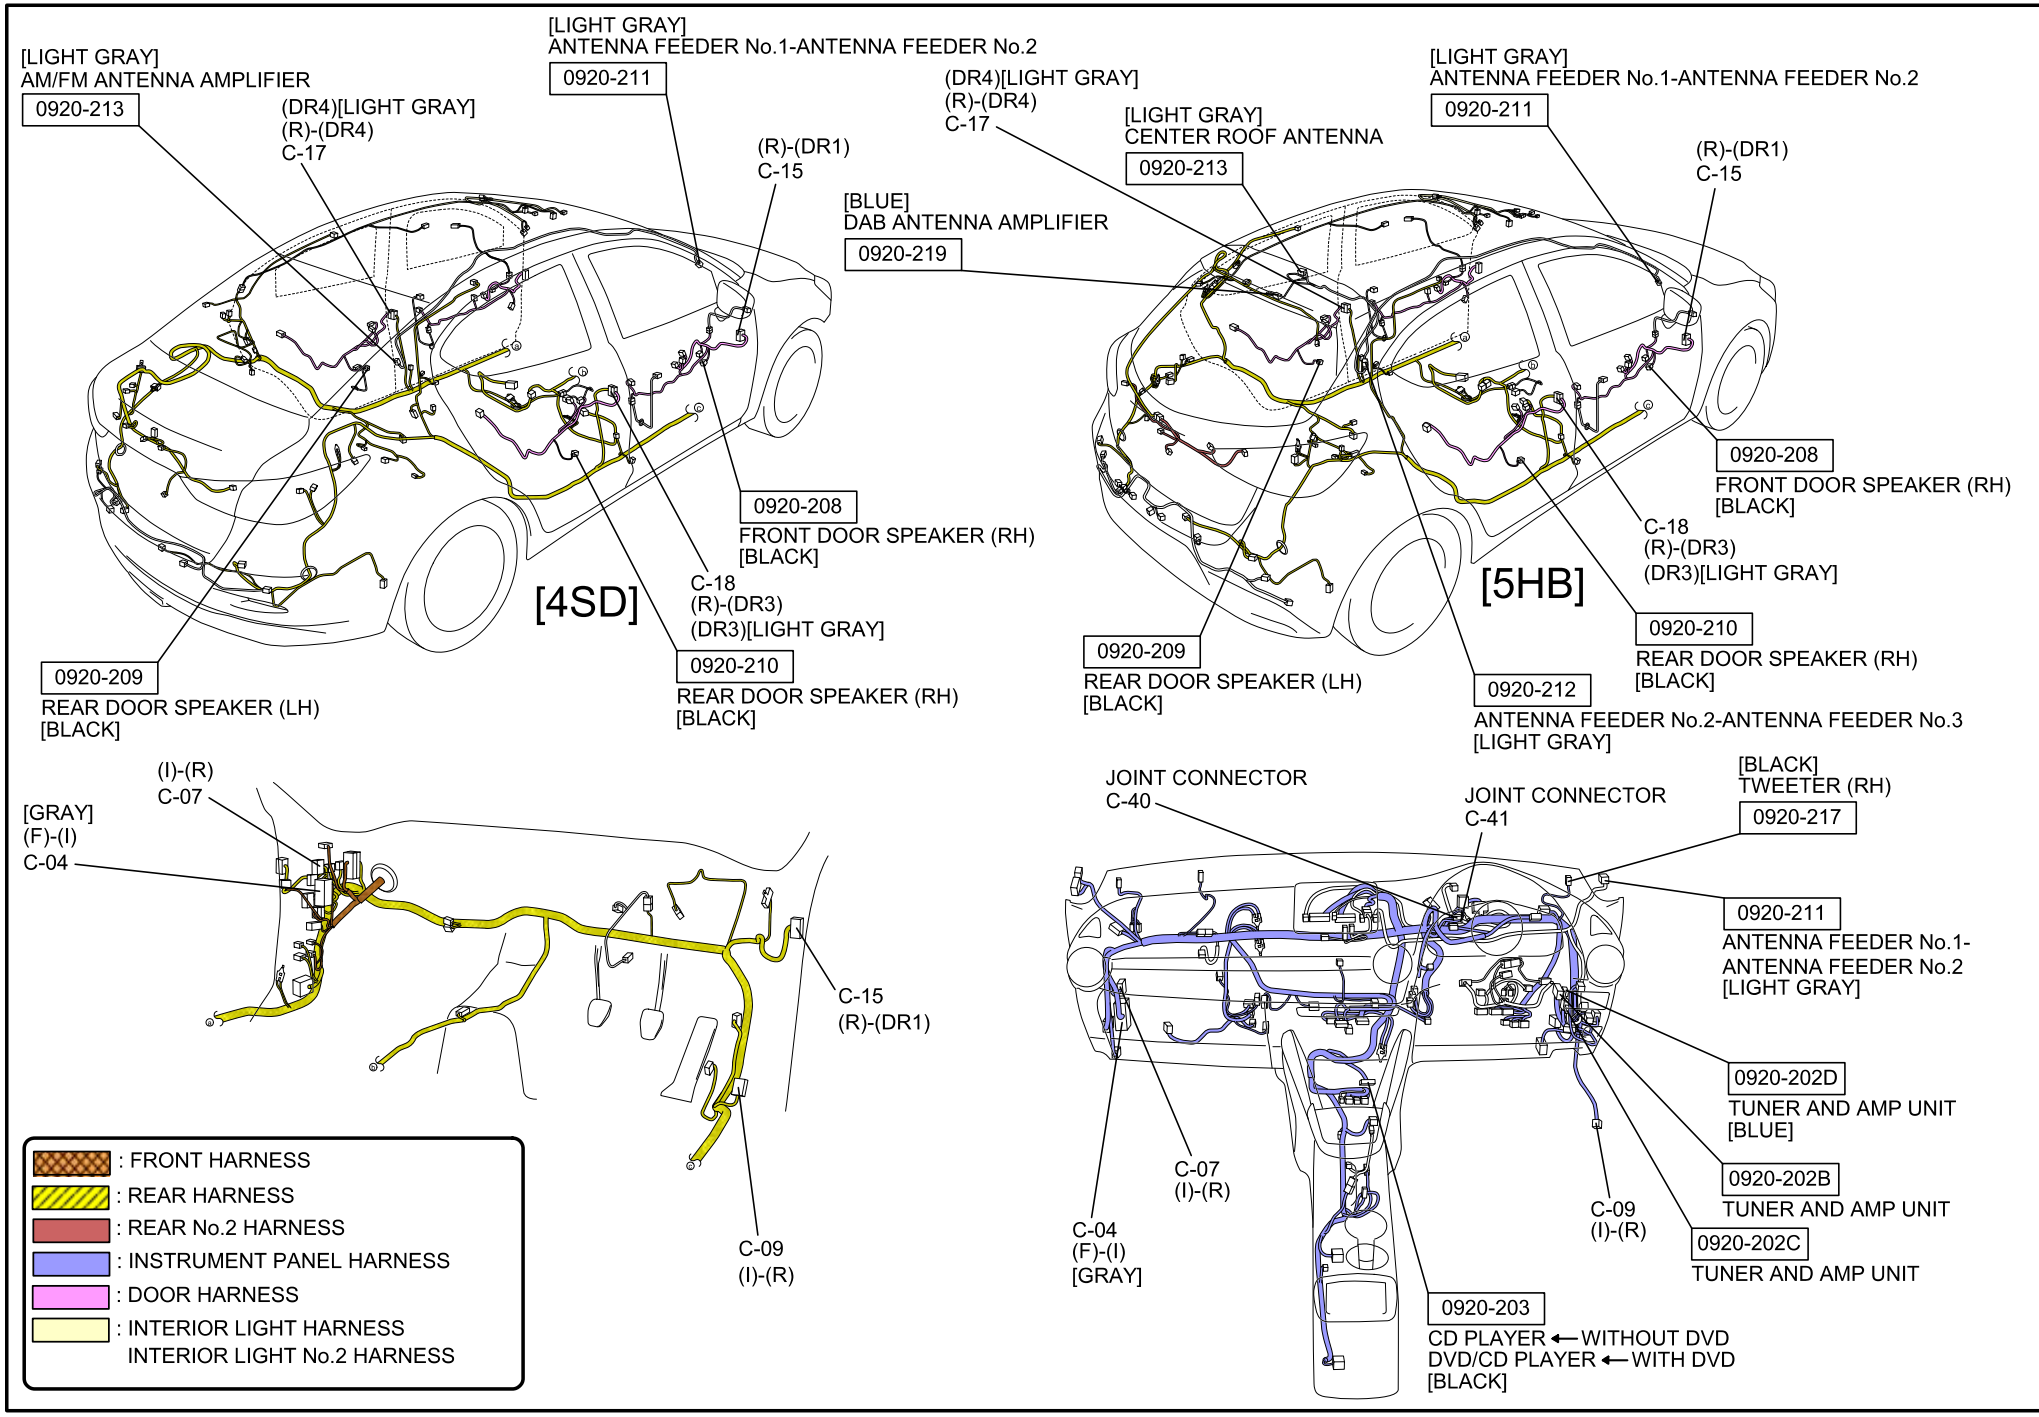
[LIGHT GRAY]
AM/FM ANTENNA AMPLIFIER
0920-213
(DR4)[LIGHT GRAY]
(R)-(DR4)
C-17
[LIGHT GRAY]
ANTENNA FEEDER No.1-ANTENNA FEEDER No.2
0920-211
(R)-(DR1)
C-15
0920-208
FRONT DOOR SPEAKER (RH)
[BLACK]
C-18
(R)-(DR3)
(DR3)[LIGHT GRAY]
[4SD]
0920-209
REAR DOOR SPEAKER (LH)
[BLACK]
0920-210
REAR DOOR SPEAKER (RH)
[BLACK]
[BLUE]
DAB ANTENNA AMPLIFIER
0920-219
(DR4)[LIGHT GRAY]
(R)-(DR4)
C-17
[LIGHT GRAY]
CENTER ROOF ANTENNA
0920-213
[LIGHT GRAY]
ANTENNA FEEDER No.1-ANTENNA FEEDER No.2
0920-211
(R)-(DR1)
C-15
0920-208
FRONT DOOR SPEAKER (RH)
[BLACK]
C-18
(R)-(DR3)
(DR3)[LIGHT GRAY]
[5HB]
0920-210
REAR DOOR SPEAKER (RH)
[BLACK]
0920-209
REAR DOOR SPEAKER (LH)
[BLACK]
0920-212
ANTENNA FEEDER No.2-ANTENNA FEEDER No.3
[LIGHT GRAY]
(I)-(R)
C-07
[GRAY]
(F)-(I)
C-04
C-15
(R)-(DR1)
C-09
(I)-(R)
: FRONT HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: INSTRUMENT PANEL HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS
JOINT CONNECTOR
C-40
JOINT CONNECTOR
C-41
[BLACK]
TWEETER (RH)
0920-217
0920-211
ANTENNA FEEDER No.1-
ANTENNA FEEDER No.2
[LIGHT GRAY]
0920-202D
TUNER AND AMP UNIT
[BLUE]
0920-202B
TUNER AND AMP UNIT
0920-202C
TUNER AND AMP UNIT
C-07
(I)-(R)
C-04
(F)-(I)
[GRAY]
C-09
(I)-(R)
0920-203
CD PLAYER ← WITHOUT DVD
DVD/CD PLAYER ← WITH DVD
[BLACK]