




@2 : SKYACTIV-D 1.5
@4 : SKYACTIV-G 1.3, 1.5

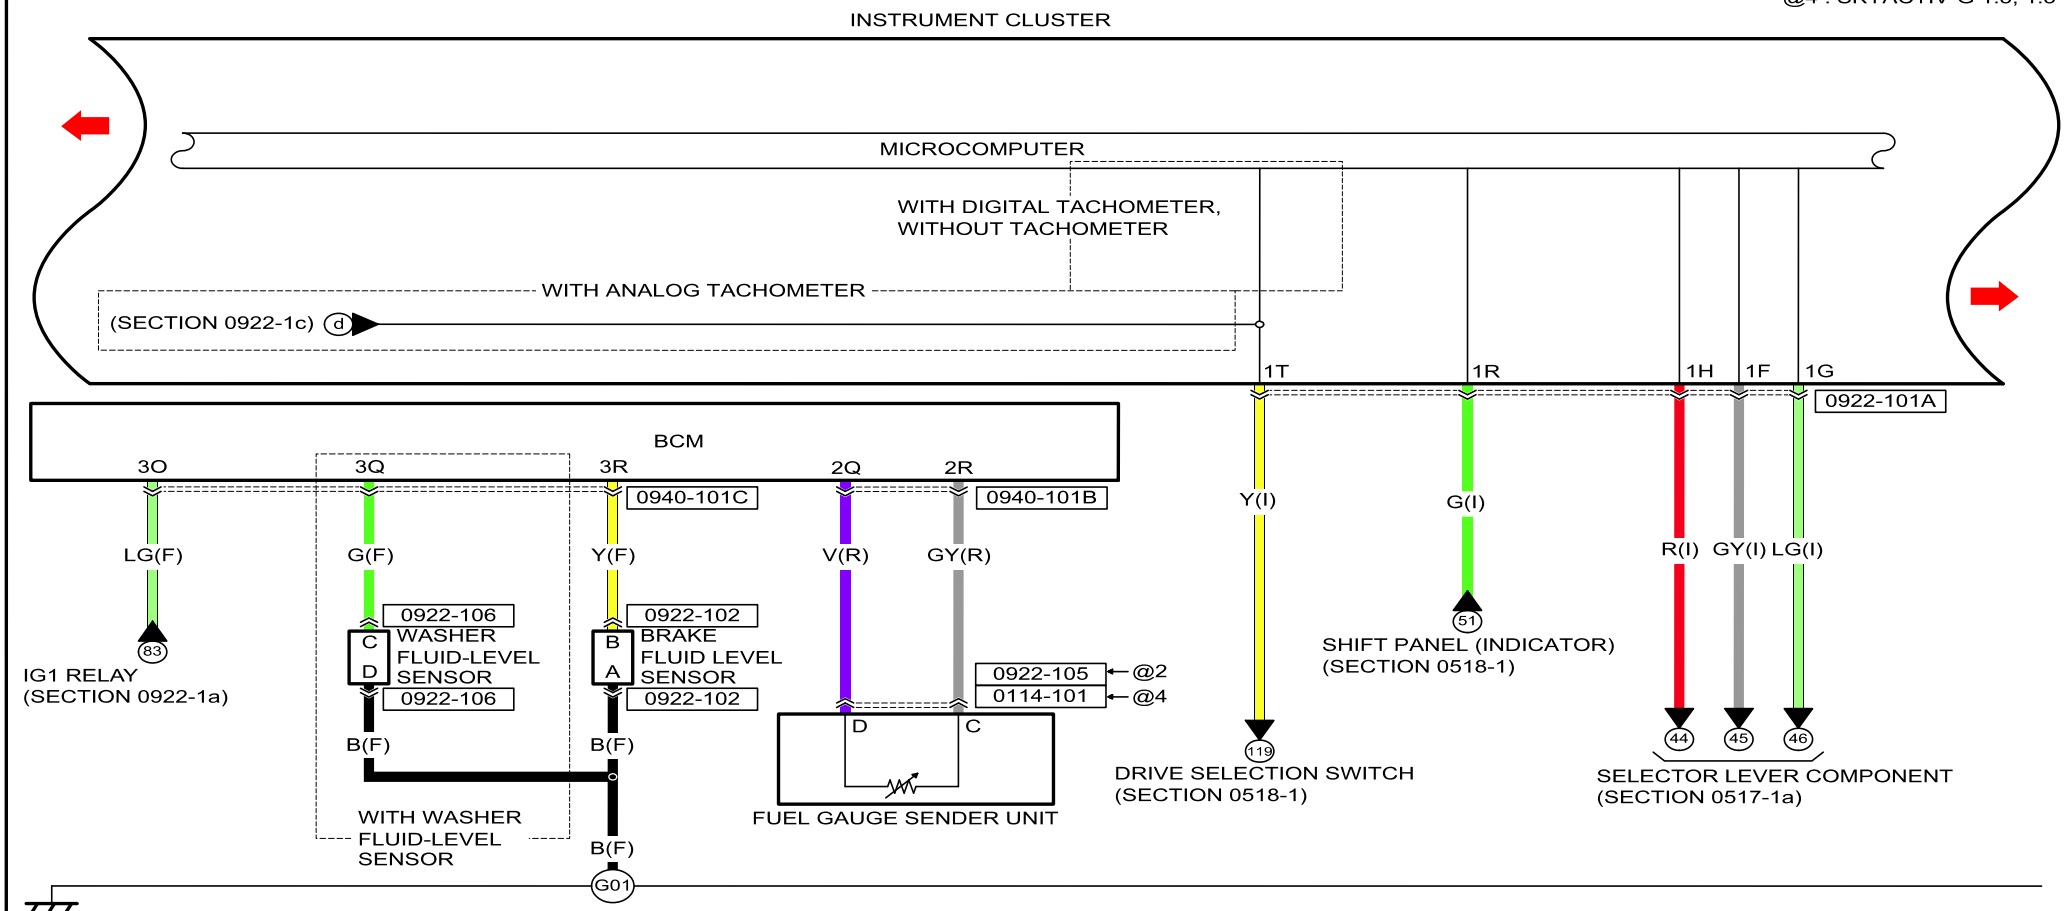


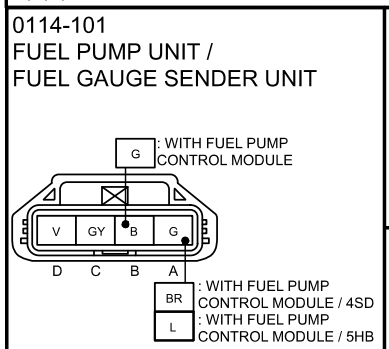

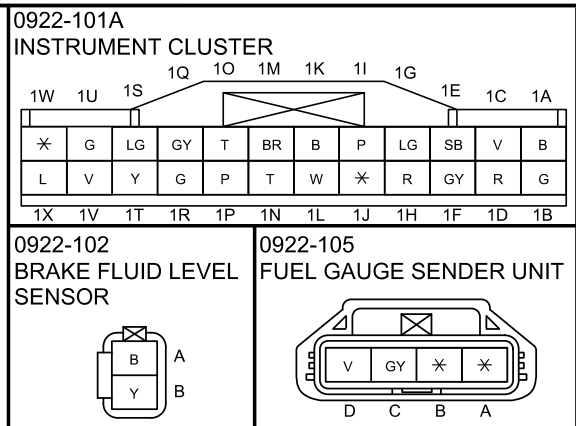


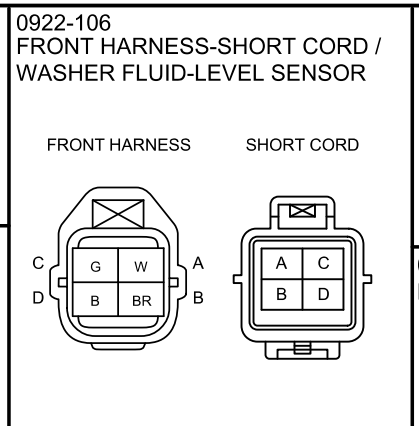

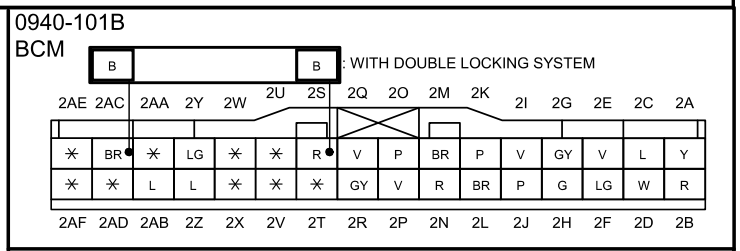

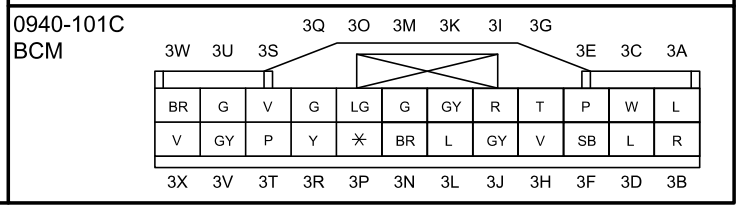

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

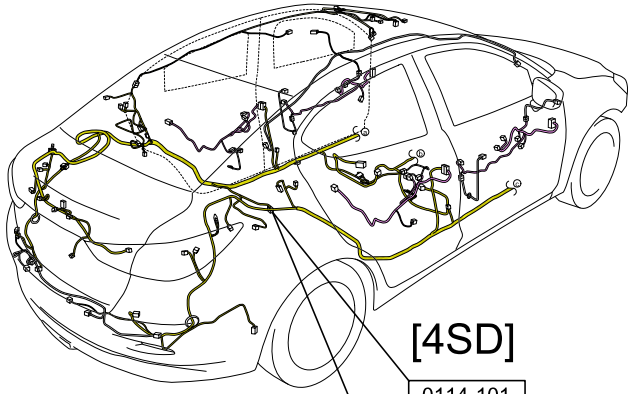



[4SD]

0114-101
FUEL PUMP UNIT /
FUEL GAUGE SENDER UNIT
[BLACK]

0922-105
FUEL GAUGE SENDER UNIT
[BLACK]

INSTRUMENT CLUSTER
0922-101A

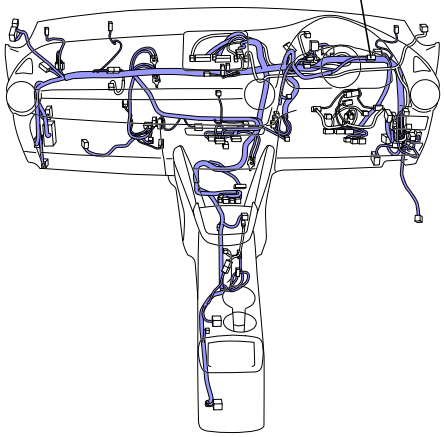

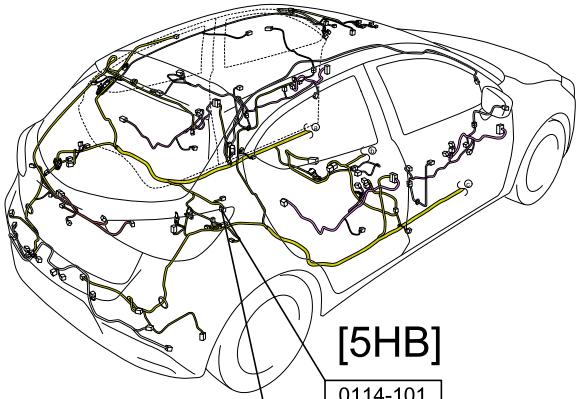


[5HB]

0114-101
FUEL PUMP UNIT /
FUEL GAUGE SENDER UNIT
[BLACK]


0922-105
FUEL GAUGE SENDER UNIT
[BLACK]

BCM
0940-101C

BCM
0940-101B

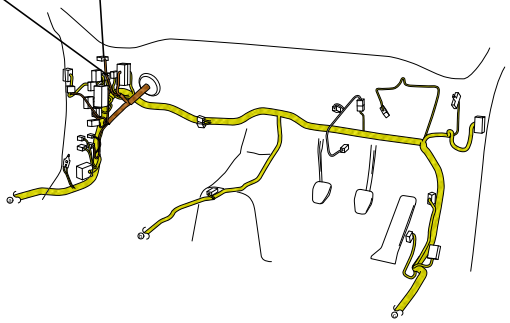


[GRAY]
BRAKE FLUID LEVEL SENSOR
0922-102

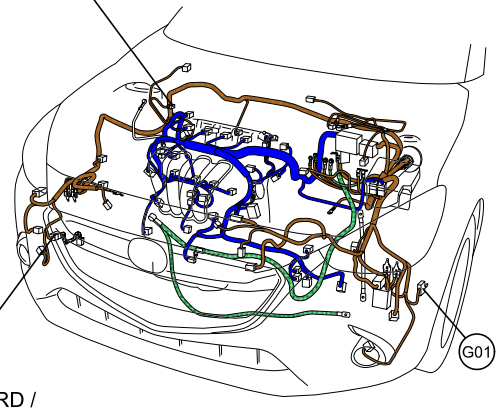

0922-106
(F)-SHORT CORD /
WASHER FLUID-LEVEL SENSOR
(F)[BLACK]

[SKYACTIV-G 1.3, 1.5]

[GRAY]
BRAKE FLUID LEVEL SENSOR
0922-102

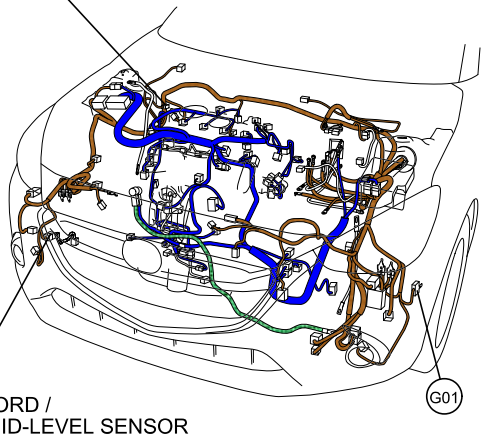

0922-106
(F)-SHORT CORD /
WASHER FLUID-LEVEL SENSOR
(F)[BLACK]

[SKYACTIV-D 1.5]

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: INSTRUMENT PANEL HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS