

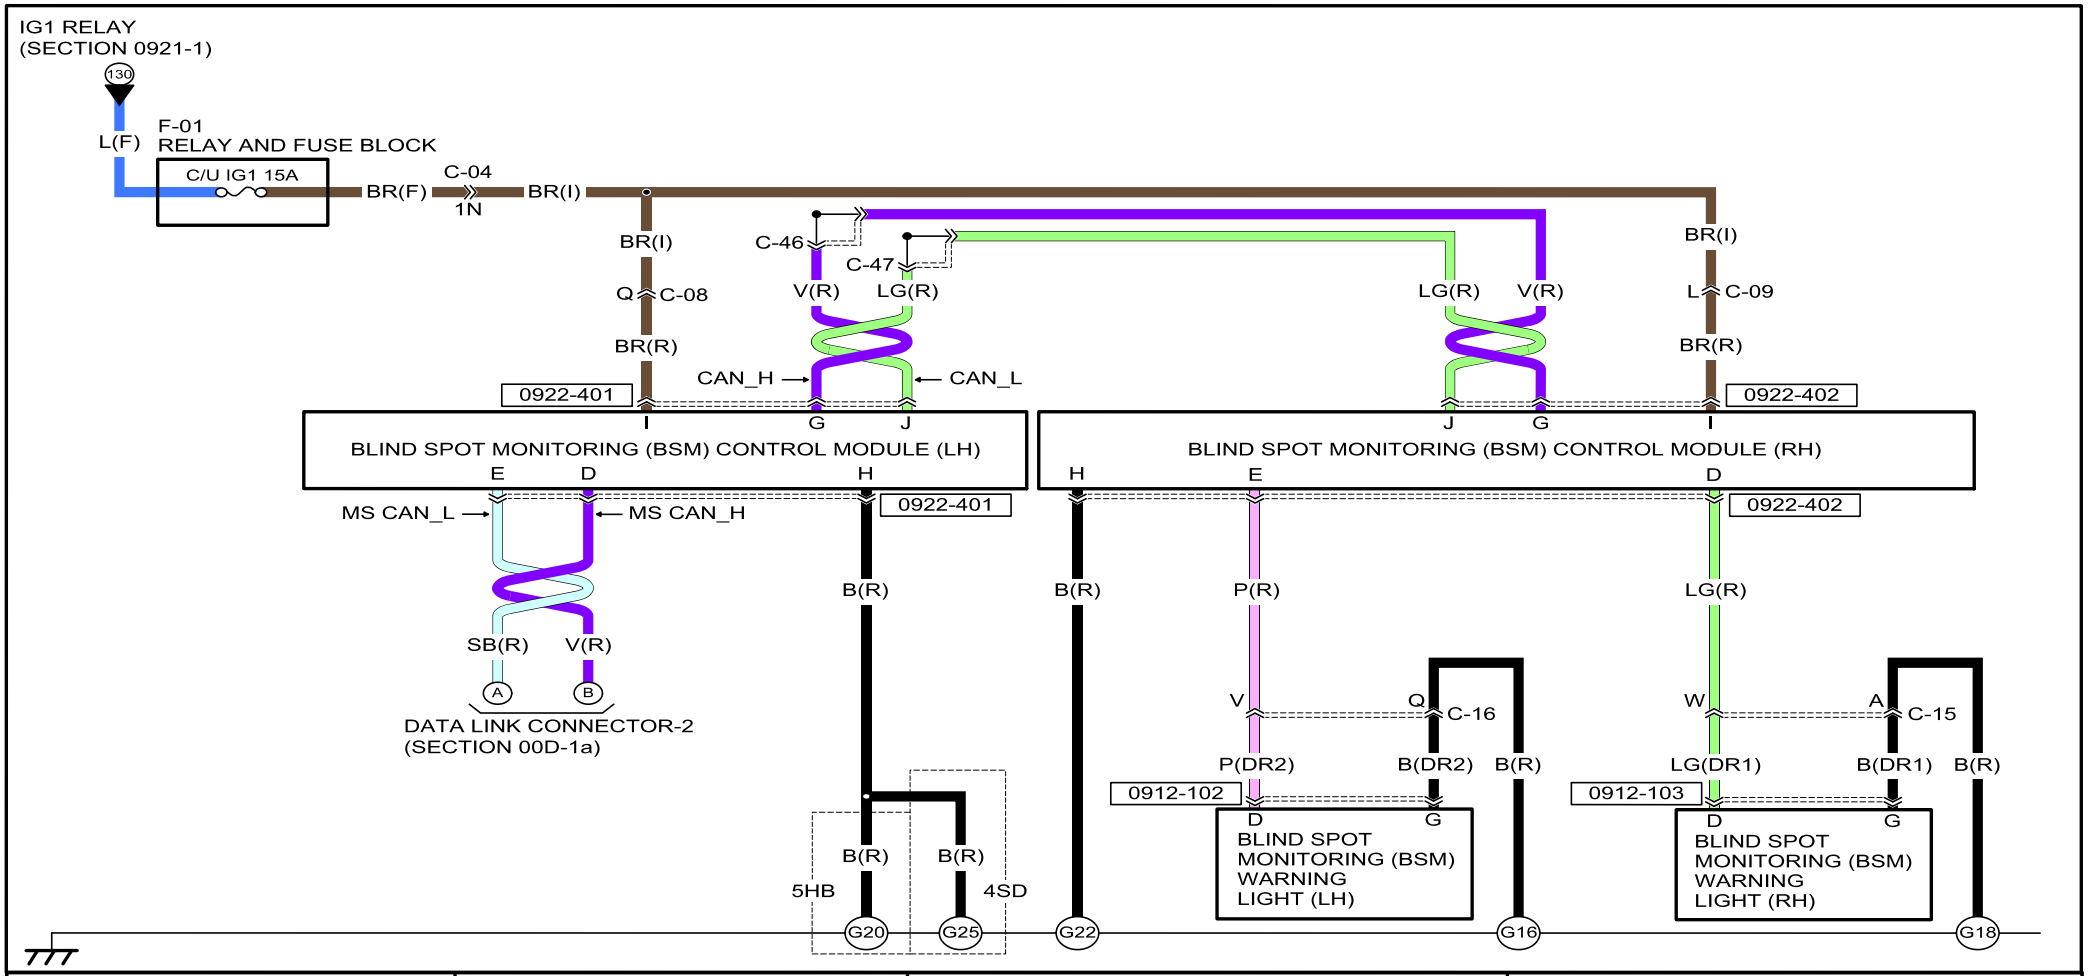



0922-401
BLIND SPOT MONITORING (BSM) CONTROL MODULE (LH)

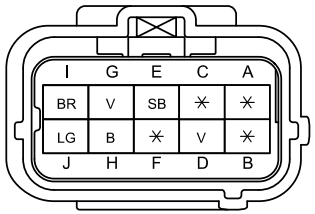


0922-402
BLIND SPOT MONITORING (BSM) CONTROL MODULE (RH)

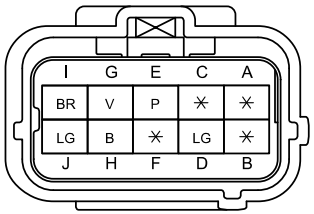

0912-102
HEATED OUTER MIRROR (LH) / RETRACTABLE OUTER MIRROR (LH) / POWER OUTER MIRROR (LH) / DOOR No.2 HARNESS-SHORT CORD / BLIND SPOT MONITORING (BSM) WARNING LIGHT (LH)

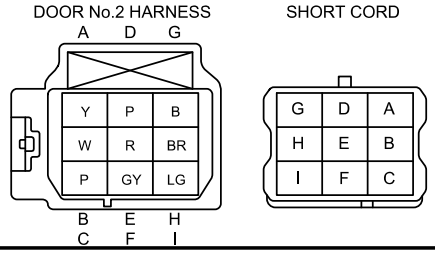

0912-103
HEATED OUTER MIRROR (RH) / RETRACTABLE OUTER MIRROR (RH) / POWER OUTER MIRROR (RH) / DOOR No.1 HARNESS-SHORT CORD / BLIND SPOT MONITORING (BSM) WARNING LIGHT (RH)

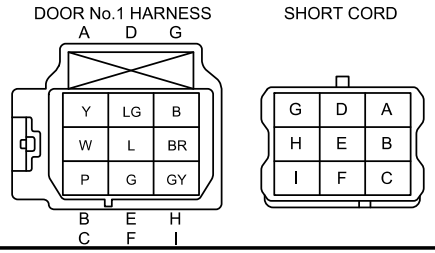

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

HEATED OUTER MIRROR (LH) /
RETRACTABLE OUTER MIRROR (LH) /
POWER OUTER MIRROR (LH) /
DOOR No.2 HARNESS-SHORT CORD /
BLIND SPOT MONITORING (BSM) WARNING LIGHT (LH)

0912-102

(R)-(DR2)
C-16

HEATED OUTER MIRROR (RH) /
RETRACTABLE OUTER MIRROR (RH) /
POWER OUTER MIRROR (RH) /
DOOR No.1 HARNESS-SHORT CORD /
BLIND SPOT MONITORING (BSM)
WARNING LIGHT (RH)

0912-103

(R)-(DR1)
C-15

G25

G22

[4SD]

0922-402

BLIND SPOT MONITORING (BSM) CONTROL MODULE (RH)

0922-401

BLIND SPOT MONITORING (BSM) CONTROL MODULE (LH)

[GRAY]
(F)-(I)
C-04

C-08
(I)-(R)

C-09
(I)-(R)

BLIND SPOT MONITORING
(BSM) CONTROL MODULE (LH)

0922-401

HEATED OUTER MIRROR (LH) /
RETRACTABLE OUTER MIRROR (LH) /
POWER OUTER MIRROR (LH) /
DOOR No.2 HARNESS-SHORT CORD /
BLIND SPOT MONITORING (BSM) WARNING LIGHT (LH)

0912-102

(R)-(DR2)
C-16

G20

G22

C-15
(R)-(DR1)

[5HB]

0912-103

HEATED OUTER MIRROR (RH) /
RETRACTABLE OUTER MIRROR (RH) /
POWER OUTER MIRROR (RH) /
DOOR No.1 HARNESS-SHORT CORD /
BLIND SPOT MONITORING (BSM) WARNING LIGHT (RH)

0922-402

BLIND SPOT MONITORING
(BSM) CONTROL MODULE (RH)

JOINT CONNECTOR
C-46

JOINT CONNECTOR
C-47

[GRAY]
(F)-(I)
C-04

(R)-(DR2)
C-16

G18

C-15
(R)-(DR1)

C-08
(I)-(R)

G16

C-09
(I)-(R)

: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: INSTRUMENT PANEL HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS

RELAY AND FUSE BLOCK
(REFER TO 00F SECTION)
F-01

[SKYACTIV-G 1.3, 1.5]

RELAY AND FUSE BLOCK
(REFER TO 00F SECTION)
F-01

[SKYACTIV-D 1.5]