

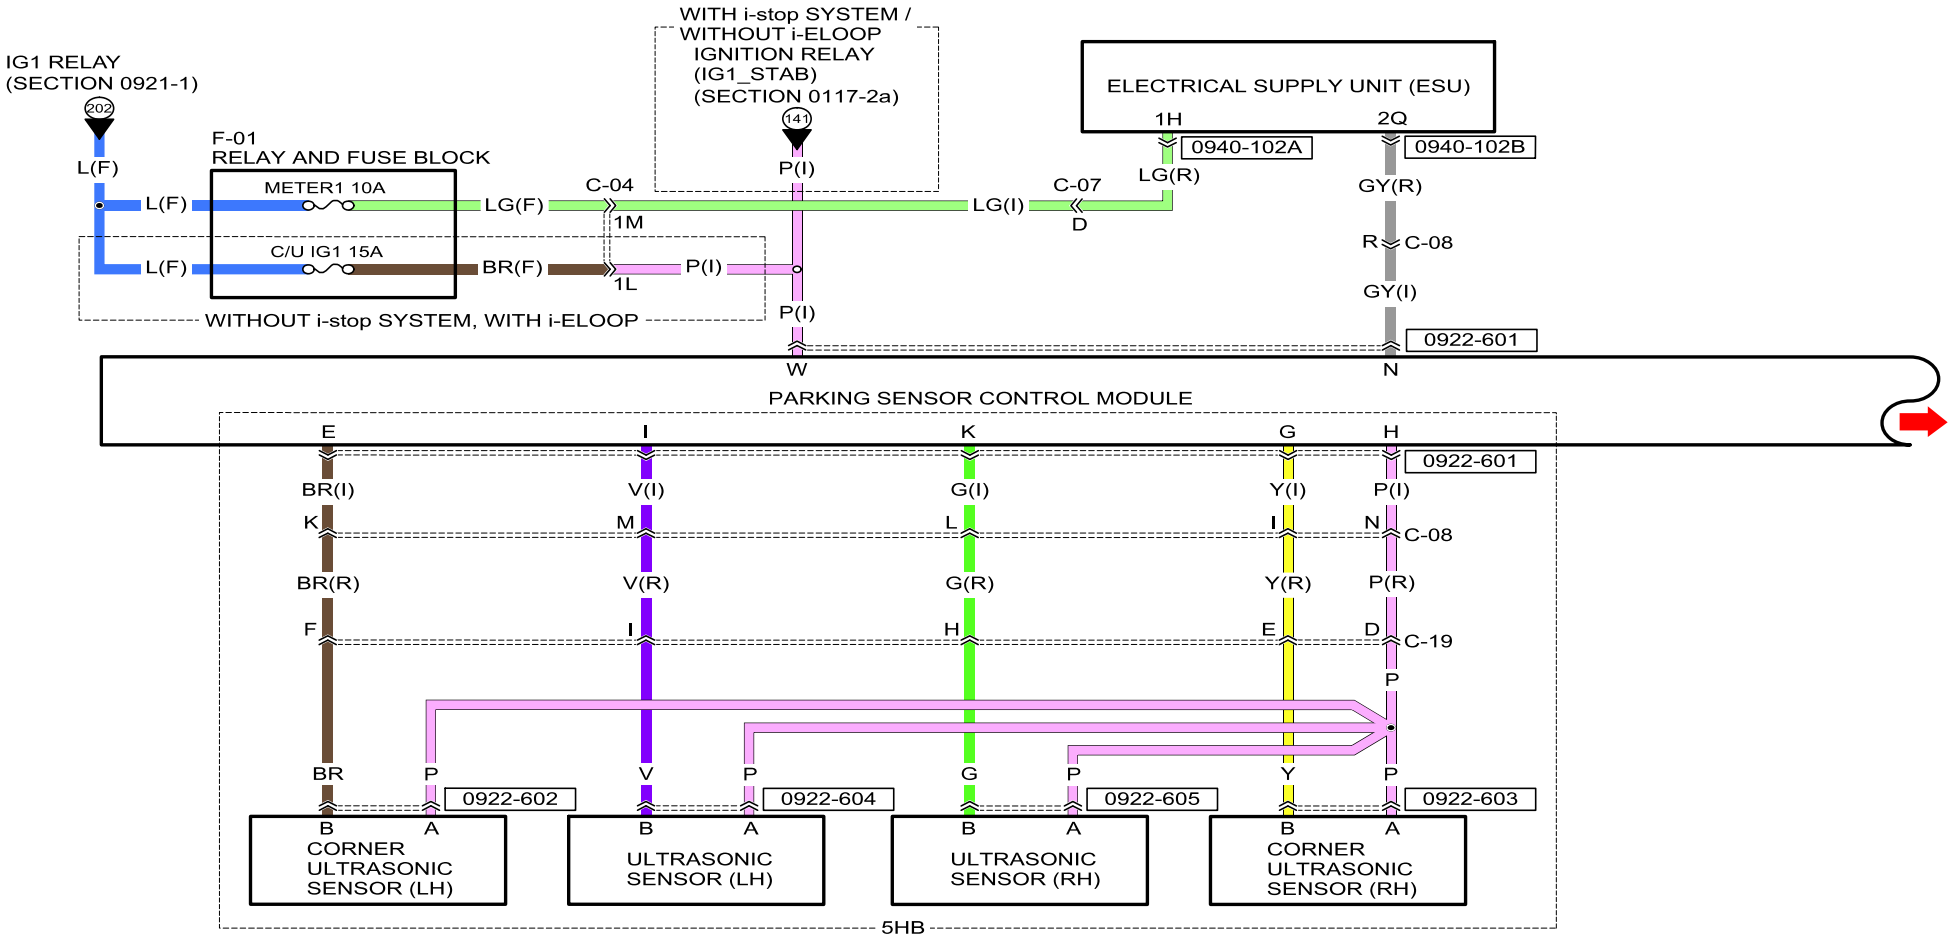



0922-601
PARKING SENSOR CONTROL MODULE

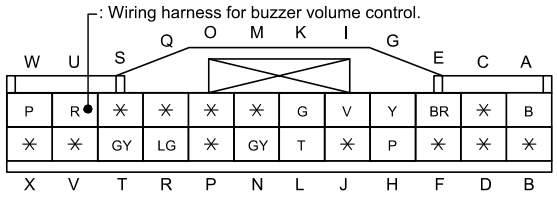


0922-602
CORNER ULTRASONIC SENSOR (LH)




0922-603
CORNER ULTRASONIC SENSOR (RH)




0940-102A
ELECTRICAL SUPPLY UNIT (ESU)

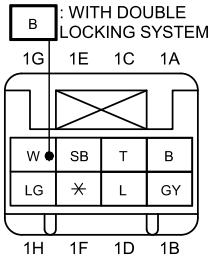

0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

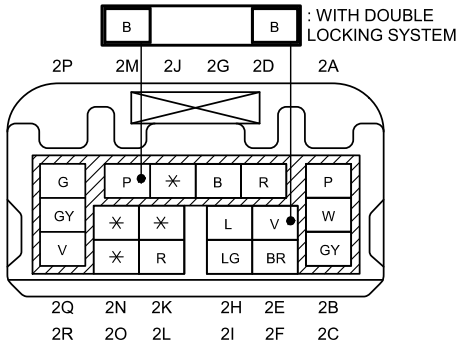


0922-604
ULTRASONIC SENSOR (LH)



0922-605
ULTRASONIC SENSOR (RH)



Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

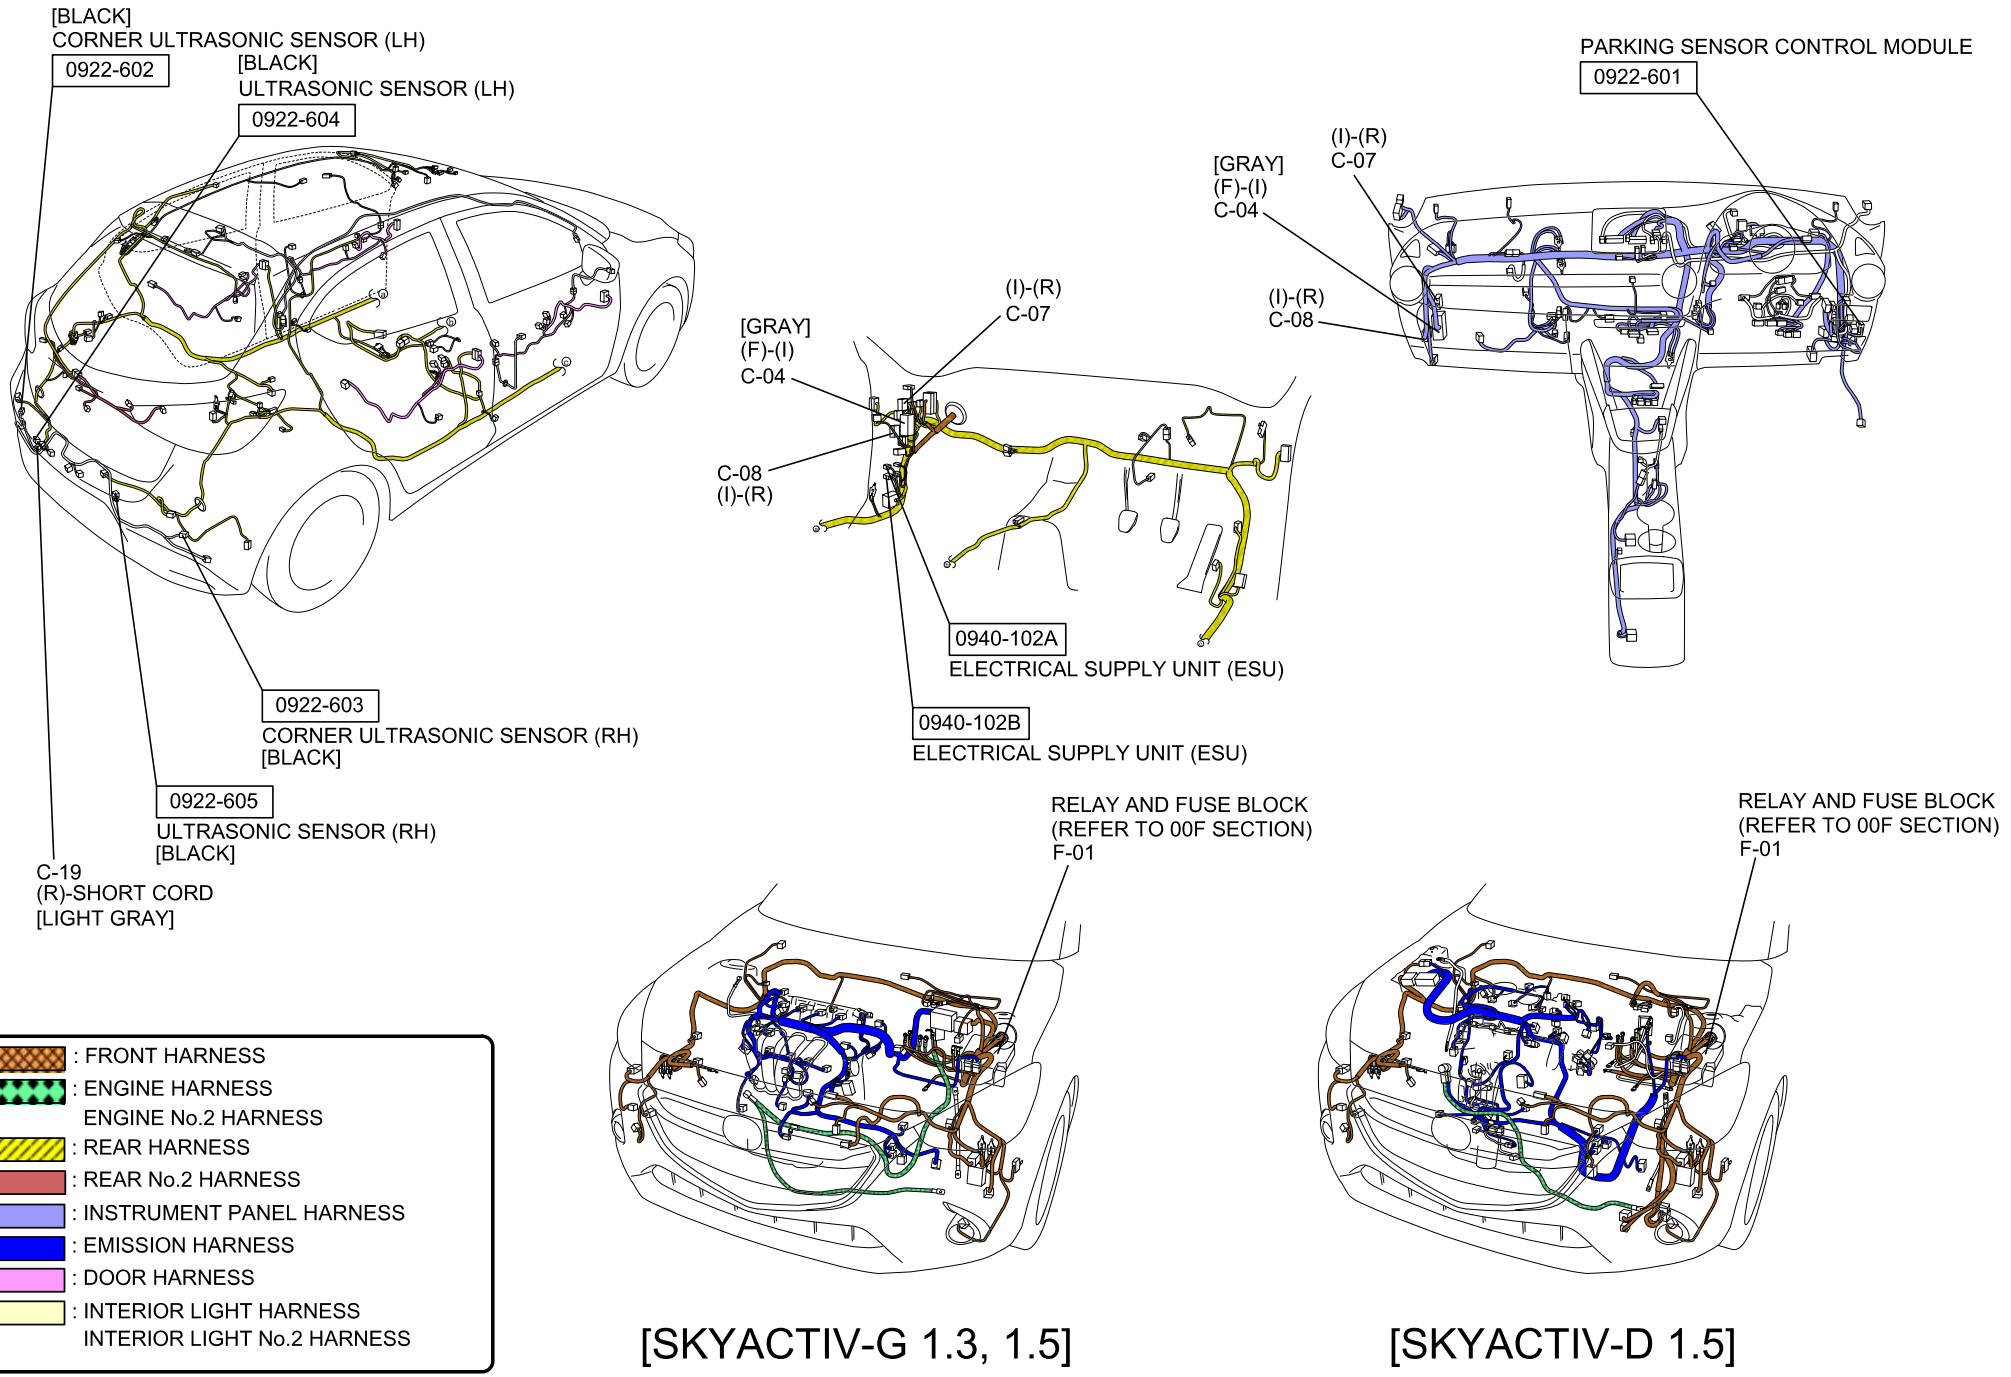
[BLACK]
CORNER ULTRASONIC SENSOR (LH)
0922-602
[BLACK]
ULTRASONIC SENSOR (LH)
0922-604
0922-603
CORNER ULTRASONIC SENSOR (RH)
[BLACK]
0922-605
ULTRASONIC SENSOR (RH)
[BLACK]
C-19
(R)-SHORT CORD
[LIGHT GRAY]
PARKING SENSOR CONTROL MODULE
0922-601
[GRAY]
(F)-(I)
C-04
(I)-(R)
C-07
(I)-(R)
C-08
[GRAY]
(F)-(I)
C-04
(I)-(R)
C-07
C-08
(I)-(R)
0940-102A
ELECTRICAL SUPPLY UNIT (ESU)
0940-102B
ELECTRICAL SUPPLY UNIT (ESU)
RELAY AND FUSE BLOCK
(REFER TO 00F SECTION)
F-01
RELAY AND FUSE BLOCK
(REFER TO 00F SECTION)
F-01
: FRONT HARNESS
: ENGINE HARNESS
ENGINE No.2 HARNESS
: REAR HARNESS
: REAR No.2 HARNESS
: INSTRUMENT PANEL HARNESS
: EMISSION HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS
[SKYACTIV-G 1.3, 1.5]
[SKYACTIV-D 1.5]