
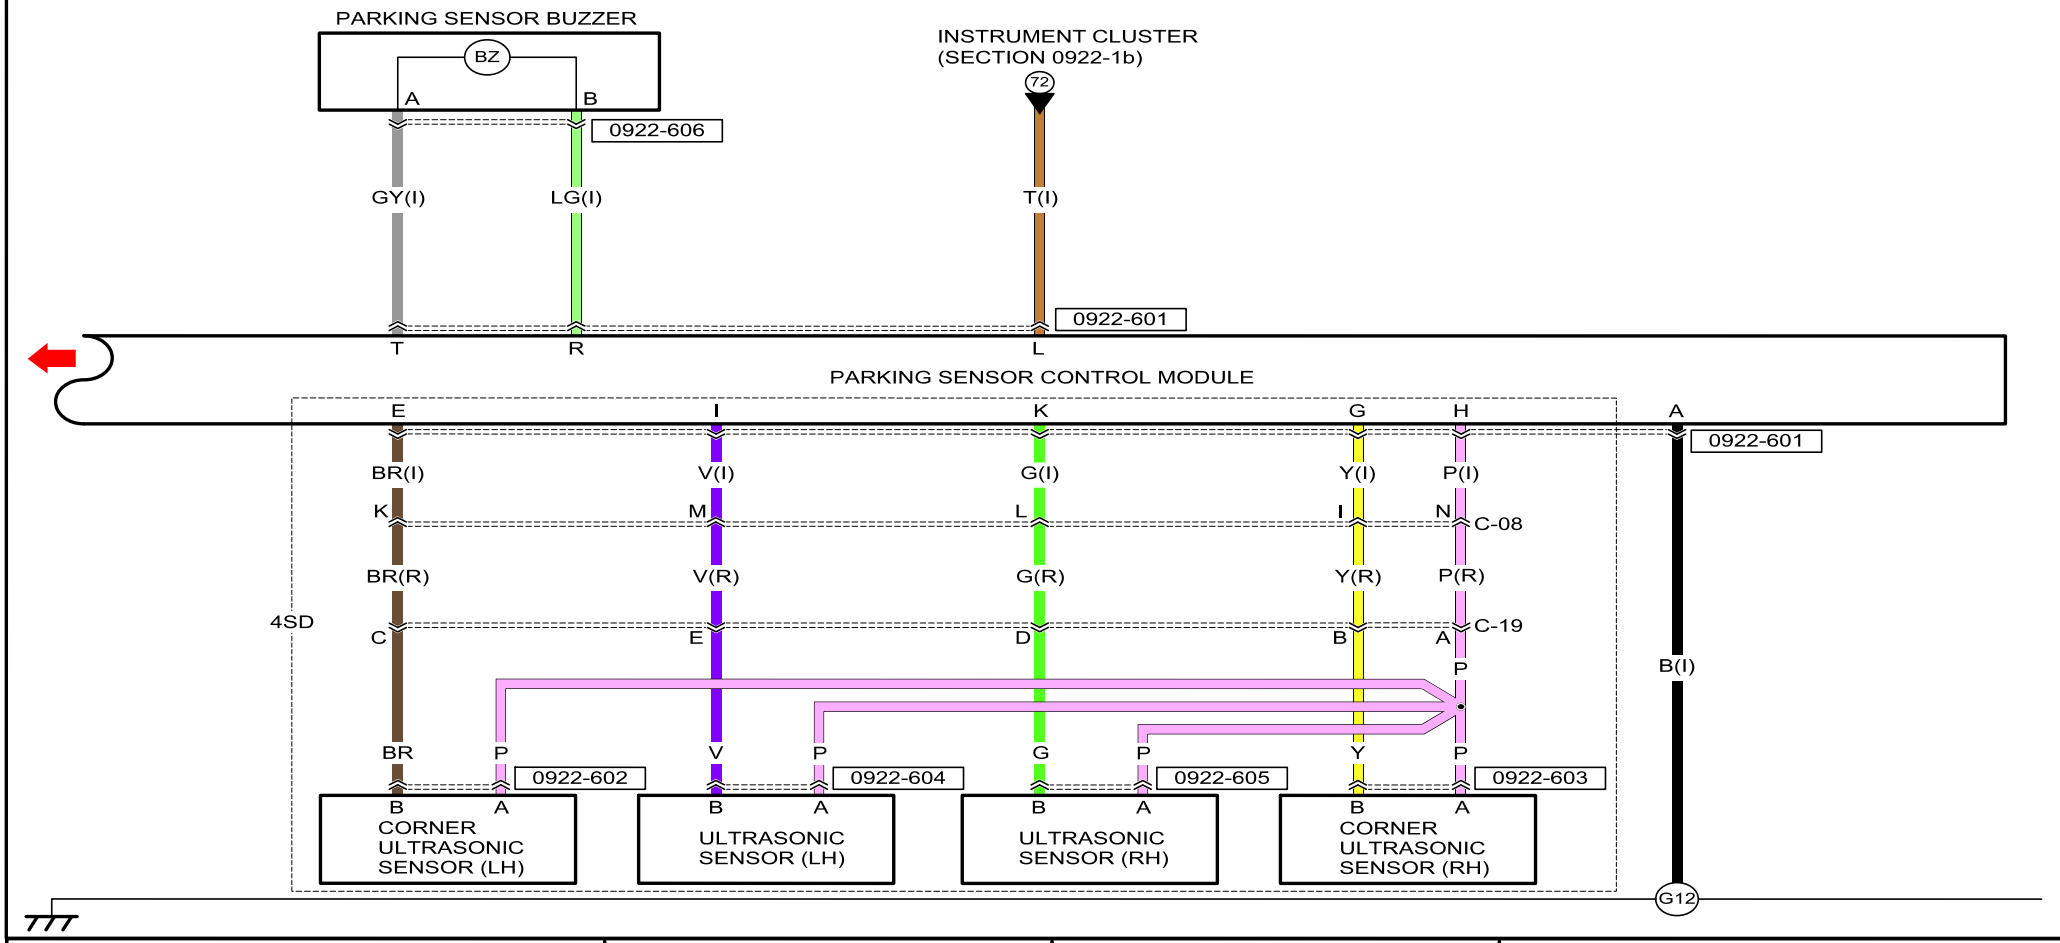


0922-601
PARKING SENSOR CONTROL MODULE


: Wiring harness for buzzer volume control.

W	U	S	Q	O	M	K	I	G	E	C	A
P	R	✳	✳	✳	✳	G	V	Y	BR	✳	B
✳	✳	GY	LG	✳	GY	T	✳	P	✳	✳	✳
X	V	T	R	P	N	L	J	H	F	D	B

0922-602
CORNER ULTRASONIC SENSOR (LH)



0922-603
CORNER ULTRASONIC SENSOR (RH)




0922-604
ULTRASONIC SENSOR (LH)




0922-605
ULTRASONIC SENSOR (RH)



0922-606
PARKING SENSOR BUZZER



Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

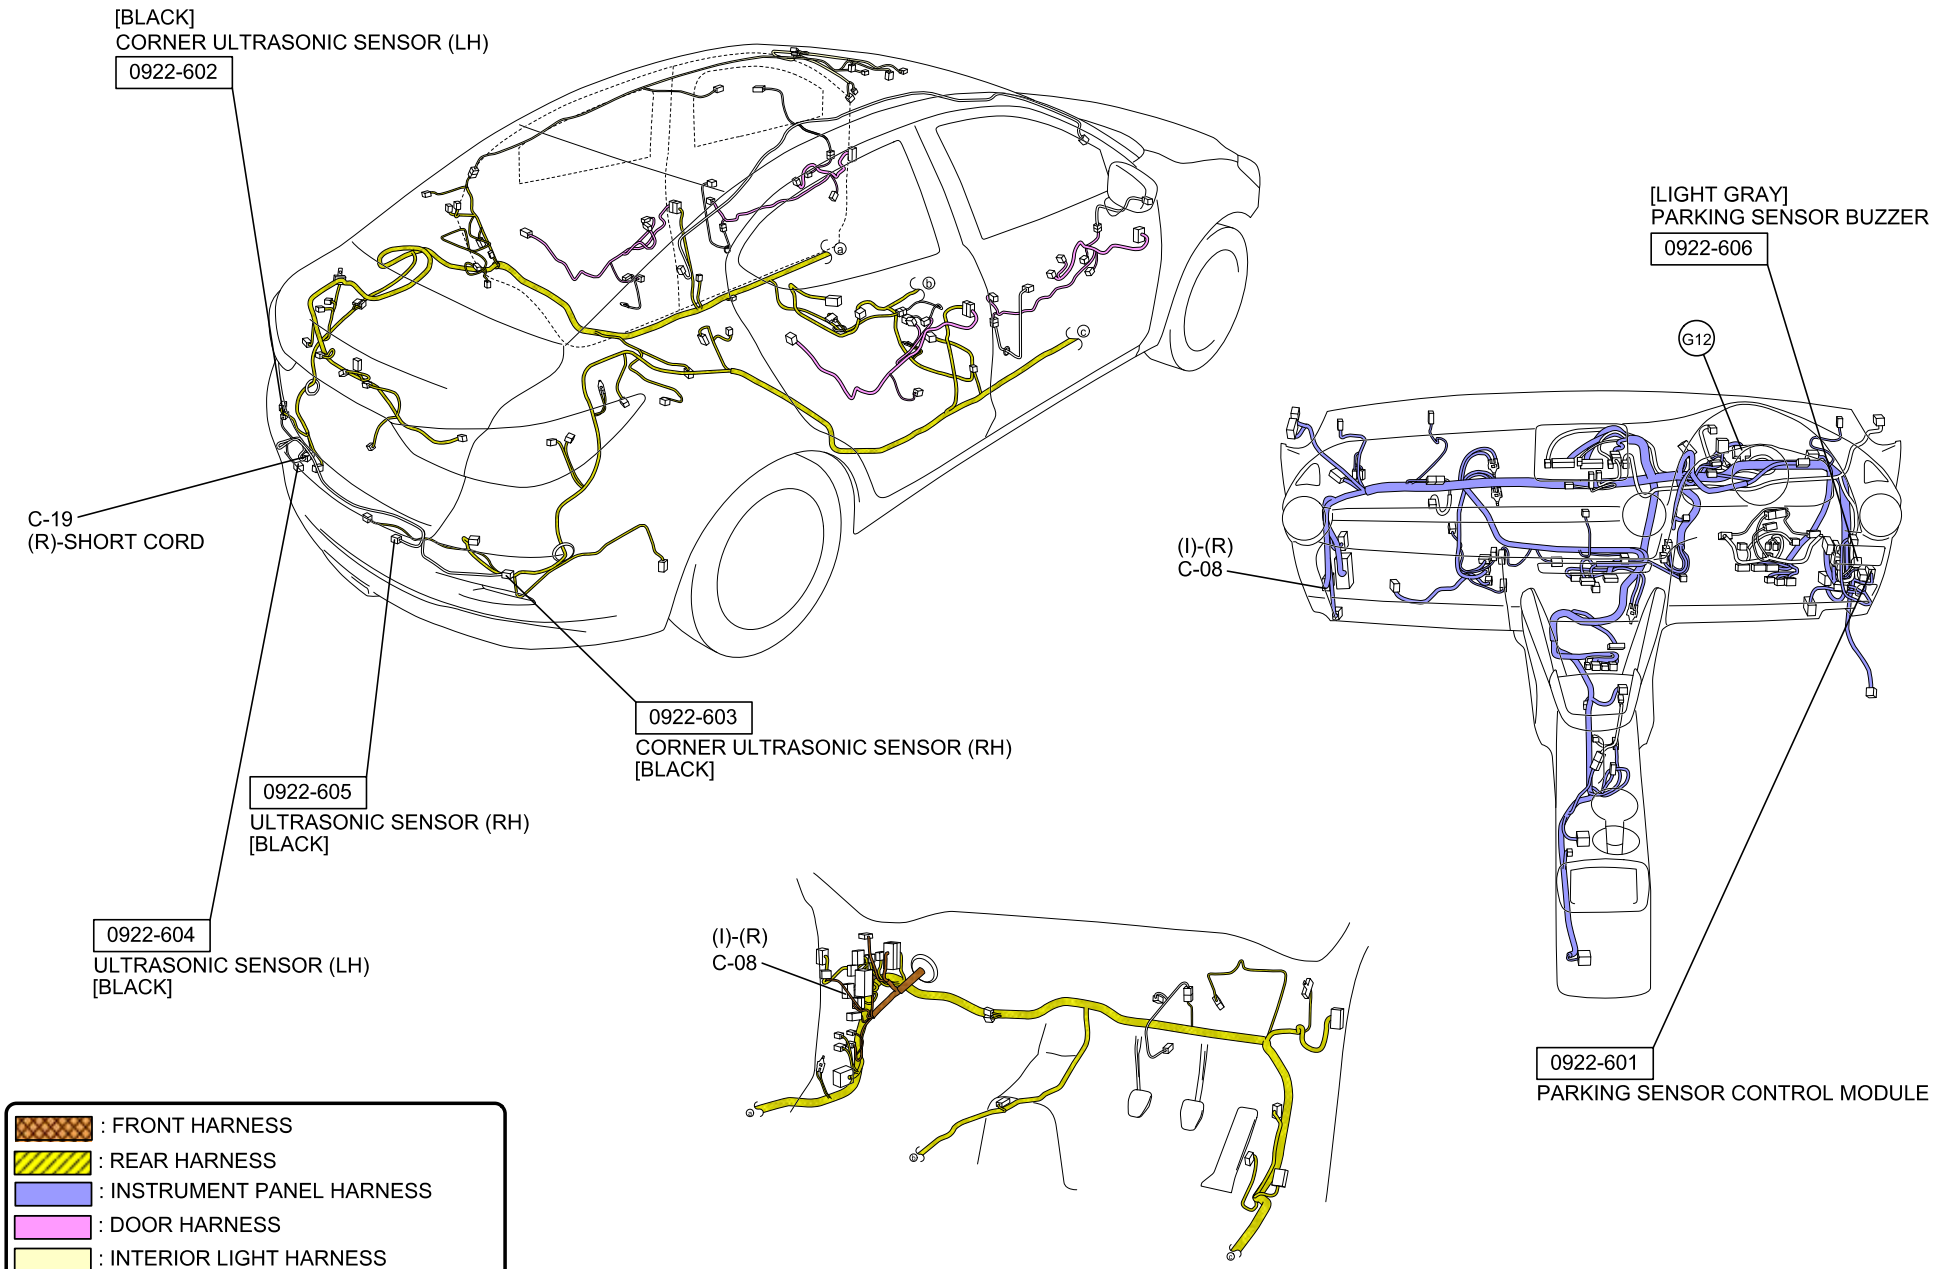
[BLACK]
CORNER ULTRASONIC SENSOR (LH)
0922-602
C-19
(R)-SHORT CORD
0922-603
CORNER ULTRASONIC SENSOR (RH)
[BLACK]
0922-605
ULTRASONIC SENSOR (RH)
[BLACK]
0922-604
ULTRASONIC SENSOR (LH)
[BLACK]
[LIGHT GRAY]
PARKING SENSOR BUZZER
0922-606
G12
(I)-(R)
C-08
(I)-(R)
C-08
0922-601
PARKING SENSOR CONTROL MODULE
: FRONT HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS
: DOOR HARNESS
: INTERIOR LIGHT HARNESS
INTERIOR LIGHT No.2 HARNESS