


0940-1a

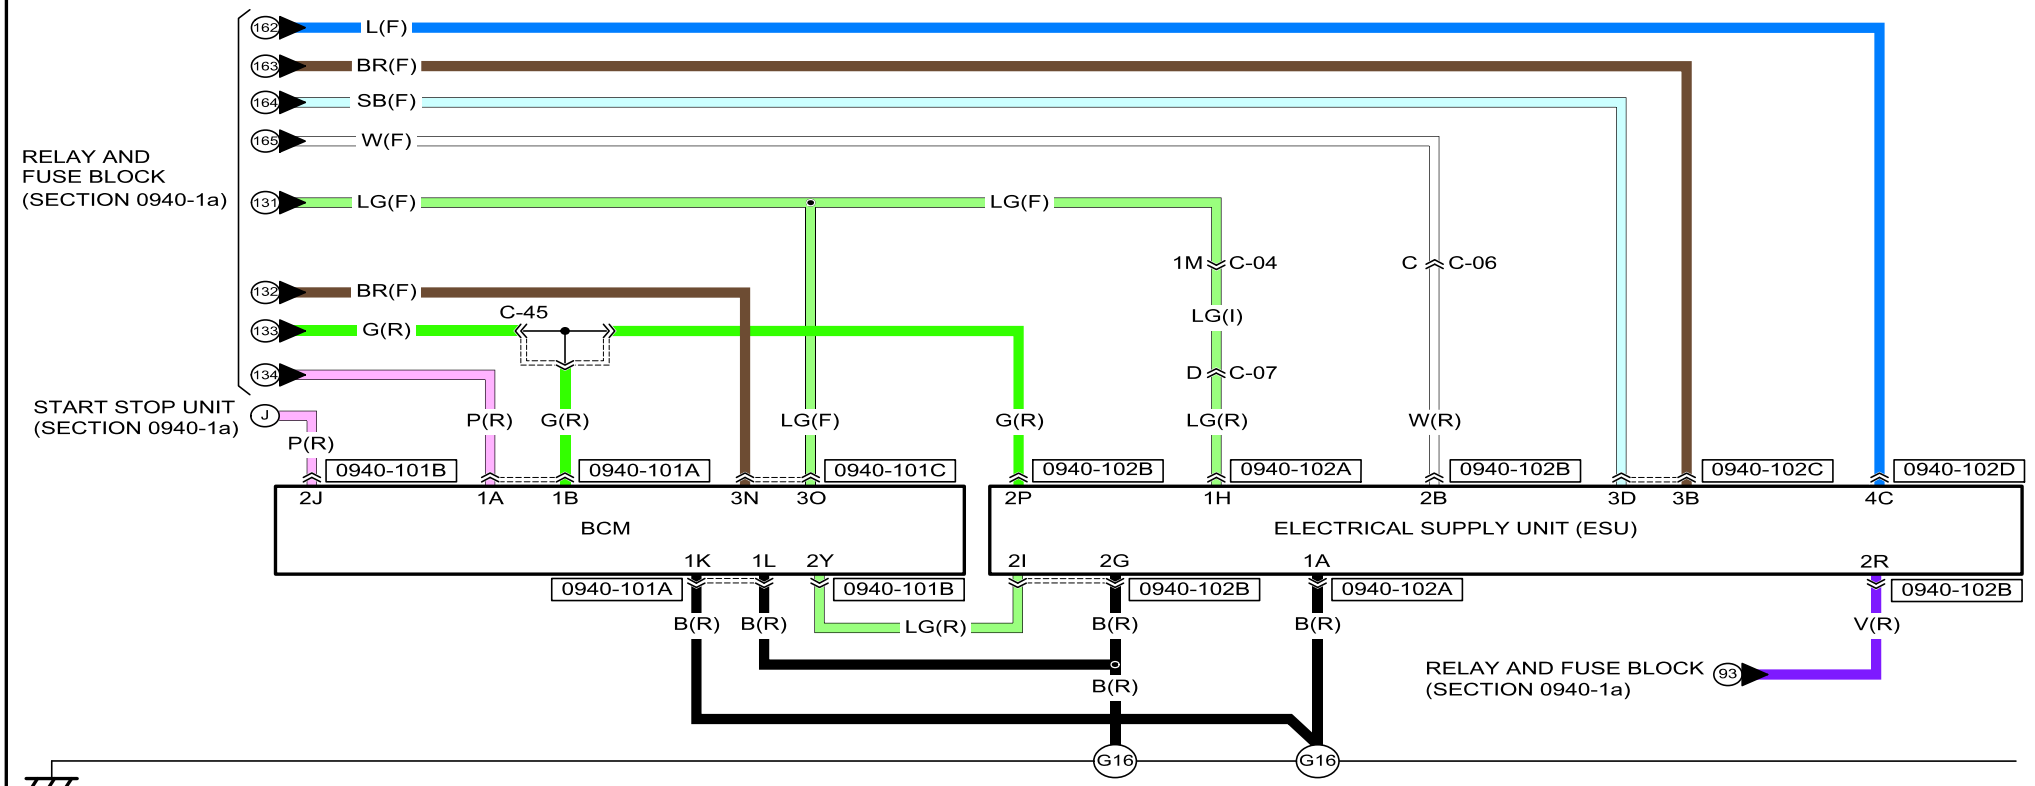


0940-101A
BCM

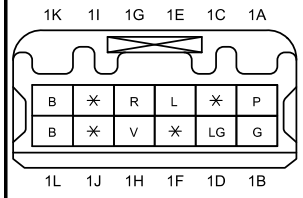


0940-101B
BCM

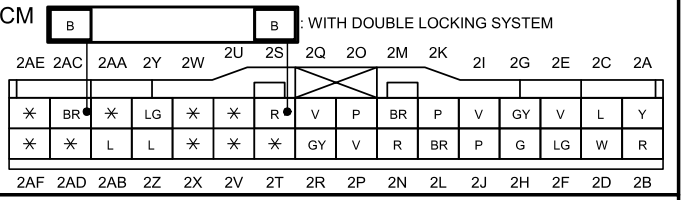


0940-101C
BCM

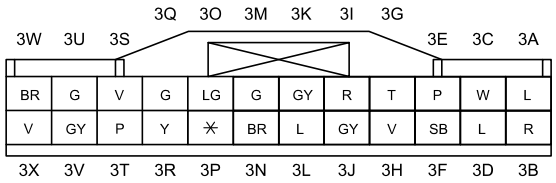


0940-102A
ELECTRICAL SUPPLY UNIT (ESU)

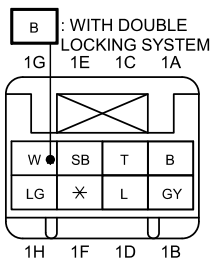


0940-102B
ELECTRICAL SUPPLY UNIT (ESU)

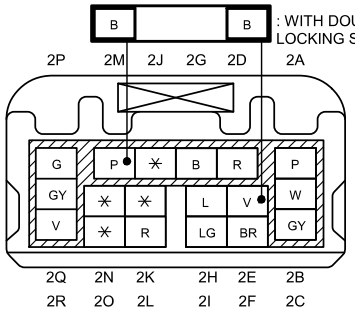


0940-102C
ELECTRICAL SUPPLY UNIT (ESU)

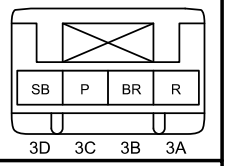


0940-102D
ELECTRICAL SUPPLY UNIT (ESU)

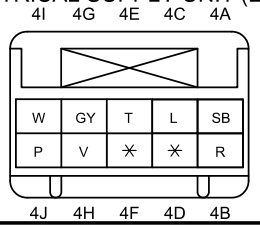

Refer to 00F section for the FUSE BOX, 00C section for the PCM CONNECTOR and COMMON CONNECTOR LIST.

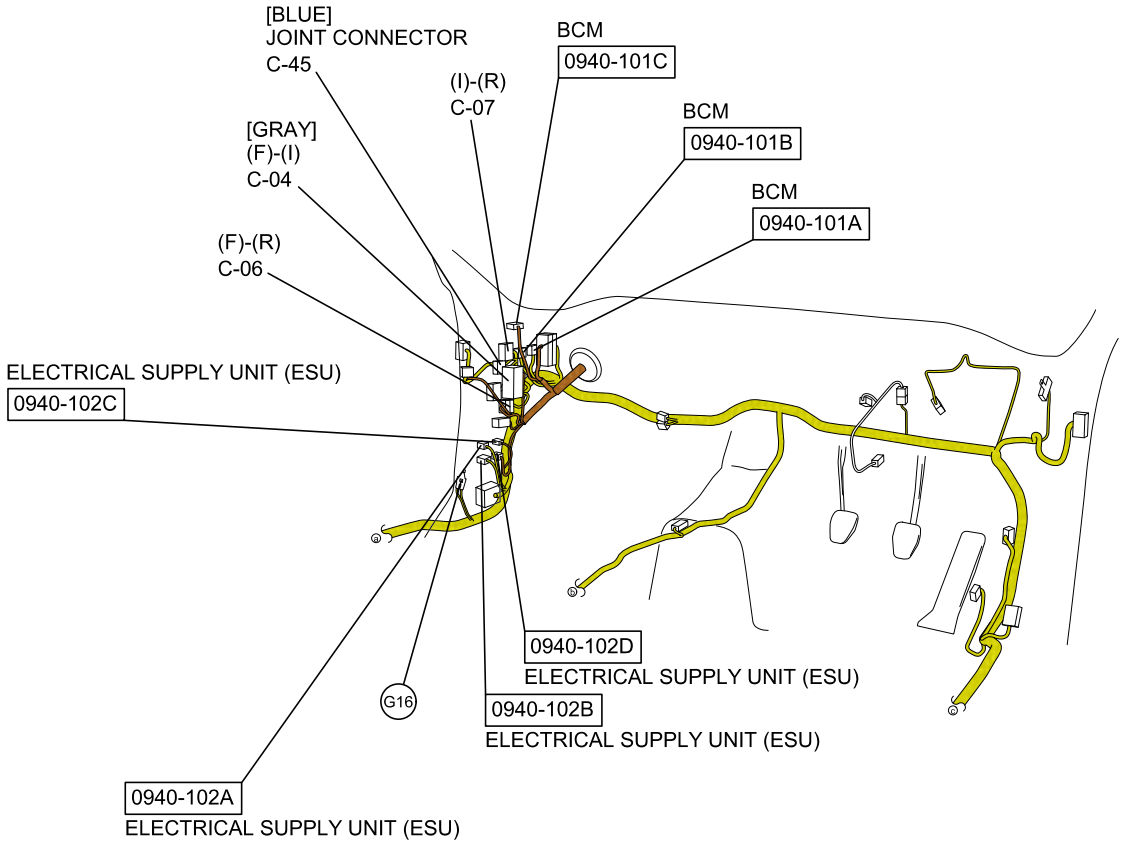

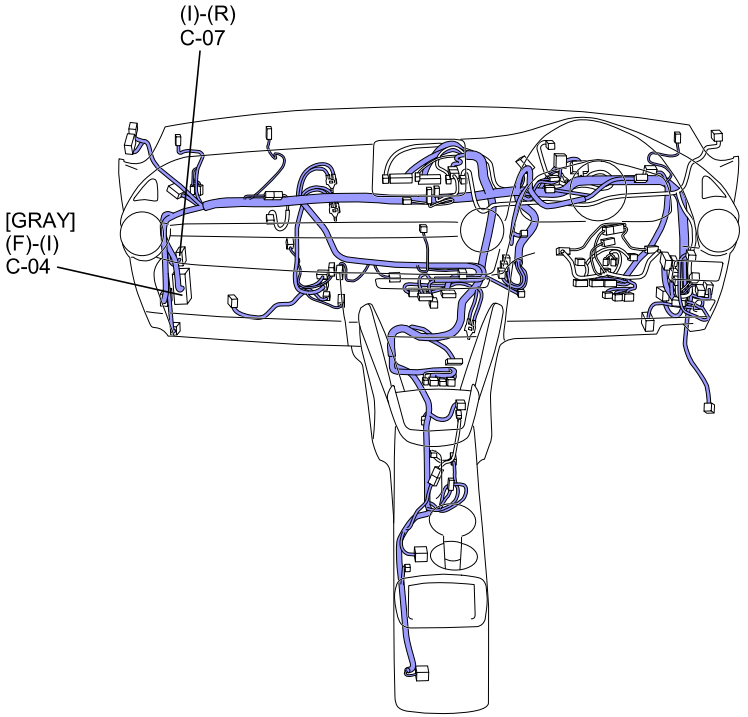

: FRONT HARNESS
: REAR HARNESS
: INSTRUMENT PANEL HARNESS