
## TOWING

id000000800600


- Proper lifting and towing are necessary to prevent damage to the vehicle. Government and local laws must be followed.
- A towed vehicle usually should have its drive wheels (front wheels) off the ground. If excessive damage or other conditions prevent this, use wheel dollies.
- When towing with the rear wheels on the ground, release the parking brake.

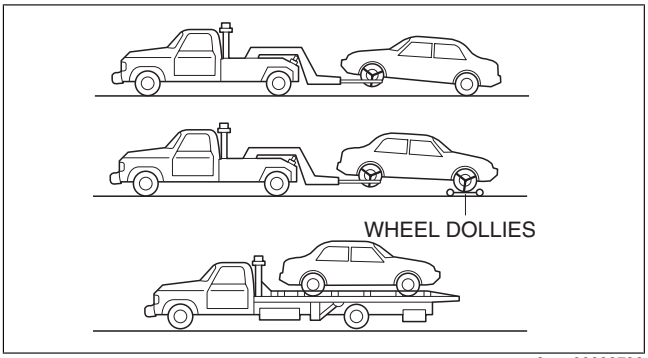


am3zzw00008736


**Caution**

- **Do not tow the vehicle pointed backward with driving wheels on the ground. This may cause internal damage to the transaxle.**

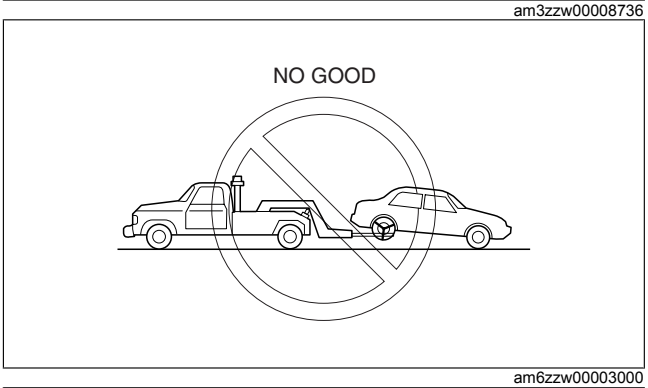


am6zzw00003000

- **Do not tow with sling-type equipment. This could damage your vehicle. Use wheel-lift or flatbed equipment.**

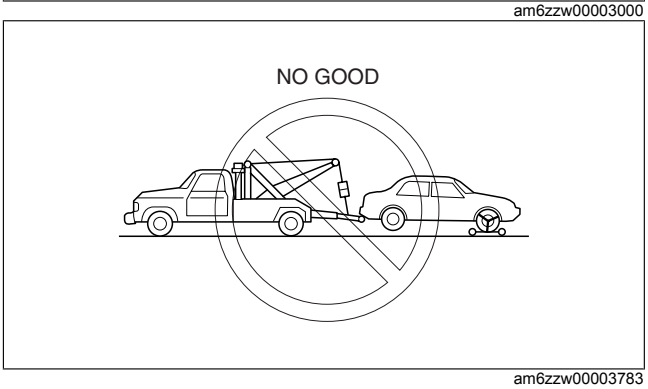


am6zzw00003783

- If towing service is not available in an emergency, the vehicle may be towed with all four wheels on the ground using the towing hook at the front of the vehicle.
  Only tow the vehicle on paved surfaces for short distance at low speeds.

**Caution**

- **Follow these instruction when towing the vehicle with all wheels on the ground.**
  1. **Shift to neutral (MTX), or the N position (ATX).**
  2. **Switch the ignition to ACC.**
  3. **Release the parking break.**
- **Remember that power assist for the brakes and steering will not be available when the engine is not running.**

### Towing Hooks


**Caution**

- **The towing eyelet should be used in an emergency (to get the vehicle out of a ditch or a snow bank, for example).**
- **When using the towing eyelets, always pull the lead or chain in a straight direction with respect to the eyelet. Never apply a sideways force.**

**Note**

- When towing with chain or lead, wrap the chain or lead with a soft cloth near the bumper to prevent damage to the bumper.
- The towing hook is equipped on the vehicle front side. The hook on the vehicle rear side is for retaining the vehicle during transportation. Do not use it for towing.


1. Wrap a flathead screwdriver or similar tool with a soft cloth to prevent damage to a painted bumper, and open the cap located on the front bumper.

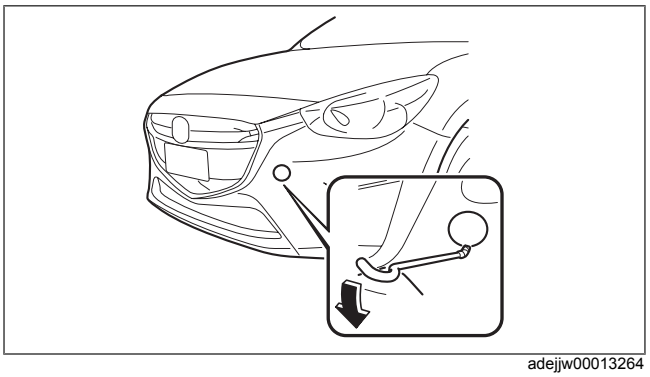
adejjw00013264

**Caution**
- **Do not use excessive force as it may damage the cap or scratch the painted bumper surface.**

**Note**
- Remove the cap completely and store it so as not to lose it.

2. Securely install the towing eyelet using the wheel brace.
3. Hook the towing rope to the towing eyelet.

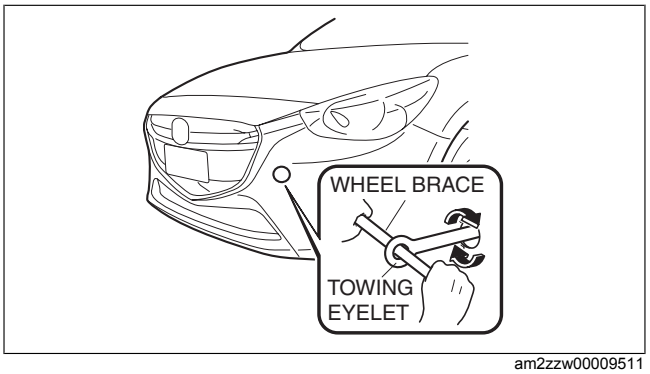

am2zzw00009511

**Caution**
- **If the towing eyelet is not securely tightened, it may loosen or disengage from the bumper when towing the vehicle. Make sure that the towing eyelet is securely tightened to the bumper.**
- **Be careful not to damage the towing eyelet and towing hook, vehicle body, or transaxle system when towing under the following conditions:**
  - **— Do not tow a vehicle heavier than yours.**
  - **— Do not suddenly accelerate your vehicle as it will apply a severe shock to the towing eyelet and towing hook or rope.**
  - **— Do not attach any rope other than to the towing eyelet and towing hook.**