
DTC P025C:00 [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0102q1008400

DTC P025C:00	**Fuel pump control module result of on-board diagnostic test low input**
DETECTION CONDITION	• Result of on-board test cannot be received from fuel pump control module (voltage is too low). **Diagnostic support note** • This is a continuous monitor (CCM). • The check engine light does not illuminate. • FREEZE FRAME DATA is not available. • Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	Not applicable
POSSIBLE CAUSE	• Fuel pump control module connector or terminals malfunction • PCM connector or terminals malfunction • Short to ground in wiring harness between fuel pump control module terminal 1A and PCM terminal 2AM • Open circuit in wiring harness between fuel pump control module terminal 1A and PCM terminal 2AM • Fuel pump control module malfunction • PCM malfunction

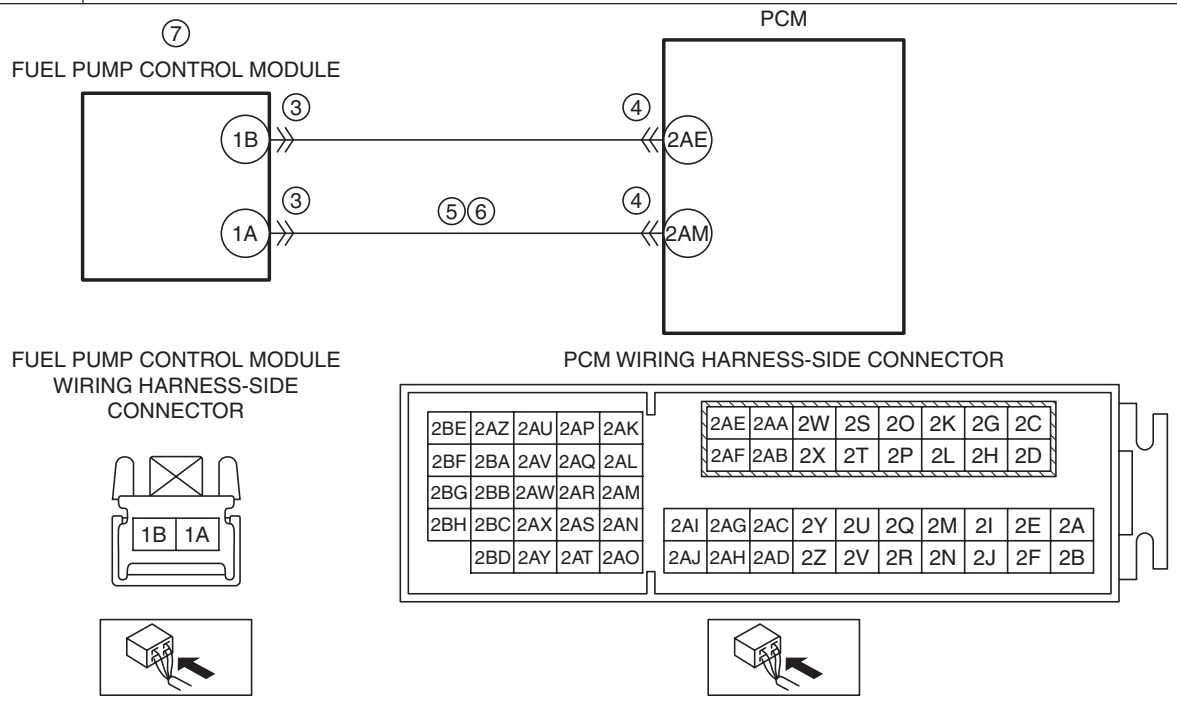

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD VEHICLE STATUS AT TIME OF DTC DETECTION TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the FREEZE FRAME DATA/snapshot data on the repair order.	—	Go to the next step.
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.

STEP	INSPECTION		ACTION
3	**INSPECT FUEL PUMP CONTROL MODULE CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the fuel pump control module connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 8.
		No	Go to the next step.
4	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 8.
		No	Go to the next step.
5	**INSPECT FUEL PUMP CONTROL MODULE SIGNAL CIRCUIT FOR SHORT TO GROUND** • Verify that the fuel pump control module and PCM connectors are disconnected. • Inspect for continuity between fuel pump control module terminal 1A (wiring harness-side) and body ground. • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between fuel pump control module terminal 1A and PCM terminal 2AM. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to Step 8.
		No	Go to the next step.
6	**INSPECT FUEL PUMP CONTROL MODULE SIGNAL CIRCUIT FOR OPEN CIRCUIT** • Verify that the fuel pump control module and PCM connectors are disconnected. • Inspect for continuity between fuel pump control module terminal 1A (wiring harness-side) and PCM terminal 2AM (wiring harness-side). • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between fuel pump control module terminal 1A and PCM terminal 2AM. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 8.
7	**INSPECT FUEL PUMP CONTROL MODULE** • Reconnect all disconnected connectors. • Inspect the fuel pump control module. (See FUEL PUMP CONTROL MODULE INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is there any malfunction?	Yes	Replace the fuel pump control module, then go to the next step. (See FUEL PUMP CONTROL MODULE REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	Go to the next step.
8	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Perform the KOEO or KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) Go to the next step.
		No	Go to the next step.

STEP	INSPECTION		ACTION
9	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	DTC troubleshooting completed.