DTC B10A2:00 [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0102q1215200


Note
- To determine the malfunctioning part, proceed with the diagnostics from “Function Inspection Using M-MDS”.

Details On DTCs

DESCRIPTION	Vehicle collision	
DETECTION CONDITION	Determination conditions	• A collision signal from the SAS control module is received.
	Preconditions	• Not applicable.
	Drive cycle	• 1
	Self test type	• CMDTC self test
	Sensor used	• PCM
FAIL-SAFE FUNCTION	• Stops fuel injection control • Stops fuel pump control • Stops ignition control • Stops engine coolant fan control	
VEHICLE STATUS WHEN DTCs ARE OUTPUT	• Stops fuel pump operation when ignition is switched ON • Delays starter operation during cranking for **maximum 1.2 s**.	
POSSIBLE CAUSE	• Vehicle is involved in collision (collision signal from SAS control module is received) • SAS control module malfunction • PCM malfunction	

System Wiring Diagram
- Not applicable

Function Explanation (DTC Detection Outline)
- During a collision, the SAS control module sends a collision signal to the PCM via the CAN signal. The PCM records a DTC by receiving a collision signal.
- This DTC does not indicate a part malfunction. It indicates operation of fail-safe from safety assurance during a vehicle collision.

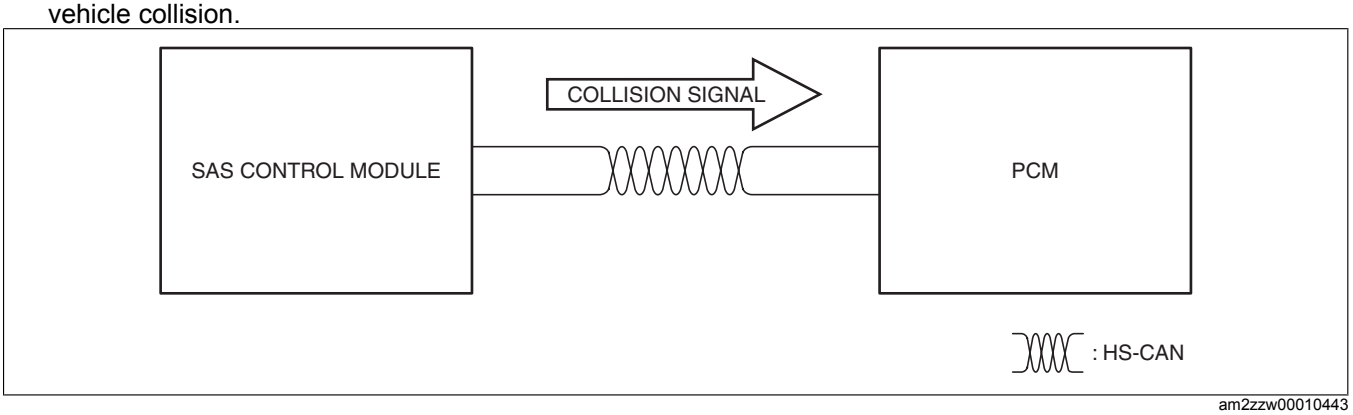

am2zzw00010443

Repeatability Verification Procedure
1. Switch the ignition ON and leave for **5 s or more**.
2. Clear the DTC from the PCM memory using the M-MDS. (See CLEARING DTC [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. After switching the ignition off, switch the ignition back ON and leave for **5 s or more**.
4. Using the M-MDS, display DTCs and verify that DTC U0151:00 is not displayed. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

PID Item/Simulation Item Used In Diagnosis
- Not applicable

Function Inspection Using M-MDS

STEP	INSPECTION	RESULTS	ACTION
1	**PURPOSE: RECORD VEHICLE STATUS AT TIME OF DTC DETECTION TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the snapshot data on the repair order.	—	Go to the next step.
2	**PURPOSE: VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**PURPOSE: VERIFY IF OPERATION IS NORMAL AFTER VEHICLE COLLISION** • Ask customer about vehicle collision experience. • Has the vehicle in for servicing been involved in a collision in which the air bag is deployed?	Yes	Explain to the customer that the DTC is recorded as a result of a vehicle collision. Go to the troubleshooting procedure to perform the procedure from Step 1.
		No	Go to the next step.
4	**PURPOSE: VERIFY IF DIAGNOSTIC RESULT IS AFFECTED BY DTC RELATED TO SAS CONTROL MODULE** • Switch the ignition off, then ON (engine off). • Perform the SAS control module DTC inspection using the M-MDS. (See DTC INSPECTION [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See DTC INSPECTION [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [STANDARD DEPLOYMENT CONTROL SYSTEM].) (See DTC TABLE [TWO-STEP DEPLOYMENT CONTROL SYSTEM].) Go to the troubleshooting procedure to perform the procedure from Step 1.
		No	Go to the troubleshooting procedure to perform the procedure from Step 1.

Troubleshooting Diagnostic Procedure
Intention of troubleshooting procedure

- Step 1—2
  - — Verify that the primary malfunction is resolved and there are no other malfunctions.

STEP	INSPECTION	RESULTS	ACTION
1	**PURPOSE: PERFORM DTC INSPECTION AND VERIFY IF MALFUNCTIONING PART IS PCM** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See CLEARING DTC [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Implement the repeatability verification procedure. (See Repeatability Verification Procedure.) • Perform the DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) Go to the next step.
		No	Go to the next step.
2	**PURPOSE: VERIFY IF THERE IS ANY OTHER MALFUNCTION** • Is any other DTC or pending code stored?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	DTC troubleshooting completed.