
DTC U2300:00 [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0102q1228300

DTC U2300:00	Global central configuration error
DETECTION CONDITION	• Any of following conditions occurs: — No configuration of the instrument cluster. — The configuration signal with the estimated CAN ID is not sent from the instrument cluster. — The configuration signal value sent via CAN from the instrument cluster is unknown or invalid. — The configuration signal value sent via CAN from the instrument cluster is a value other than the estimated value. — The configuration signal value sent via CAN from the instrument cluster does not match the PCM value. **Diagnostic support note** • This is a continuous monitor (other). • The check engine light does not illuminate. • FREEZE FRAME DATA is not available. • Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	• Operates by the previously learned configuration value.
POSSIBLE CAUSE	• CAN drive error (instrument cluster or PCM) • Configuration data for the instrument cluster is incorrectly set • CAN communication line malfunction between instrument cluster and PCM — Instrument cluster terminal 1B—BCM terminal 2D — Instrument cluster terminal 1D—BCM terminal 2C — BCM terminal 3C—PCM terminal 2AK — BCM terminal 3D—PCM terminal 2AL • PCM connector or terminals malfunction • Instrument cluster connector or terminals malfunction • Instrument cluster loose • Instrument cluster malfunction • Error in non-volatile memory in PCM • PCM malfunction

DTC U2300:00	Global central configuration error

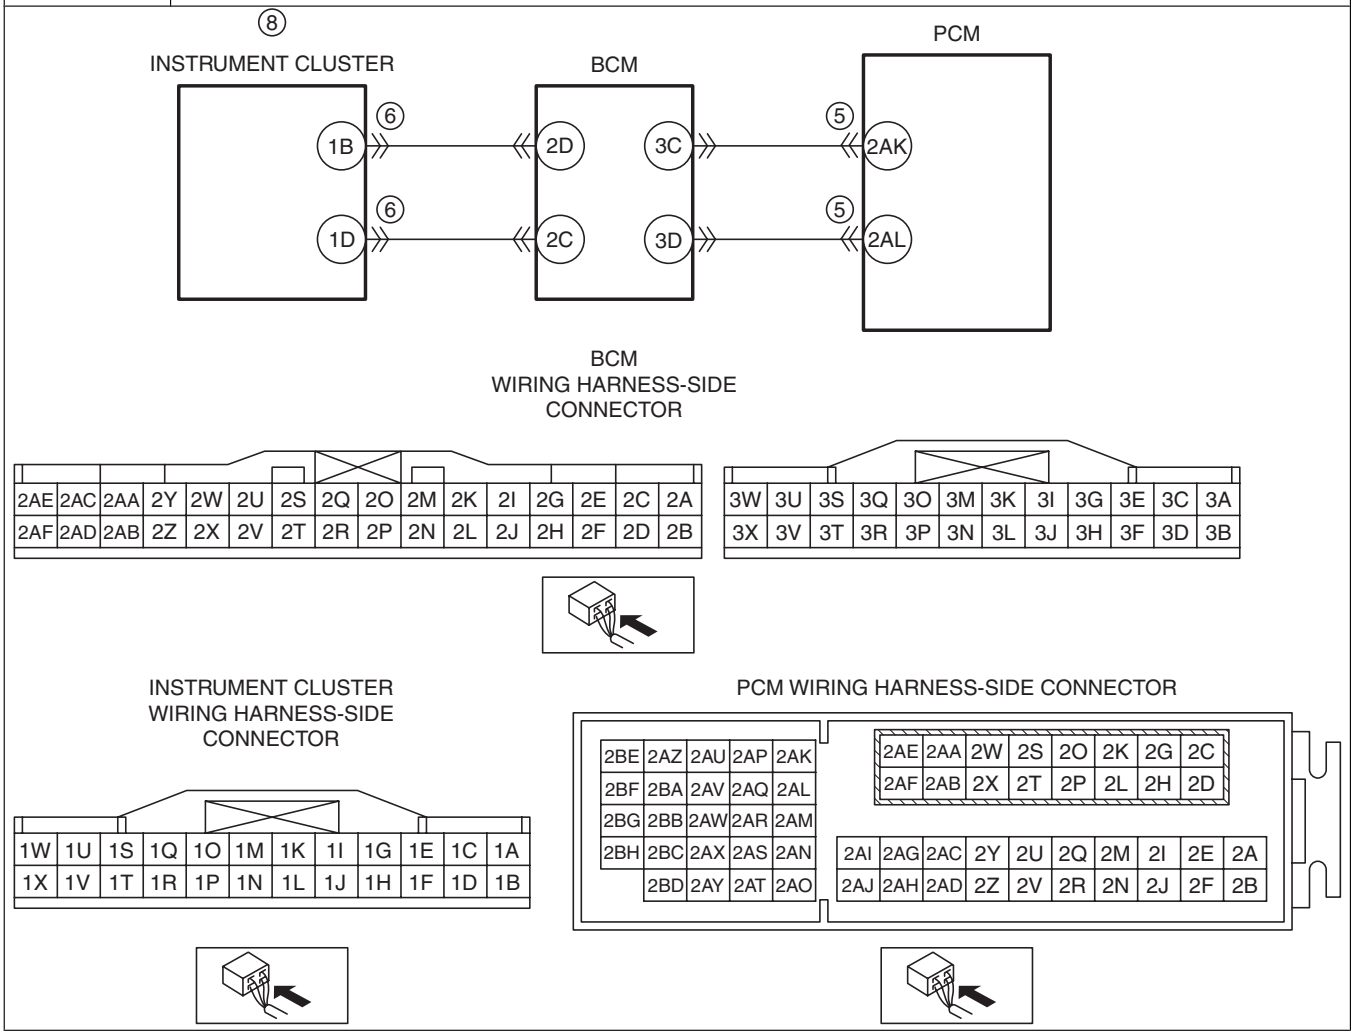

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD VEHICLE STATUS AT TIME OF DTC DETECTION TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the snapshot data on the repair order.	—	Go to the next step.
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**VERIFY DTC FOR MODULE COMMUNICATION** • Switch the ignition off, then ON (engine off). • Perform the DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is the DTC U0155:00 also present?	Yes	Go to the applicable DTC inspection. (See DTC U0073:00, U0101:00, U0121:00, U0131:00, U0140:00, U0151:00, U0155:00, U0214:00, U0235:00 [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	Go to the next step.
4	**CONFIRM INSTRUMENT CLUSTER DTC** • Perform the instrument cluster DTC inspection using the M-MDS. (See DTC INSPECTION [INSTRUMENT CLUSTER].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [INSTRUMENT CLUSTER].)
		No	Go to the next step.

STEP	INSPECTION		ACTION
5	**INSPECT PCM CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 9.
		No	Go to the next step.
6	**INSPECT INSTRUMENT CLUSTER CONNECTOR CONDITION** • Disconnect the instrument cluster connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 9.
		No	Go to the next step.
7	**INSPECT INSTALLATION OF INSTRUMENT CLUSTER** • Inspect installation of instrument cluster. • Is the instrument cluster installed securely?	Yes	Go to the next step.
		No	Retighten the instrument cluster, then go to Step 9. (See INSTRUMENT CLUSTER REMOVAL/ INSTALLATION.)
8	**INSPECT INSTRUMENT CLUSTER** • Inspect the instrument cluster. (See INSTRUMENT CLUSTER INSPECTION.) • Is there any malfunction?	Yes	Replace the instrument cluster, then go to the next step. (See INSTRUMENT CLUSTER REMOVAL/ INSTALLATION.)
		No	Go to the next step.
9	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Switch the ignition ON (engine off) and wait for **15 s or more**. • Switch the ignition off. • Wait until the main relay is off (**approx. 1 min**). • Perform the KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) Go to the next step.
		No	Go to the next step.
10	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	DTC troubleshooting completed.