DTC P0137:00 [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0102q1300300

Note
- To determine the malfunctioning part, proceed with the diagnostics from "Function Inspection Using M-MDS".

Details On DTCs

DESCRIPTION	HO2S circuit low input	
DETECTION CONDITION	Determination conditions	• A condition in which the HO2S input voltage is less than the specified value continues for the specified period.
	Preconditions	• HO2S is activated. • The following DTCs are not detected: — MAF sensor: P0102:00, P0103:00 — ECT sensor: P0117:00, P0118:00
	Malfunction determination period	• **5 s** period
	Drive cycle	• 2
	Self test type	• CMDTC self test
	Sensor used	• HO2S
FAIL-SAFE FUNCTION	• Fixes duty value of A/F sensor heater • Stops fuel feedback control of A/F sensor	
VEHICLE STATUS WHEN DTCs ARE OUTPUT	• Illuminates check engine light.	
POSSIBLE CAUSE	• HO2S connector or terminals malfunction • PCM connector or terminals malfunction • Short to ground in wiring harness between HO2S terminal A and PCM terminal 2AI • Open circuit in wiring harness between the following terminals: — HO2S terminal A—PCM terminal 2AI — HO2S terminal B—PCM terminal 2AG • HO2S malfunction • PCM malfunction	

System Wiring Diagram

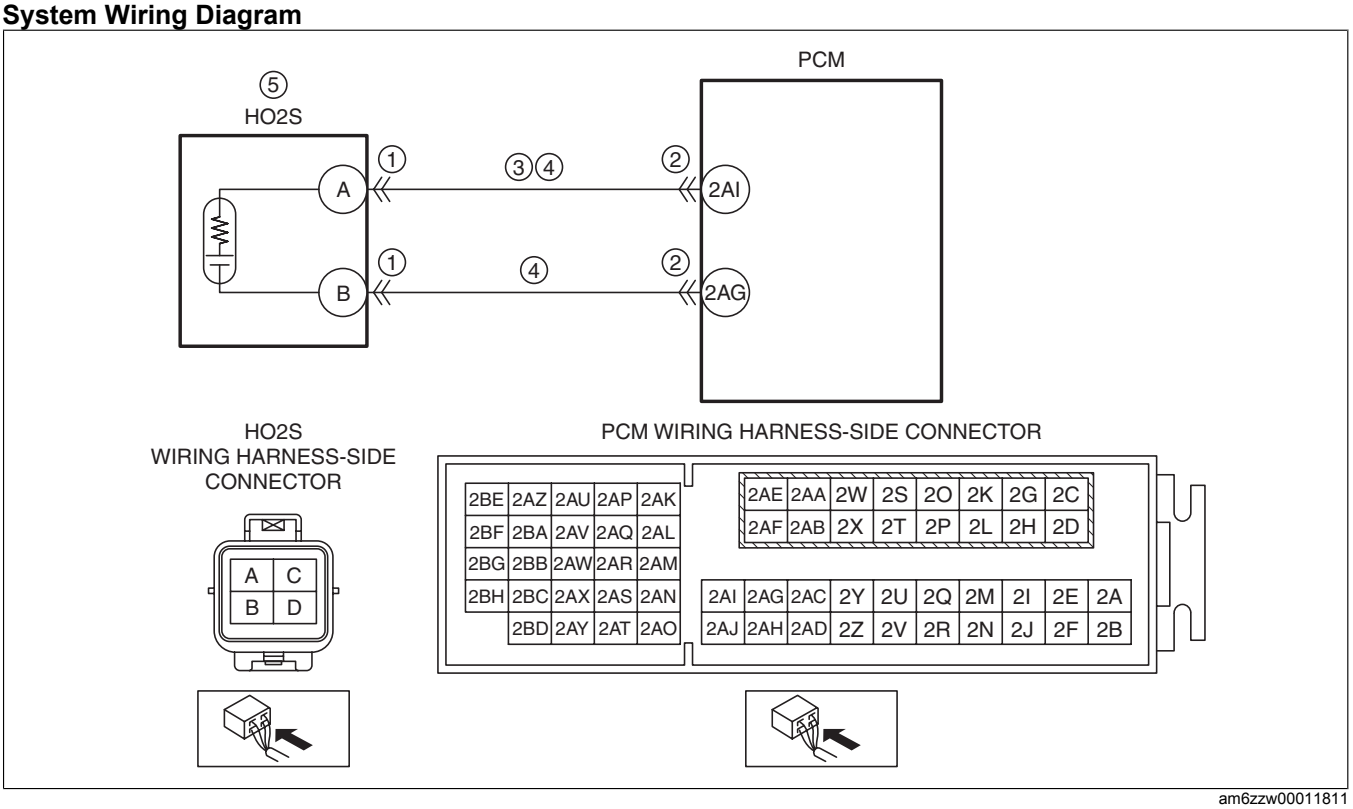

am6zzw00011811

Function Explanation (DTC Detection Outline)

- The PCM detects the oxygen concentration in the exhaust gas based on the HO2S signal. The PCM determines a HO2S signal error based on the condition in which the HO2S input voltage continues to be less than the specified value, and stores a DTC.

Repeatability Verification Procedure

1. Warm up the engine to allow the engine coolant temperature to reach **80 °C {176 °F} or more**.
2. Start the engine and leave it idling for **1 min**.

   Note
   - Match the engine coolant temperature in the recorded FREEZE FRAME DATA/snapshot data, the vehicle speed, and engine speed values to the best extent possible while driving the vehicle.

3. Try to reproduce the malfunction by driving the vehicle for **5 min** based on the values in the FREEZE FRAME DATA/snapshot data.

PID Item/Simulation Item Used In Diagnosis

- Not applicable

Function Inspection Using M-MDS

STEP	INSPECTION	RESULTS	ACTION
1	**PURPOSE: VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
2	**PURPOSE: RECORD FREEZE FRAME DATA/ SNAPSHOT DATA AND DIAGNOSTIC MONITORING TEST RESULTS TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the FREEZE FRAME DATA/snapshot data and DIAGNOSTIC MONITORING TEST RESULTS (A/F sensor, HO2S related) on the repair order.	—	Go to the troubleshooting procedure to perform the procedure from Step 1.

Troubleshooting Diagnostic Procedure
Intention of troubleshooting procedure

- Step 1—4
  — Perform an inspection of the HO2S and PCM-related connectors and wiring harnesses.
- Step 5
  — Perform a unit inspection of the HO2S.
- Step 6—7
  — Verify that the primary malfunction is resolved and there are no other malfunctions.

STEP	INSPECTION	RESULTS	ACTION
1	**PURPOSE: INSPECT HO2S CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the HO2S connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Replace the HO2S, then go to Step 6. (See HEATED OXYGEN SENSOR (HO2S) REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	Go to the next step.
2	**PURPOSE: INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Replace the PCM, then go to Step 6. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	Go to the next step.

STEP	INSPECTION	RESULTS	ACTION
3	**PURPOSE: INSPECT HO2S SIGNAL CIRCUIT FOR SHORT TO GROUND** • Verify that the HO2S and PCM connectors are disconnected. • Inspect for continuity between HO2S terminal A (wiring harness-side) and body ground. • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between HO2S terminal A and PCM terminal 2AI. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to Step 6.
		No	Go to the next step.
4	**PURPOSE: INSPECT HO2S CIRCUIT FOR OPEN CIRCUIT** • Verify that the HO2S and PCM connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side): — HO2S terminal A—PCM terminal 2AI — HO2S terminal B—PCM terminal 2AG • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • HO2S terminal A—PCM terminal 2AI • HO2S terminal B—PCM terminal 2AG **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 6.
5	**PURPOSE: DETERMINE INTEGRITY OF HO2S** • Reconnect all disconnected connectors. • Inspect the HO2S. (See HEATED OXYGEN SENSOR (HO2S) INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is there any malfunction?	Yes	Replace the HO2S, then go to the next step. (See HEATED OXYGEN SENSOR (HO2S) REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	Go to the next step.
6	**PURPOSE: VERIFICATION OF VEHICLE REPAIR COMPLETION** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See CLEARING DTC [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Implement the repeatability verification procedure. (See Repeatability Verification Procedure.) • Perform the Pending Trouble Code Access Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is the PENDING CODE for this DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) Go to the next step.
		No	Go to the next step.
7	**PURPOSE: VERIFY IF THERE IS ANY OTHER MALFUNCTION** • Is any other DTC or pending code stored?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	DTC troubleshooting completed.