

## DTC P061F:00 [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0102q1302600

| DTC P061F:00 | **Internal control module throttle valve actuator controller performance problem** |
|---|---|
| **DETECTION CONDITION** | • When any of the following conditions is met:<br>— Start stop unit internal malfunction<br>— CAN communication line malfunction between start stop unit and PCM<br>— PCM internal malfunction<br>**Diagnostic support note**<br>• This is a continuous monitor (other).<br>• The check engine light does not illuminate.<br>• FREEZE FRAME DATA is not available.<br>• Snapshot data is available.<br>• DTC is stored in the PCM memory. |
| **FAIL-SAFE FUNCTION** | Not applicable |
| **POSSIBLE CAUSE** | • CAN communication line malfunction between start stop unit and PCM<br>— Start stop unit terminal 2M—BCM terminal 2D<br>— Start stop unit terminal 2O—BCM terminal 2C<br>— BCM terminal 3C—PCM terminal 2AK<br>— BCM terminal 3D—PCM terminal 2AL<br>• Start stop unit connector or terminals malfunction<br>• PCM connector or terminals malfunction<br>• Start stop unit malfunction<br>• PCM malfunction |

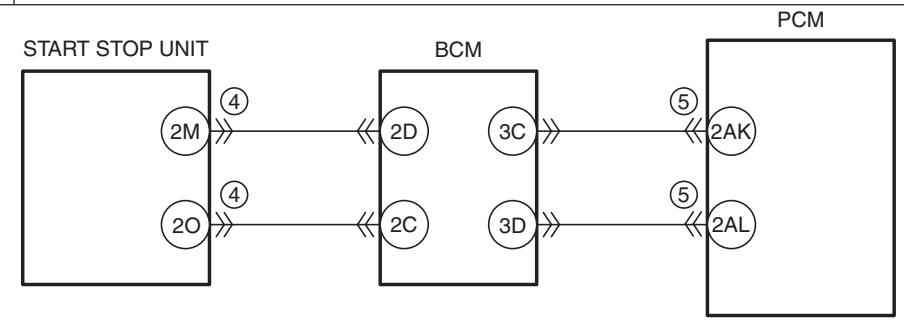




BCM
WIRING HARNESS-SIDE
CONNECTOR

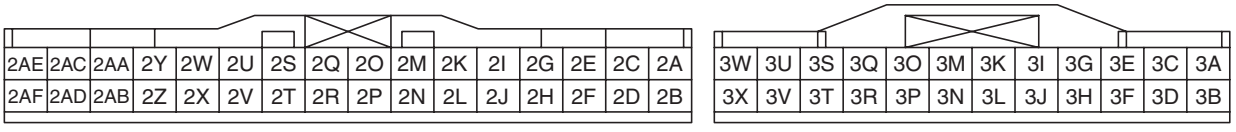






START STOP UNIT
WIRING HARNESS-SIDE
CONNECTOR

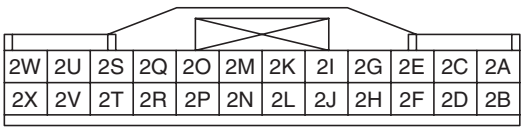

PCM WIRING HARNESS-SIDE CONNECTOR

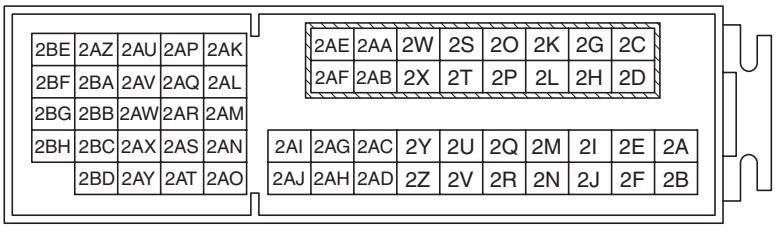

**Diagnostic Procedure**

| STEP | INSPECTION | | ACTION |
|---|---|---|---|
| 1 | **RECORD VEHICLE STATUS AT TIME OF DTC DETECTION TO UTILIZE WITH REPEATABILITY VERIFICATION**<br><br>**Note**<br>• Recording can be facilitated using the screen capture function of the PC.<br><br>• Record the snapshot data on the repair order. | — | Go to the next step. |
| 2 | **VERIFY RELATED SERVICE INFORMATION AVAILABILITY**<br>• Verify related Service Information availability.<br>• Is any related Service Information available? | Yes | Perform repair or diagnosis according to the available Service Information.<br>• If the vehicle is not repaired, go to the next step. |
| | | No | Go to the next step. |
| 3 | **VERIFY RELATED PENDING CODE AND/OR DTC**<br>• Switch the ignition off, then ON (engine off).<br>• Perform the Pending Trouble Code Access Procedure and DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)<br>• Are any other PENDING CODEs and/or DTCs present? | Yes | Go to the applicable PENDING CODE or DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) |
| | | No | Go to the next step. |
| 4 | **INSPECT START STOP UNIT CONNECTOR CONDITION**<br>• Switch the ignition off.<br>• Disconnect the start stop unit connector.<br>• Inspect for poor connection (such as damaged/ pulled-out pins, corrosion).<br>• Is there any malfunction? | Yes | Repair or replace the connector and/or terminals, then go to Step 6. |
| | | No | Go to the next step. |
| 5 | **INSPECT PCM CONNECTOR CONDITION**<br>• Disconnect the PCM connector.<br>• Inspect for poor connection (such as damaged/ pulled-out pins, corrosion).<br>• Is there any malfunction? | Yes | Repair or replace the connector and/or terminals, then go to the next step. |
| | | No | Go to the next step. |
| 6 | **VERIFY DTC TROUBLESHOOTING COMPLETED**<br>• Always reconnect all disconnected connectors.<br>• Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)<br>• Perform the KOEO or KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)<br>• Is the same DTC present? | Yes | Repeat the inspection from Step 1.<br>• If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)<br>Go to the next step. |
| | | No | Go to the next step. |
| 7 | **VERIFY AFTER REPAIR PROCEDURE**<br>• Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)<br>• Are any DTCs present? | Yes | Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) |
| | | No | DTC troubleshooting completed. |