
DTC P0108:00 [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0102q1701200

DTC P0108:00	MAP sensor circuit high input
DETECTION CONDITION	• The PCM monitors the input voltage from the MAP sensor. If the input voltage at the PCM terminal 1BW is **above 4.89 V** for **5 s**, the PCM determines that the MAP sensor circuit has a malfunction. **Diagnostic support note** • This is a continuous monitor (CCM). • The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. • FREEZE FRAME DATA/Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	• Estimates MAP using MAF sensor and engine speed. • Restricts the upper limit of the engine speed. • Inhibits the evaporative purge control.
POSSIBLE CAUSE	• MAP sensor/IAT sensor No.2 connector or terminals malfunction • PCM connector or terminals malfunction • MAP sensor malfunction • Short to power supply in wiring harness between MAP sensor/IAT sensor No.2 terminal D and PCM terminal 1BW • Open circuit in wiring harness between the following terminals: — MAP sensor/IAT sensor No.2 terminal C—PCM terminal 1BO — MAP sensor/IAT sensor No.2 terminal D—PCM terminal 1BW — MAP sensor/IAT sensor No.2 terminal A—PCM terminal 1BX • PCM malfunction

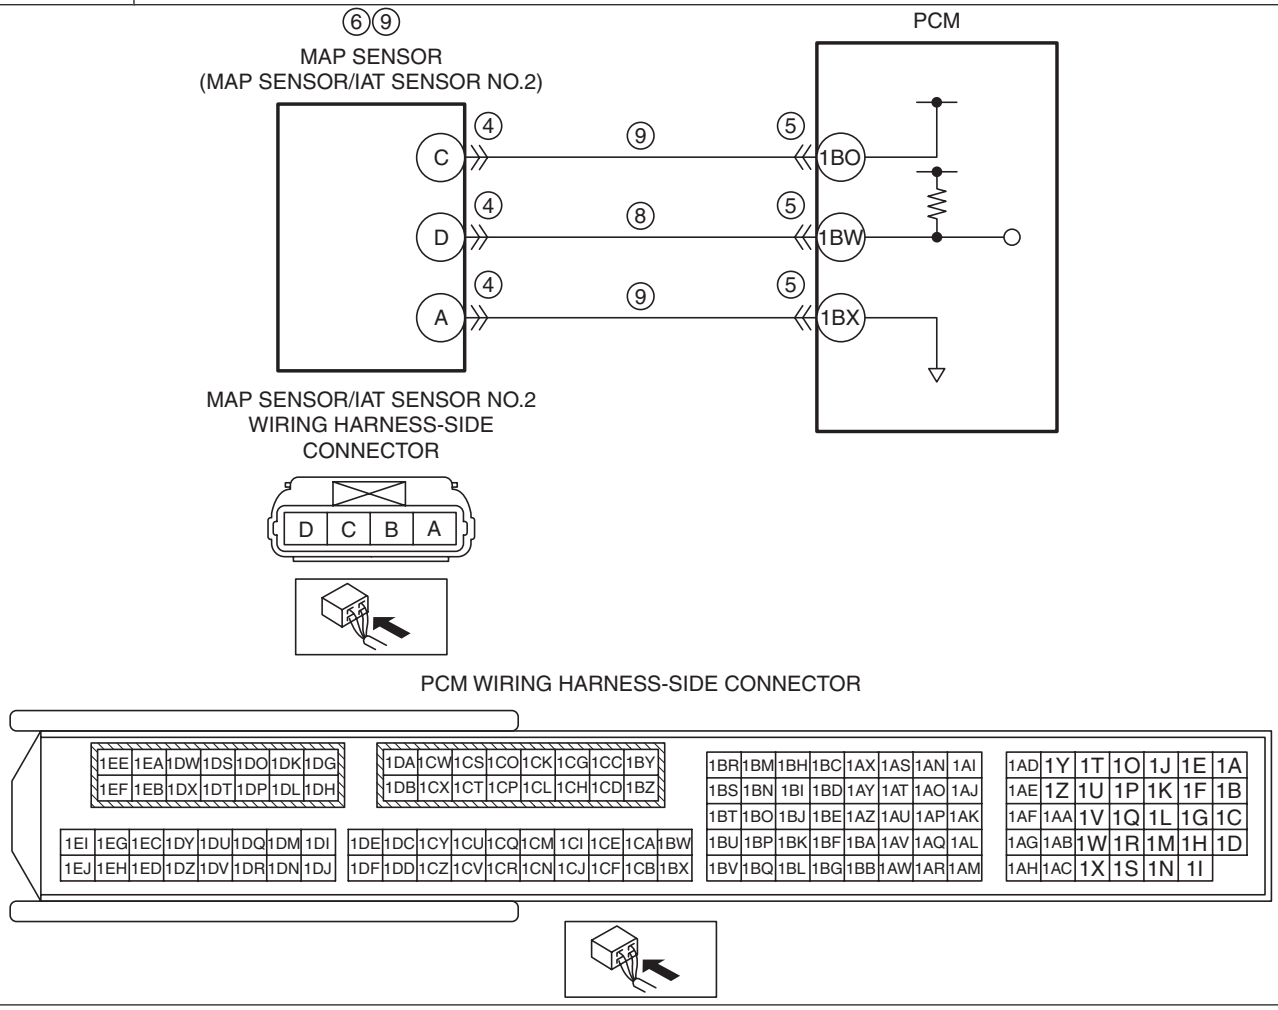

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD VEHICLE STATUS AT TIME OF DTC DETECTION TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the FREEZE FRAME DATA/snapshot data on the repair order.	—	Go to the next step.
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**DETERMINE IF MAP SENSOR OR WIRING HARNESS MALFUNCTION** • Access the MAP_V PID using the M-MDS. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Verify the MAP_V PID value. • Is the MAP_V PID value **5 V** or **B+**?	Yes	Go to Step 7.
		No	Go to the next step.
4	**INSPECT MAP SENSOR/IAT SENSOR NO.2 CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the MAP sensor/IAT sensor No.2 connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 10.
		No	Go to the next step.
5	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 10.
		No	Go to the next step.
6	**INSPECT MAP SENSOR** • Reconnect all disconnected connectors. • Inspect the MAP sensor. (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is there any malfunction?	Yes	Replace the MAP sensor/IAT sensor No.2, then go to Step 10. (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.2 REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	Go to Step 10.
7	**DETERMINE IF MAP SENSOR SIGNAL CIRCUIT OR MAP SENSOR GROUND CIRCUIT MALFUNCTION** • Switch the ignition off. • Disconnect the MAP sensor/IAT sensor No.2 connector. • Access the MAP_V PID using the M-MDS. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Verify the MAP_V PID value. • Is the MAP_V PID value **5 V** or **B+**?	Yes	Go to the next step.
		No	Go to Step 9.

STEP	INSPECTION		ACTION
8	**INSPECT MAP SENSOR SIGNAL CIRCUIT FOR OPEN CIRCUIT** • Verify that the MAP sensor/IAT sensor No.2 connector is disconnected. • Switch the ignition off. • Disconnect the PCM connector. • Inspect for continuity between MAP sensor/IAT sensor No.2 terminal D (wiring harness-side) and PCM terminal 1BW (wiring harness-side). • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between MAP sensor/IAT sensor No.2 terminal D and PCM terminal 1BW. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to power supply. Go to Step 10.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between MAP sensor/IAT sensor No.2 terminal D and PCM terminal 1BW. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 10.
9	**INSPECT MAP SENSOR CIRCUIT FOR OPEN CIRCUIT** • Verify that the MAP sensor/IAT sensor No.2 connector is disconnected. • Switch the ignition off. • Disconnect the PCM connector. • Inspect for continuity between the following terminals (wiring harness-side): — MAP sensor/IAT sensor No.2 terminal C—PCM terminal 1BO — MAP sensor/IAT sensor No.2 terminal A—PCM terminal 1BX • Is there continuity?	Yes	Replace the MAP sensor/IAT sensor No.2, then go to the next step. (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.2 REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • MAP sensor/IAT sensor No.2 terminal C—PCM terminal 1BO • MAP sensor/IAT sensor No.2 terminal A—PCM terminal 1BX **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to the next step.
10	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Perform the KOEO or KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) Go to the next step.
		No	Go to the next step.

STEP	INSPECTION		ACTION
11	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	DTC troubleshooting completed.