DTC P0132:00 [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0102q1702300

Note
- To determine the malfunctioning part, proceed with the diagnostics from "Function Inspection Using M-MDS".

Details On DTCs

DESCRIPTION	**A/F sensor circuit high input**	
DETECTION CONDITION	Determination conditions	• Any one of the following conditions is met: — Voltage of A/F sensor terminal F is more than specified value — Voltage of A/F sensor terminal D is more than specified value — Voltage of A/F sensor terminal B is more than specified value
	Preconditions	• Switch the ignition ON (engine off or on) • Battery voltage: **11—18 V** *1 • The following DTC is not detected: — Internal PCM malfunction: P064D:00 *1: Value can be verified by displaying PIDs using M-MDS
	Drive cycle	• 2
	Self test type	• CMDTC self test, KOER self test
	Sensor used	• A/F sensor
FAIL-SAFE FUNCTION	• Fixes duty value of A/F sensor heater • Stops fuel feedback control of A/F sensor	
VEHICLE STATUS WHEN DTCs ARE OUTPUT	• Illuminates check engine light.	
POSSIBLE CAUSE	• A/F sensor connector or terminals malfunction • PCM connector or terminals malfunction • Short to power supply in wiring harness between the following terminals: — A/F sensor terminal F—PCM terminal 1W — A/F sensor terminal D—PCM terminal 1AB — A/F sensor terminal B—PCM terminal 1AG • A/F sensor malfunction • PCM malfunction	

System Wiring Diagram

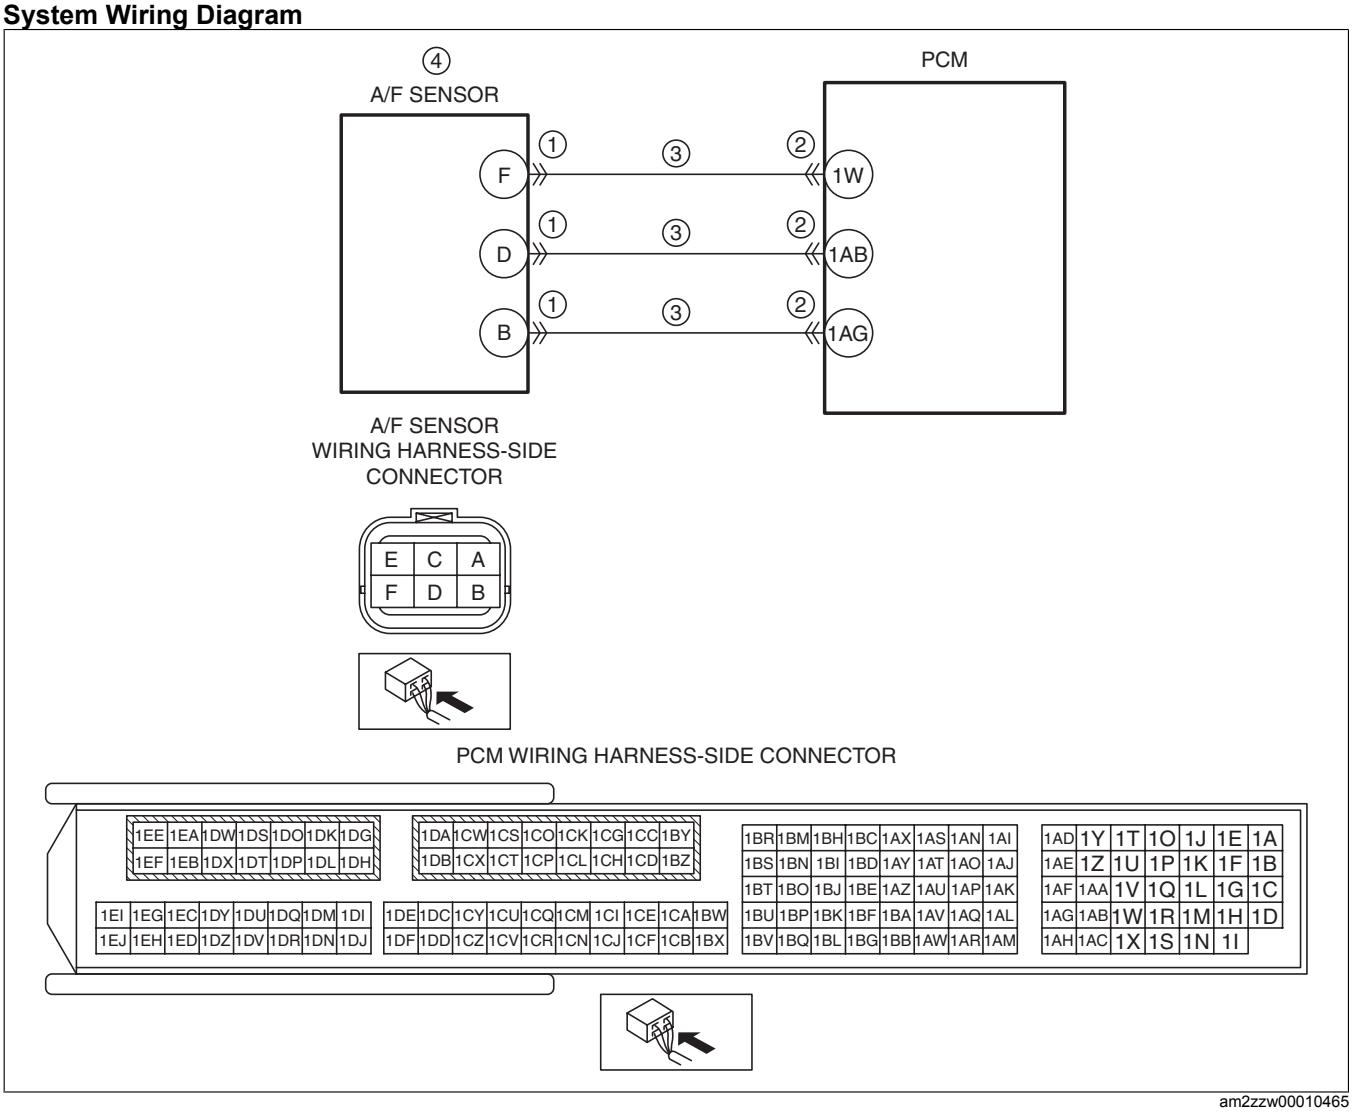

am2zzw00010465

Function Explanation (DTC Detection Outline)

- If any of the following conditions is detected, the PCM determines a short to the power supply between the A/F sensor terminal and the PCM terminal and stores a DTC.
  - — Voltage of A/F sensor terminal F is above specified value
  - — Voltage of A/F sensor terminal D is above specified value
  - — Voltage of A/F sensor terminal B is above specified value

Repeatability Verification Procedure

1. Start the engine and leave it idling for **1 min**.

PID Item/Simulation Item Used In Diagnosis

PID/DATA monitor item table

Item	Definition	Unit	Condition/Specification
O2S11	A/F sensor current	μA	• Idle (after warm up): 0—50 μA • Deceleration fuel cut (accelerator pedal released from engine speed of 4,000 rpm or more): Approx. 3.84 mA

Function Inspection Using M-MDS

STEP	INSPECTION	RESULTS	ACTION
1	**PURPOSE: VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
2	**PURPOSE: RECORD VEHICLE STATUS AT TIME OF DTC DETECTION TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the FREEZE FRAME DATA/snapshot data on the repair order.	—	Go to the troubleshooting procedure to perform the procedure from Step 1.

Troubleshooting Diagnostic Procedure
Intention of troubleshooting procedure

- Step 1—2
  - — Perform an inspection of the A/F sensor and PCM-related connectors.
- Step 3
  - — Perform an inspection of the short to power supply in wiring harness between A/F sensor and PCM.
- Step 4
  - — Perform a unit inspection of the A/F sensor.
- Step 5—6
  - — Verify that the primary malfunction is resolved and there are no other malfunctions.

STEP	INSPECTION	RESULTS	ACTION
1	**PURPOSE: INSPECT A/F SENSOR CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the A/F sensor connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Replace the A/F sensor, then go to Step 5. (See AIR FUEL RATIO (A/F) SENSOR REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	Go to the next step.
2	**PURPOSE: INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Replace the PCM, then go to Step 5. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	Go to the next step.
3	**PURPOSE: INSPECT A/F SENSOR CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the A/F sensor and PCM connectors are disconnected. • Switch the ignition ON (engine off). **Note** • Another DTC may be stored by the PCM detecting an open circuit. • Measure the voltage at the following terminals (wiring harness-side): — A/F sensor terminal F — A/F sensor terminal D — A/F sensor terminal B • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • A/F sensor terminal F—PCM terminal 1W • A/F sensor terminal D—PCM terminal 1AB • A/F sensor terminal B—PCM terminal 1AG **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to power supply. Go to Step 5.

STEP	INSPECTION	RESULTS	ACTION
4	**PURPOSE: DETERMINE INTEGRITY OF A/F SENSOR** • Start the engine and warm it up completely. • Access the O2S11 PID using the M-MDS. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Drive the vehicle under the following conditions. **Warning** **• When the M-MDS is used to observe monitor system status while driving, be sure to have another technician with you, or record the data in the M-MDS using the PID/DATA MONITOR AND RECORD capturing function and inspect later.** **• While performing this step, always operate the vehicle in a safe and lawful manner.** — After increasing the engine speed to **3,000 rpm**, decelerate using engine braking. • Is the displayed PID value as follows? — O2S11: **0.25 mA or more**	Yes	Go to the next step.
		No	Replace the A/F sensor, then go to the next step. (See AIR FUEL RATIO (A/F) SENSOR REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
5	**PURPOSE: VERIFICATION OF VEHICLE REPAIR COMPLETION** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See CLEARING DTC [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Perform the KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is the PENDING CODE for this DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) Go to the next step.
		No	Go to the next step.
6	**PURPOSE: VERIFY IF THERE IS ANY OTHER MALFUNCTION** • Is any other DTC or pending code stored?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	DTC troubleshooting completed.