
	• Not applicable
VEHICLE STATUS WHEN DTCs ARE OUTPUT	• Illuminates check engine light.
POSSIBLE CAUSE	• HO2S malfunction ' S looooosen

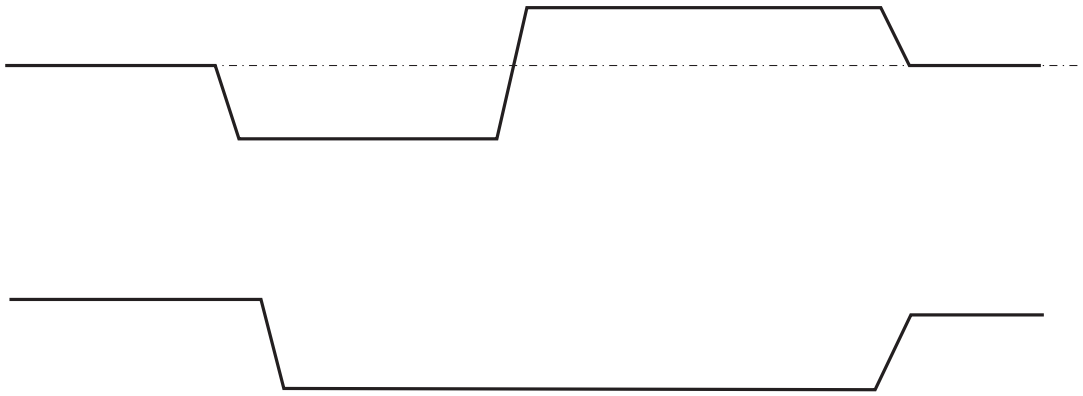

STEP

- Step 8—9
  - Verify that the primary malfunction is resolved and there are no other malfunctions.

STEP