
DTC P0703:00 [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0102q1706500

DTC P0703:00	Brake switch input circuit problem
DETECTION CONDITION	• The brake switch does not switch even though the vehicle is stopped **8 times** repeatedly from a vehicle speed of **30 km/h {19 mph} or more**. **Diagnostic support note** • This is a continuous monitor (CCM). • The check engine light illuminates if the PCM detects the above malfunction condition in two consecutive drive cycles or in one drive cycle while the DTC for the same malfunction has been stored in the PCM. • PENDING CODE is available if the PCM detects the above malfunction condition during first drive cycle. • FREEZE FRAME DATA/Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	Not applicable
POSSIBLE CAUSE	**Caution** **• Inspect the brake switch with it installed to the brake pedal, otherwise the brake switch may not operate normally. If the brake switch is removed from the brake pedal, replace the brake switch with a new one.** • Brake switch connector or terminals malfunction • Short to ground or open circuit in brake switch No.1 power supply circuit (without i-ELOOP) — Short to ground in wiring harness between MAIN 200 A fuse and brake switch terminal A — MAIN 200 A fuse and/or STOP 10 A fuse malfunction — Open circuit in wiring harness between battery positive terminal and brake switch terminal A • Short to ground or open circuit in brake switch No.1 power supply circuit (with i-ELOOP) — Short to ground in wiring harness between DC-DC converter (i-ELOOP) terminal 4A and brake switch terminal A — STOP 10 A fuse malfunction — Open circuit in wiring harness between DC-DC converter (i-ELOOP) terminal 4A and brake switch terminal A • Short to ground in wiring harness between brake switch terminal D and PCM terminal 2G • PCM connector or terminals malfunction • Short to power supply in wiring harness between brake switch terminal D and PCM terminal 2G • Open circuit in wiring harness between brake switch terminal D and PCM terminal 2G • Brake switch No.1 malfunction • PCM malfunction

DTC P0703:00	Brake switch input circuit problem

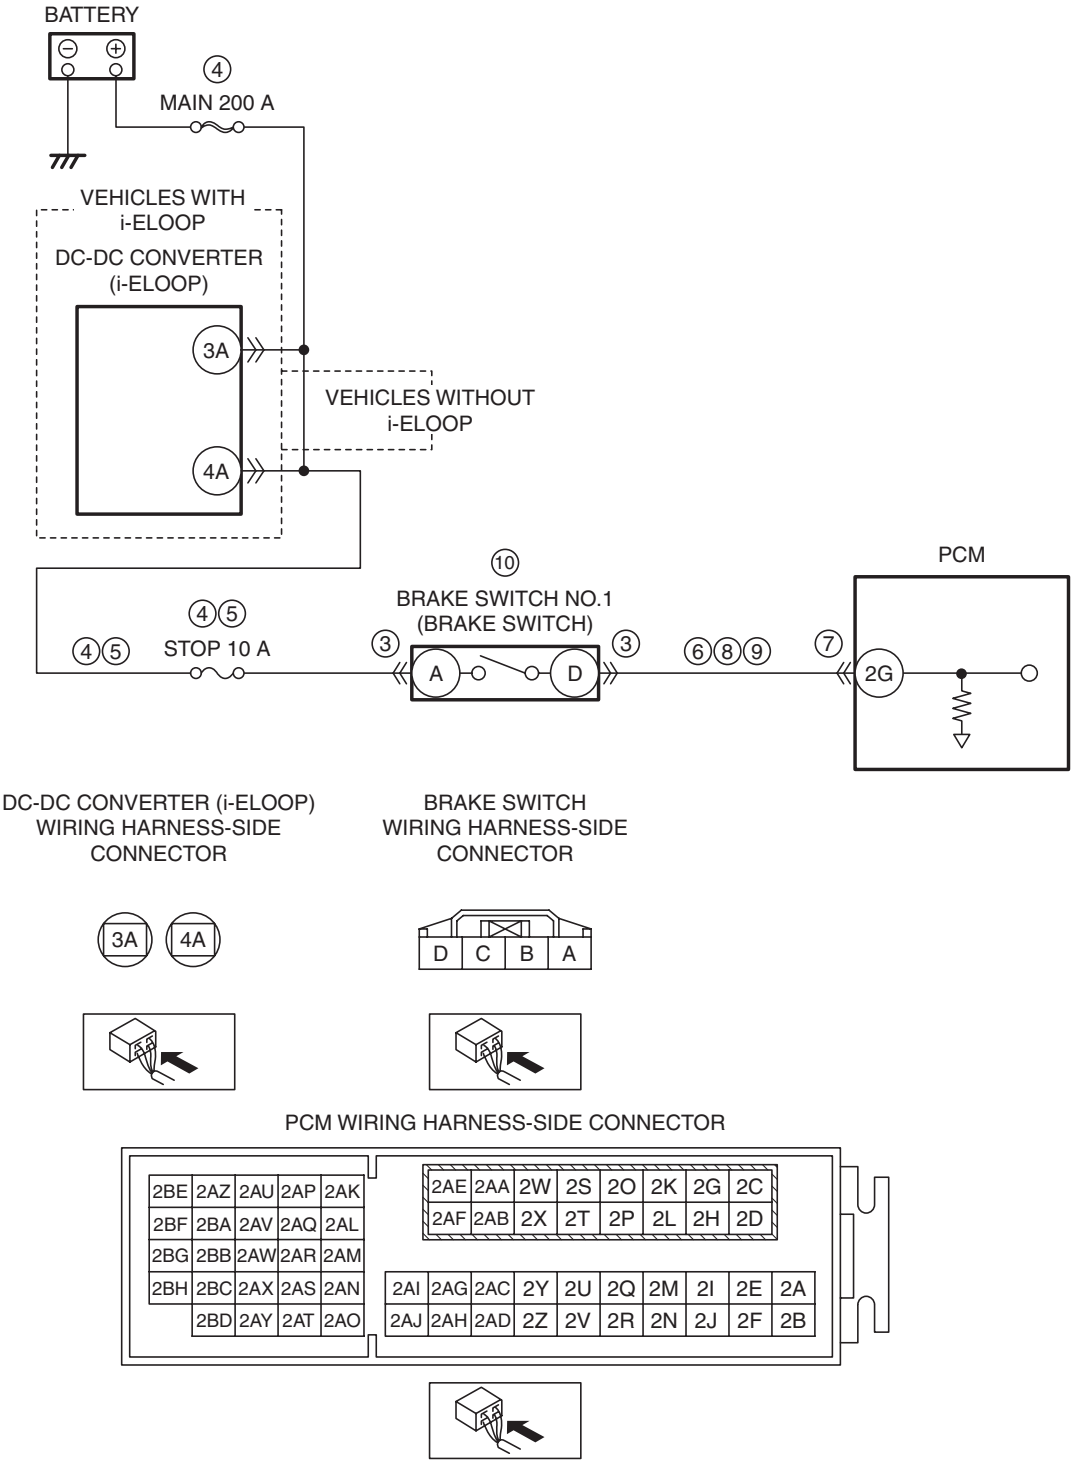

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD VEHICLE STATUS AT TIME OF DTC DETECTION TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the FREEZE FRAME DATA/snapshot data on the repair order.	—	Go to the next step.

STEP	INSPECTION		ACTION
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**INSPECT BRAKE SWITCH CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the brake switch connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 11.
		No	Vehicles with i-ELOOP: • Go to Step 5. Vehicles without i-ELOOP: • Go to the next step.
4	**INSPECT BRAKE SWITCH NO.1 POWER SUPPLY CIRCUIT FOR SHORT TO GROUND OR OPEN CIRCUIT** • Verify that the brake switch connector is disconnected. • Measure the voltage at the brake switch terminal A (wiring harness-side). • Is the voltage **B+**?	Yes	Go to Step 6.
		No	Inspect the MAIN 200 A fuse and STOP 10 A fuse. • If the fuse is blown: — Refer to the wiring diagram and verify whether or not there is a common connector between MAIN 200 A fuse and brake switch terminal A. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. • Replace the malfunctioning fuse. • If the fuse is damaged: — Replace the malfunctioning fuse. • If all fuses are normal: — Refer to the wiring diagram and verify whether or not there is a common connector between battery positive terminal and brake switch terminal A. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 11.

STEP	INSPECTION		ACTION
5	**INSPECT BRAKE SWITCH NO.1 POWER SUPPLY CIRCUIT FOR SHORT TO GROUND OR OPEN CIRCUIT** • Verify that the brake switch connector is disconnected. • Measure the voltage at the brake switch terminal A (wiring harness-side). • Is the voltage **B+**?	Yes	Go to the next step.
		No	Remove the service plug. (See SERVICE PLUG DISCONNECTION/CONNECTION [i-ELOOP].) Inspect the STOP 10 A fuse. • If the fuse is blown: — Refer to the wiring diagram and verify whether or not there is a common connector between STOP 10 A fuse and brake switch terminal A. **If there is a common connector:** • Determine the malfunctioning location by inspecting the common connector and terminals for corrosion, damage, or disconnection and by inspecting the DC-DC converter (i-ELOOP) terminal 4A-related wiring harness for short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has shorted to ground, or the DC-DC converter (i-ELOOP) terminal 4A-related wiring harness. • Replace the fuse. • If the fuse is damaged: — Replace the fuse. • If the fuse is normal: — Refer to the wiring diagram and verify whether or not there is a common connector between DC-DC converter (i-ELOOP) terminal 4A and brake switch terminal A. **If there is a common connector:** • Determine the malfunctioning location by inspecting the common connector and terminals for corrosion, damage, or disconnection and by inspecting the DC-DC converter (i-ELOOP) terminal 4A-related wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit, or the DC-DC converter (i-ELOOP) terminal 4A-related wiring harness. Reinstall the service plug. (See SERVICE PLUG DISCONNECTION/CONNECTION [i-ELOOP].) Go to Step 11.

STEP	INSPECTION		ACTION
6	**INSPECT BRAKE SWITCH NO.1 SIGNAL CIRCUIT FOR SHORT TO GROUND** • Verify that the brake switch connector is disconnected. • Inspect for continuity between brake switch terminal D (wiring harness-side) and body ground. • Is there continuity?	Yes	If the short to ground circuit could be detected in the wiring harness: • Refer to the wiring diagram and verify whether or not there is a common connector between brake switch terminal D and PCM terminal 2G. **If there is a common connector:** — Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. — Repair or replace the malfunctioning part. **If there is no common connector:** — Repair or replace the wiring harness which has a short to ground. If the short to ground circuit could not be detected in the wiring harness: • Replace the PCM (short to ground in the PCM internal circuit). (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) Go to Step 11.
		No	Go to the next step.
7	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 11.
		No	Go to the next step.
8	**INSPECT BRAKE SWITCH NO.1 SIGNAL CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the brake switch and PCM connectors are disconnected. • Switch the ignition ON (engine off). **Note** • Another DTC may be stored by the PCM detecting an open circuit. • Measure the voltage at the brake switch terminal D (wiring harness-side). • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between brake switch terminal D and PCM terminal 2G. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to power supply. Go to Step 11.
9	**INSPECT BRAKE SWITCH NO.1 SIGNAL CIRCUIT FOR OPEN CIRCUIT** • Verify that the brake switch and PCM connectors are disconnected. • Switch the ignition off. • Inspect for continuity between brake switch terminal D (wiring harness-side) and PCM terminal 2G (wiring harness-side). • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between brake switch terminal D and PCM terminal 2G. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 11.
10	**INSPECT BRAKE SWITCH NO.1** • Inspect the brake switch No.1. (See BRAKE SWITCH INSPECTION.) • Is there any malfunction?	Yes	Replace the brake switch, then go to the next step. (See BRAKE PEDAL REMOVAL/INSTALLATION [L.H.D.].) (See BRAKE PEDAL REMOVAL/INSTALLATION [R.H.D.].)
		No	Go to the next step.

STEP	INSPECTION		ACTION
11	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) **Caution** **• While performing this step, always operate the vehicle in a safe and lawful manner.** **• When the M-MDS is used to observe monitor system status while driving, be sure to have another technician with you, or record the data in the M-MDS using the PID/DATA MONITOR AND RECORD capturing function and inspect later.** • Stop the vehicle **8 times** repeatedly from a vehicle speed of **30 km/h {19 mph} or more**. • Perform the Pending Trouble Code Access Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is the PENDING CODE for this DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) Go to the next step.
		No	Go to the next step.
12	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	DTC troubleshooting completed.