
DTC P2122:00 [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0102q1708300

DTC P2122:00	APP sensor No.1 circuit low input
DETECTION CONDITION	• The PCM monitors the input voltage from APP sensor No.1. If the input voltage at the PCM terminal 2AN is **less than 0.1 V**, the PCM determines that the APP sensor No.1 circuit input voltage is low. **Diagnostic support note** • This is a continuous monitor (CCM). • The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. • FREEZE FRAME DATA/Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	• Regulates the upper limit of the APP sensor output.
POSSIBLE CAUSE	• APP sensor connector or terminals malfunction • Short to ground in wiring harness between the following terminals: — APP sensor terminal A—PCM terminal 2AR — APP sensor terminal B—PCM terminal 2AN • PCM connector or terminals malfunction • APP sensor No.1 signal circuit and ground circuit are shorted to each other • Open circuit in wiring harness between the following terminals: — APP sensor terminal A—PCM terminal 2AR — APP sensor terminal B—PCM terminal 2AN • APP sensor No.1 malfunction • PCM malfunction

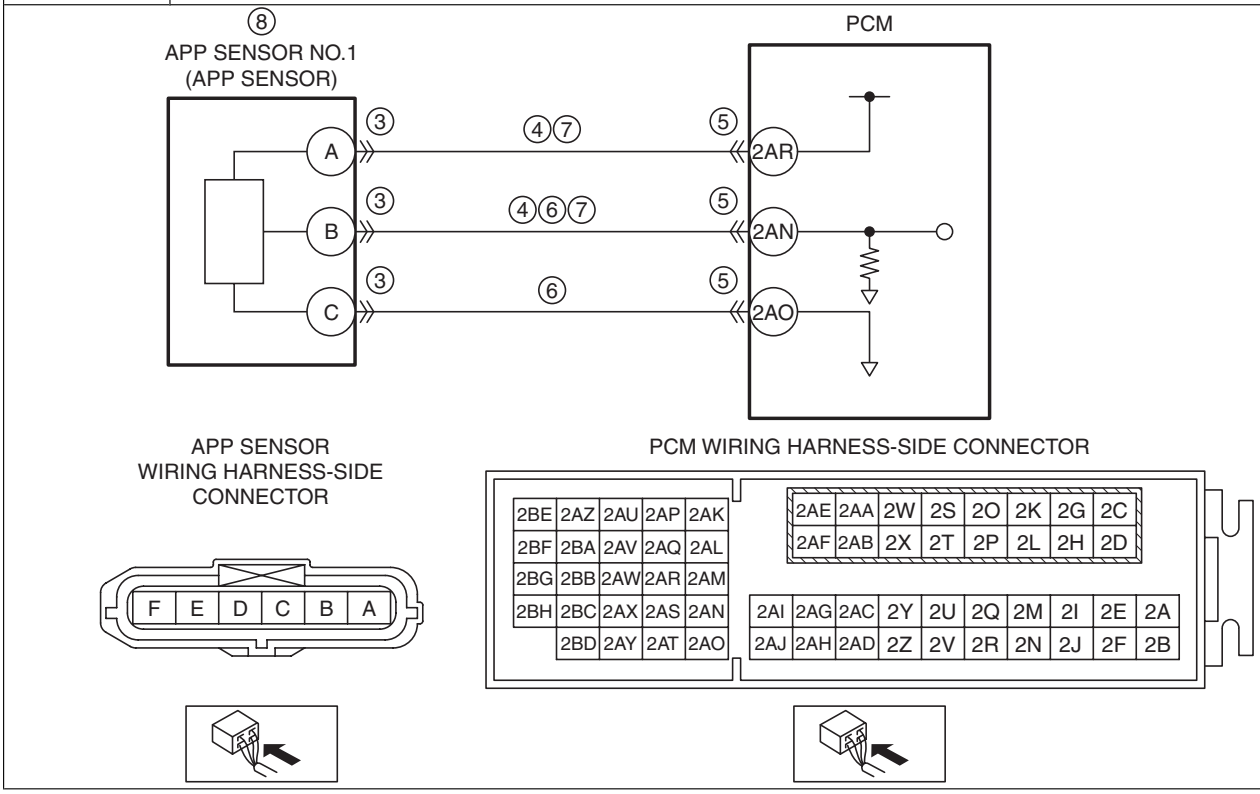

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD VEHICLE STATUS AT TIME OF DTC DETECTION TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the FREEZE FRAME DATA/snapshot data on the repair order.	—	Go to the next step.

STEP	INSPECTION		ACTION
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**INSPECT APP SENSOR CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the APP sensor connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 9.
		No	Go to the next step.
4	**INSPECT APP SENSOR NO.1 CIRCUIT FOR SHORT TO GROUND** • Verify that the APP sensor connector is disconnected. • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — APP sensor terminal A — APP sensor terminal B • Is there continuity?	Yes	If the short to ground circuit could be detected in the wiring harness: • Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: — APP sensor terminal A—PCM terminal 2AR — APP sensor terminal B—PCM terminal 2AN **If there is a common connector:** — Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. — Repair or replace the malfunctioning part. **If there is no common connector:** — Repair or replace the wiring harness which has a short to ground. If the short to ground circuit could not be detected in the wiring harness: • Replace the PCM (short to ground in the PCM internal circuit). (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) Go to Step 9.
		No	Go to the next step.
5	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 9.
		No	Go to the next step.
6	**INSPECT APP SENSOR NO.1 SIGNAL CIRCUIT AND GROUND CIRCUIT FOR SHORT TO EACH OTHER** • Verify that the APP sensor and PCM connectors are disconnected. • Inspect for continuity between APP sensor terminals B and C (wiring harness-side). • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • APP sensor terminal B—PCM terminal 2AN • APP sensor terminal C—PCM terminal 2AO **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to each other. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to each other. Go to Step 9.
		No	Go to the next step.

STEP	INSPECTION		ACTION
7	**INSPECT APP SENSOR NO.1 CIRCUIT FOR OPEN CIRCUIT** • Verify that the APP sensor and PCM connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side): — APP sensor terminal A—PCM terminal 2AR — APP sensor terminal B—PCM terminal 2AN • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • APP sensor terminal A—PCM terminal 2AR • APP sensor terminal B—PCM terminal 2AN **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 9.
8	**INSPECT APP SENSOR NO.1** • Reconnect all disconnected connectors. • Inspect the APP sensor No.1. (See ACCELERATOR PEDAL POSITION (APP) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is there any malfunction?	Yes	Replace the accelerator pedal, then go to the next step. (See ACCELERATOR PEDAL REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	Go to the next step.
9	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Perform the KOEO or KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) Go to the next step.
		No	Go to the next step.
10	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	DTC troubleshooting completed.