DTC P2251:00 [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0102q1851300

Note
- To determine the malfunctioning part, proceed with the diagnostics from "Function Inspection Using M-MDS".

Details On DTCs

DESCRIPTION	**Open circuit between A/F sensor terminal D and PCM terminal 1AB**	
DETECTION CONDITION	Determination conditions	• The following conditions are met: — A/F sensor element impedance is specified value or more — A/F sensor terminal F voltage (B+ terminal) is less than specified value or unstable.
	Preconditions	• Battery voltage: **11—18 V** *1 • A/F sensor is activated. • The following DTCs are not detected: — A/F sensor terminal F voltage (B+ terminal) is less than specified value: • A/F sensor heater: P0031:00, P0032:00 — A/F sensor terminal F voltage (B+ terminal) is unstable: • Internal PCM malfunction: P064D:00 *1: Value can be verified by displaying PIDs using M-MDS
	Drive cycle	• 2
	Self test type	• CMDTC self test, KOER self test
	Sensor used	• A/F sensor
FAIL-SAFE FUNCTION	• Not applicable	
VEHICLE STATUS WHEN DTCs ARE OUTPUT	• Illuminates check engine light.	
POSSIBLE CAUSE	• A/F sensor connector or terminals malfunction • PCM connector or terminals malfunction • Open circuit in wiring harness between A/F sensor terminal D and PCM terminal 1AB • A/F sensor malfunction • PCM malfunction	

System Wiring Diagram

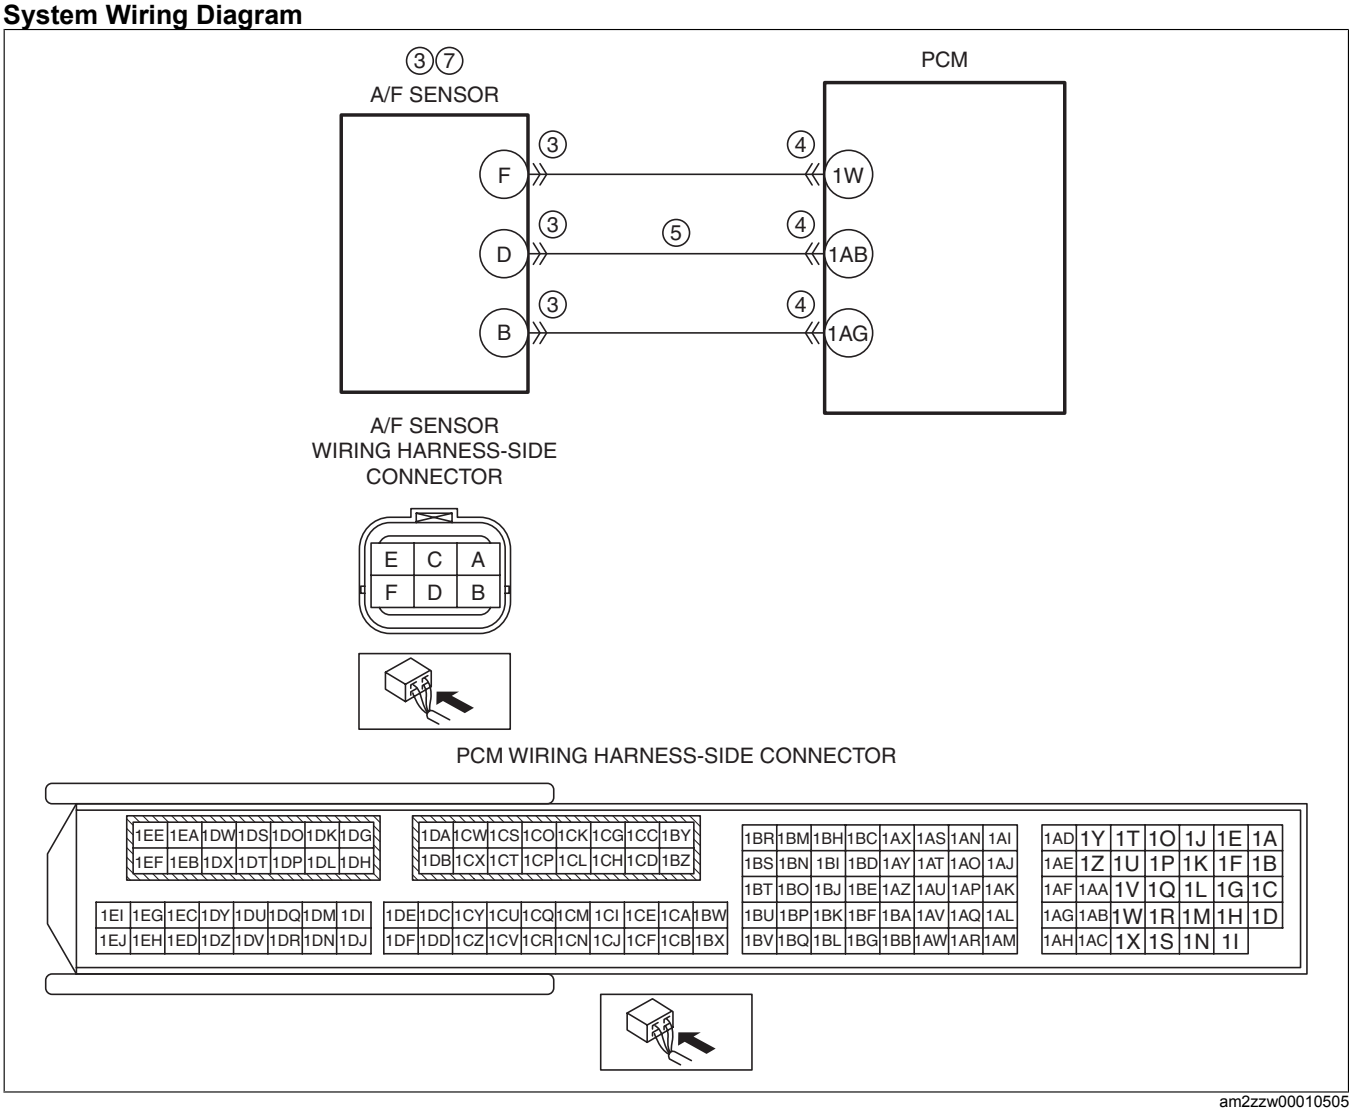

am2zzw00010505

Function Explanation (DTC Detection Outline)

- If the PCM detects an open circuit in the wiring harness between A/F sensor terminal D and PCM terminal 1AB (COM wiring harness), it stores a DTC. In addition, when there is an open circuit in the wiring harness between A/F sensor terminal D and PCM terminal 1AB (COM wiring harness), the A/F sensor terminal F (B+ terminal) becomes unstable. At this time, the PCM determines an open circuit in the wiring harness (COM wiring harness) between A/F sensor terminal D and PCM terminal 1AB and stores a DTC.
- If the A/F sensor does not activate, monitoring cannot occur because the A/F sensor element has an insulation property which keeps it at a specific temperature range or less.

Repeatability Verification Procedure

1. Warm up the engine to allow the engine coolant temperature to reach **80 °C {176 °F} or more**.
2. Start the engine and leave it idling for **1 min**.

   Note
   - Match the engine coolant temperature in the recorded FREEZE FRAME DATA/snapshot data, the vehicle speed, and engine speed values to the best extent possible while driving the vehicle.

3. Try to reproduce the malfunction by driving the vehicle for **5 min** based on the values in the FREEZE FRAME DATA/snapshot data.

PID Item/Simulation Item Used In Diagnosis

PID/DATA monitor item table

Item	Definition	Unit	Condition/Specification
O2S11	A/F sensor current	μA	• Idle (after warm up): 0—50 μA • Deceleration fuel cut (accelerator pedal released from engine speed of 4,000 rpm or more): Approx. 3.84 mA

Function Inspection Using M-MDS

STEP	INSPECTION	RESULTS	ACTION
1	**PURPOSE: VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
2	**PURPOSE: RECORD VEHICLE STATUS AT TIME OF DTC DETECTION TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the FREEZE FRAME DATA/snapshot data on the repair order.	—	Go to the next step.
3	**PURPOSE: INSPECT A/F SENSOR CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the A/F sensor connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Replace the A/F sensor. (See AIR FUEL RATIO (A/F) SENSOR REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) Go to the troubleshooting procedure to perform the procedure from Step 1.
		No	Go to the next step.
4	**PURPOSE: INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) Go to the troubleshooting procedure to perform the procedure from Step 1.
		No	Go to the next step.
5	**PURPOSE: INSPECT A/F SENSOR CIRCUIT FOR OPEN CIRCUIT** • Verify that the A/F sensor and PCM connectors are disconnected. • Inspect for continuity between A/F sensor terminal D (wiring harness-side) and PCM terminal 1AB (wiring harness-side). • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between A/F sensor terminal D and PCM terminal 1AB. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to the troubleshooting procedure to perform the procedure from Step 1.

STEP	INSPECTION	RESULTS	ACTION
6	**PURPOSE: DETERMINE INTEGRITY OF A/F SENSOR** • Start the engine and warm it up completely. • Access the O2S11 PID using the M-MDS. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Drive the vehicle under the following conditions. **Warning** **• When the M-MDS is used to observe monitor system status while driving, be sure to have another technician with you, or record the data in the M-MDS using the PID/DATA MONITOR AND RECORD capturing function and inspect later.** **• While performing this step, always operate the vehicle in a safe and lawful manner.** — After increasing the engine speed to **3,000 rpm**, decelerate using engine braking. • Is the displayed PID value as follows? — O2S11: **0.25 mA or more**	Yes	Go to the troubleshooting procedure to perform the procedure from Step 1.
		No	Go to the next step.
7	**PURPOSE: INSPECT RELATED SENSOR WIRING HARNESS AND CONNECTOR** • Access the O2S11 PID using the M-MDS. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Does the PID value fluctuate when the PCM and A/F sensor connectors are shaken?	Yes	Inspect the related wiring harness and connector. • Repair or replace the malfunctioning part. Go to the troubleshooting procedure to perform the procedure from Step 1.
		No	Replace the A/F sensor. (See AIR FUEL RATIO (A/F) SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) Go to the troubleshooting procedure to perform the procedure from Step 1.

Troubleshooting Diagnostic Procedure
Intention of troubleshooting procedure

- Step 1—2
  — Verify that the primary malfunction is resolved and there are no other malfunctions.

STEP	INSPECTION	RESULTS	ACTION
1	**PURPOSE: VERIFICATION OF VEHICLE REPAIR COMPLETION** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See CLEARING DTC [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Perform the KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is the PENDING CODE for this DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) Go to the next step.
		No	Go to the next step.
2	**PURPOSE: VERIFY IF THERE IS ANY OTHER MALFUNCTION** • Is any other DTC or pending code stored?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	DTC troubleshooting completed.