
DTC U0315:00 [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0102q1901200

DTC U0315:00	ABS HU/CM or DSC HU/CM error
DETECTION CONDITION	• When any of the following conditions is met: — CAN communication line malfunction between DSC HU/CM and PCM (with DSC) — CAN communication line malfunction between ABS HU/CM and PCM (without DSC) — DSC HU/CM internal malfunction (with DSC) — ABS HU/CM internal malfunction (without DSC) **Diagnostic support note** • This is a continuous monitor (other). • The check engine light does not illuminate. • FREEZE FRAME DATA is not available. • Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	Not applicable
POSSIBLE CAUSE	**Vehicles with DSC** • CAN drive error (DSC HU/CM or PCM) • CAN communication line malfunction between DSC HU/CM and PCM — DSC HU/CM terminal AF—PCM terminal 2AK — DSC HU/CM terminal AC—PCM terminal 2AL • DSC HU/CM connector or terminals malfunction • PCM connector or terminals malfunction • DSC HU/CM malfunction • PCM malfunction **Vehicles without DSC** • CAN drive error (ABS HU/CM or PCM) • CAN communication line malfunction between ABS HU/CM and PCM — ABS HU/CM terminal AF—PCM terminal 2AK — ABS HU/CM terminal AC—PCM terminal 2AL • ABS HU/CM connector or terminals malfunction • PCM connector or terminals malfunction • ABS HU/CM malfunction • PCM malfunction


DTC U0315:00	ABS HU/CM or DSC HU/CM error

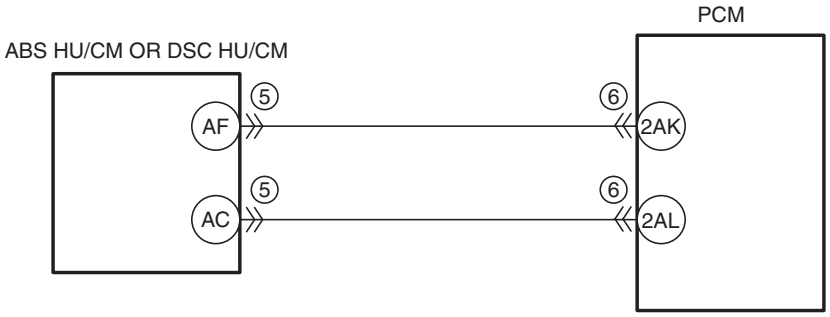


ABS HU/CM OR DSC HU/CM WIRING HARNESS-SIDE CONNECTOR

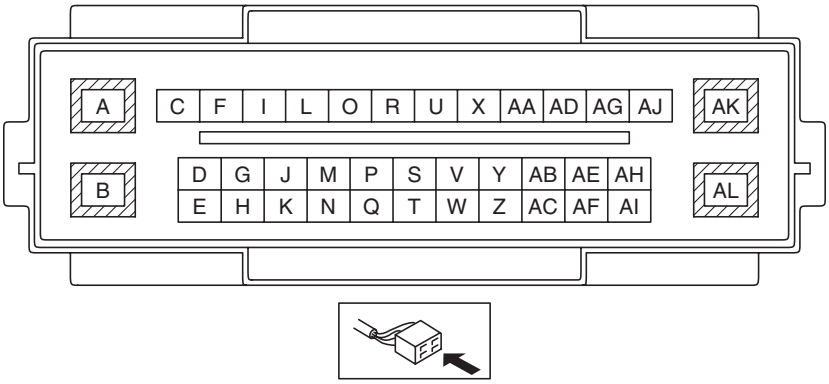

PCM WIRING HARNESS-SIDE CONNECTOR

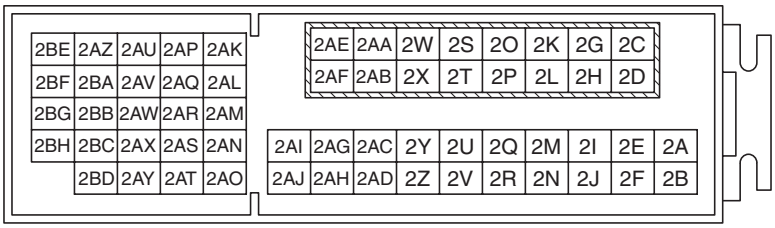



Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD VEHICLE STATUS AT TIME OF DTC DETECTION TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the snapshot data on the repair order.	—	Go to the next step.
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**VERIFY DTC FOR MODULE COMMUNICATION** • Switch the ignition off, then ON (engine off). • Perform the DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Are any other PENDING CODEs and/or DTCs present?	Yes	Go to the applicable PENDING CODE or DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	Go to the next step.

STEP	INSPECTION		ACTION
4	**VERIFY ABS HU/CM OR DSC HU/CM DTC** • Perform the ABS HU/CM or DSC HU/CM DTC inspection using the M-MDS. (See DTC INSPECTION [ABS HU/CM].) (See DTC INSPECTION [DSC HU/CM].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [ABS HU/CM].) (See DTC TABLE [DSC HU/CM].)
		No	Go to the next step.
5	**INSPECT ABS HU/CM OR DSC HU/CM CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the ABS HU/CM or DSC HU/CM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 7.
		No	Go to the next step.
6	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to the next step.
		No	Go to the next step.
7	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Perform the KOEO or KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) Go to the next step.
		No	Go to the next step.
8	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	DTC troubleshooting completed.