

DTC U0323:00 [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0102q1901400


DTC U0323:00	Instrument cluster error
DETECTION CONDITION	• When any of the following conditions is met: — CAN communication line malfunction between instrument cluster and PCM — Instrument cluster internal malfunction **Diagnostic support note** • This is a continuous monitor (other). • The check engine light does not illuminate. • FREEZE FRAME DATA is not available. • Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	Not applicable
POSSIBLE CAUSE	• CAN drive error (instrument cluster or PCM) • CAN communication line malfunction between instrument cluster and PCM — Instrument cluster terminal 1B—BCM terminal 2D — Instrument cluster terminal 1D—BCM terminal 2C — BCM terminal 3C—PCM terminal 2AK — BCM terminal 3D—PCM terminal 2AL • Instrument cluster connector or terminals malfunction • PCM connector or terminals malfunction • Instrument cluster malfunction • PCM malfunction

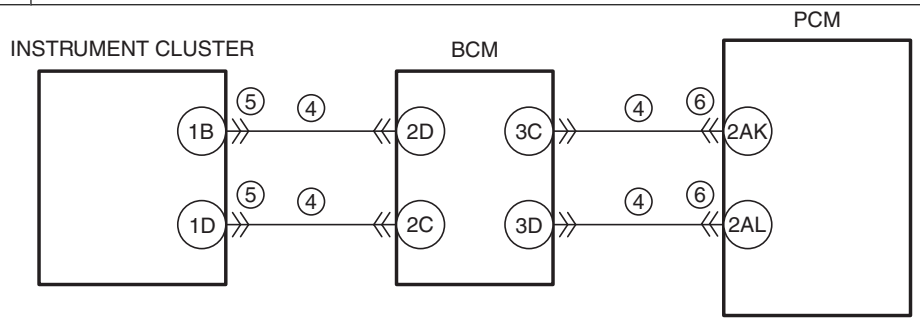


BCM
WIRING HARNESS-SIDE
CONNECTOR

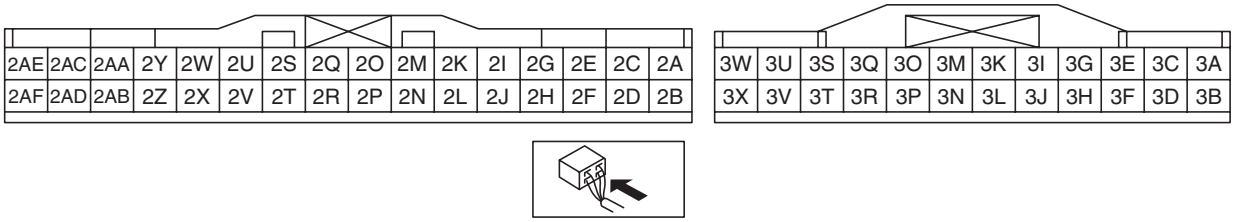



INSTRUMENT CLUSTER
WIRING HARNESS-SIDE
CONNECTOR

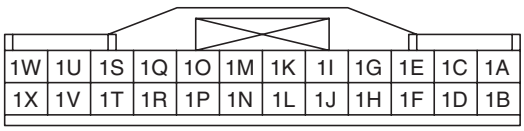



PCM WIRING HARNESS-SIDE CONNECTOR

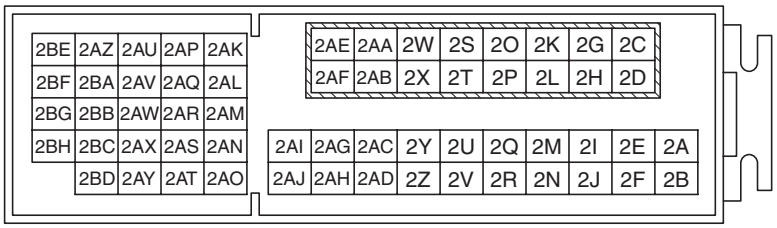



Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD VEHICLE STATUS AT TIME OF DTC DETECTION TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the snapshot data on the repair order.	—	Go to the next step.
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**VERIFY DTC FOR MODULE COMMUNICATION** • Switch the ignition off, then ON (engine off). • Perform the DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Are any other PENDING CODEs and/or DTCs present?	Yes	Go to the applicable PENDING CODE or DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	Go to the next step.
4	**VERIFY INSTRUMENT CLUSTER DTC** • Perform the instrument cluster DTC inspection using the M-MDS. (See DTC INSPECTION [INSTRUMENT CLUSTER].) • Are any DTCs present?	Yes	DTC U0100:00 is displayed: • CAN communication line can be considered the cause. — Repair or replace the wiring harness between PCM and instrument cluster, then go to Step 7. DTC other than U0100:00 is displayed: • Go to the applicable DTC inspection. (See DTC TABLE [INSTRUMENT CLUSTER].)
		No	Go to the next step.
5	**INSPECT INSTRUMENT CLUSTER CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the instrument cluster connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 7.
		No	Go to the next step.
6	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to the next step.
		No	Go to the next step.
7	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Perform the KOEO or KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) Go to the next step.
		No	Go to the next step.
8	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	DTC troubleshooting completed.