

DTC P0183:00 [SKYACTIV-D 1.5]

id0102q2147500


DTC P0183:00	Fuel temperature sensor circuit high input
DETECTION CONDITION	• The PCM monitors the fuel temperature sensor signal. If the PCM detects that the fuel temperature sensor voltage at the PCM terminal 1CU is **above 4.91 V** for **1 s**, the PCM determines that the fuel temperature sensor circuit has a malfunction. **MONITORING CONDITIONS** — Battery voltage: **8 V or more** — **0.5 s** have elapsed after the ignition was switched ON (engine off or on) **Diagnostic support note** • This is an intermittent monitor (fuel system). • The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. • FREEZE FRAME DATA/Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	• PCM restricts engine-transaxle integration control. (ATX) • Inhibits engine-stop by operating the i-stop function.
POSSIBLE CAUSE	• Ambient temperature is too low • Fuel temperature sensor connector or terminals malfunction • PCM connector or terminals malfunction • Short to power supply in wiring harness between fuel temperature sensor terminal A and PCM terminal 1CU • Open circuit in wiring harness between the following terminals: — Fuel temperature sensor terminal A—PCM terminal 1CU — Fuel temperature sensor terminal B—PCM terminal 1CV • Fuel temperature sensor malfunction • PCM malfunction

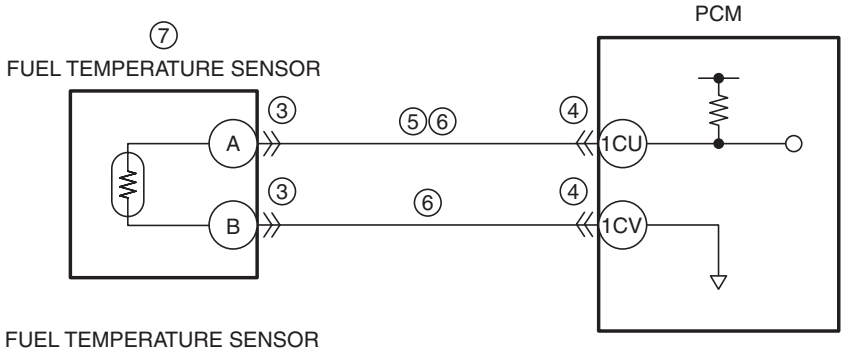

FUEL TEMPERATURE SENSOR WIRING HARNESS-SIDE CONNECTOR

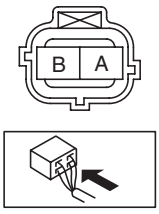

PCM WIRING HARNESS-SIDE CONNECTOR

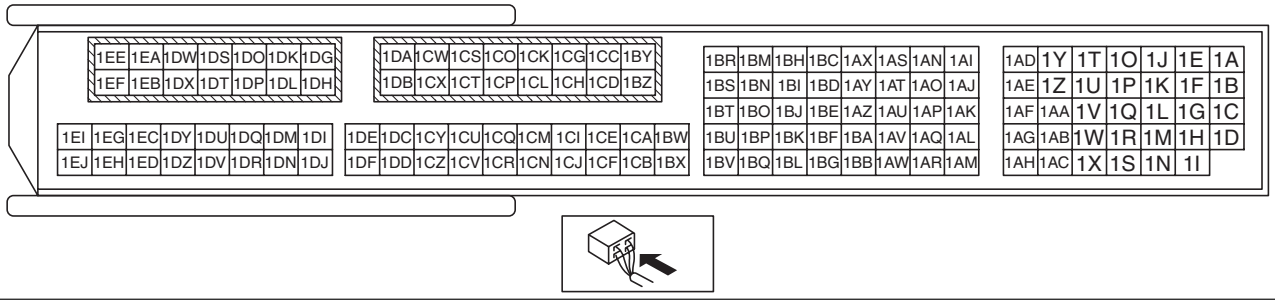

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD FREEZE FRAME DATA/SNAPSHOT DATA AND DIAGNOSTIC MONITORING TEST RESULTS TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the FREEZE FRAME DATA/snapshot data and DIAGNOSTIC MONITORING TEST RESULTS (fuel system related) on the repair order.	—	Go to the next step.
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**INSPECT FUEL TEMPERATURE SENSOR CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the fuel temperature sensor connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 8.
		No	Go to the next step.
4	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 8.
		No	Go to the next step.
5	**INSPECT FUEL TEMPERATURE SENSOR SIGNAL CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the fuel temperature sensor and PCM connectors are disconnected. • Switch the ignition ON (engine off). **Note** • Another DTC may be stored by the PCM detecting an open circuit. • Measure the voltage at the fuel temperature sensor terminal A (wiring harness-side). • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between fuel temperature sensor terminal A and PCM terminal 1CU. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to power supply. Go to Step 8.
6	**INSPECT FUEL TEMPERATURE SENSOR CIRCUIT FOR OPEN CIRCUIT** • Verify that the fuel temperature sensor and PCM connectors are disconnected. • Switch the ignition off. • Inspect for continuity between the following terminals (wiring harness-side): — Fuel temperature sensor terminal A—PCM terminal 1CU — Fuel temperature sensor terminal B—PCM terminal 1CV • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Fuel temperature sensor terminal A—PCM terminal 1CU • Fuel temperature sensor terminal B—PCM terminal 1CV **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 8.

STEP	INSPECTION		ACTION
7	**INSPECT FUEL TEMPERATURE SENSOR** • Inspect the fuel temperature sensor. (See FUEL TEMPERATURE SENSOR INSPECTION [SKYACTIV-D 1.5].) • Is there any malfunction?	Yes	Replace the lower case, then go to the next step. (See LOWER CASE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
		No	Go to the next step.
8	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Perform the KOEO or KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to the next step.
		No	Go to the next step.
9	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.