

DTC P0192:00 [SKYACTIV-D 1.5]

id0102q2147700


DTC P0192:00	Fuel pressure sensor circuit low input
DETECTION CONDITION	• If the input voltage at the PCM terminal 1AG is **less than 0.222 V** for **0.7 s**, the PCM determines that the fuel pressure sensor circuit is low. **MONITORING CONDITIONS** — Battery voltage: **8—20 V** **Diagnostic support note** • This is an intermittent monitor (fuel system). • The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. • FREEZE FRAME DATA/Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	• Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Inhibits the EGR control. • PCM restricts engine-transaxle integration control. (ATX) • Inhibits engine-stop by operating the i-stop function.
POSSIBLE CAUSE	• Fuel pressure sensor connector or terminals malfunction • PCM connector or terminals malfunction • Short to ground in wiring harness between the following terminals: — Fuel pressure sensor terminal A—PCM terminal 1AF — Fuel pressure sensor terminal B—PCM terminal 1AG • Fuel pressure sensor signal circuit and ground circuit are shorted to each other • Fuel pressure sensor malfunction • PCM malfunction

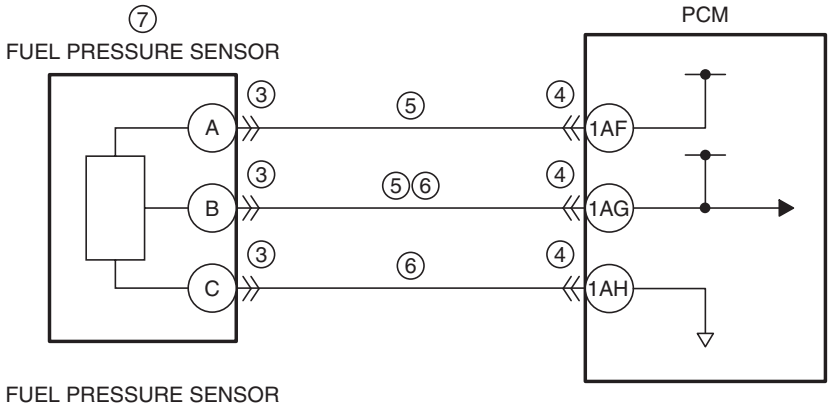

FUEL PRESSURE SENSOR WIRING HARNESS-SIDE CONNECTOR

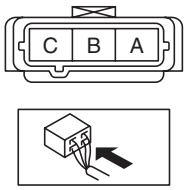

PCM WIRING HARNESS-SIDE CONNECTOR

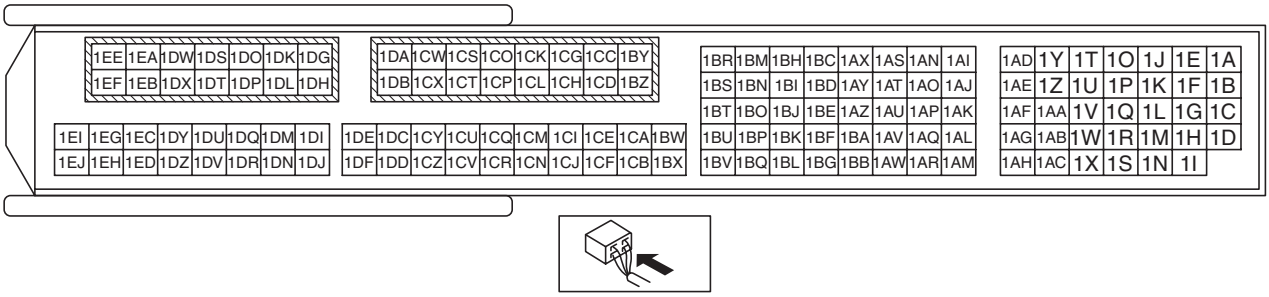

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD FREEZE FRAME DATA/SNAPSHOT DATA AND DIAGNOSTIC MONITORING TEST RESULTS TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the FREEZE FRAME DATA/snapshot data and DIAGNOSTIC MONITORING TEST RESULTS (fuel system related) on the repair order.	—	Go to the next step.
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**INSPECT FUEL PRESSURE SENSOR CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the fuel pressure sensor connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 8.
		No	Go to the next step.
4	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 8.
		No	Go to the next step.
5	**INSPECT FUEL PRESSURE SENSOR CIRCUIT FOR SHORT TO GROUND** • Verify that the fuel pressure sensor and PCM connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — Fuel pressure sensor terminal A — Fuel pressure sensor terminal B • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Fuel pressure sensor terminal A—PCM terminal 1AF • Fuel pressure sensor terminal B—PCM terminal 1AG **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. Go to Step 8.
		No	Go to the next step.
6	**INSPECT FUEL PRESSURE SENSOR SIGNAL CIRCUIT AND GROUND CIRCUIT FOR SHORT TO EACH OTHER** • Verify that the fuel pressure sensor and PCM connectors are disconnected. • Inspect for continuity between fuel pressure sensor terminals B and C (wiring harness-side). • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Fuel pressure sensor terminal B—PCM terminal 1AG • Fuel pressure sensor terminal C—PCM terminal 1AH **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to each other. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to each other. Go to Step 8.
		No	Go to the next step.

STEP	INSPECTION		ACTION
7	**INSPECT FUEL PRESSURE SENSOR** • Reconnect all disconnected connectors. • Inspect the fuel pressure sensor. (See FUEL PRESSURE SENSOR INSPECTION [SKYACTIV-D 1.5].) • Is there any malfunction**?**	Yes	Replace the common rail, then go to the next step. (See COMMON RAIL REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
		No	Go to the next step.
8	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Perform the KOEO or KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to the next step.
		No	Go to the next step.
9	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.