

DTC P0404:00 [SKYACTIV-D 1.5]

id0102q2155300


DTC P0404:00	Circuit malfunction in HP-EGR control valve DC motor control system
DETECTION CONDITION	• With the following conditions met, a condition has continued for **2 s** in which the DC motor drive current of the HP-EGR control valve is more than the specified value or the temperature of the DC motor drive circuit is **175 °C {347 °F} or more**. **MONITORING CONDITIONS** — The following DTCs are not detected: • PCM internal processor malfunction: P0606:00 **Diagnostic support note** • This is an intermittent monitor (EGR system). • The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. • FREEZE FRAME DATA/Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	• PCM restricts engine torque. • Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Inhibits the EGR control. • PCM restricts engine-transaxle integration control. (ATX) • Inhibits engine-stop by operating the i-stop function.
POSSIBLE CAUSE	• HP-EGR control valve connector or terminals malfunction • Short to ground in wiring harness between the following terminals: — HP-EGR control valve terminal E—PCM terminal 1BH — HP-EGR control valve terminal A—PCM terminal 1BC • PCM connector or terminals malfunction • Short to power supply in wiring harness between the following terminals: — HP-EGR control valve terminal E—PCM terminal 1BH — HP-EGR control valve terminal A—PCM terminal 1BC • HP-EGR control valve malfunction • PCM malfunction

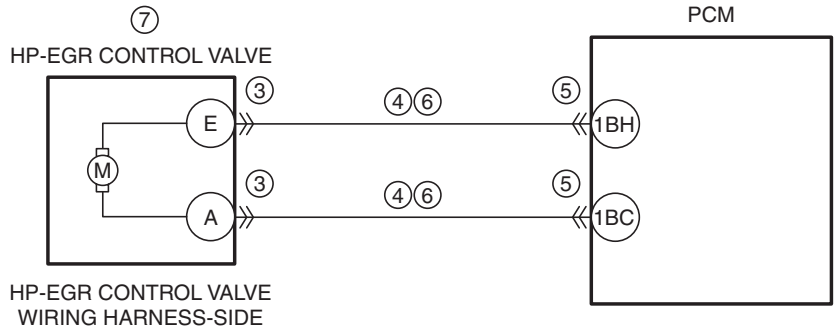

HP-EGR CONTROL VALVE WIRING HARNESS-SIDE CONNECTOR

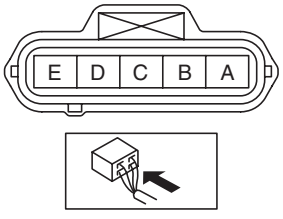

PCM WIRING HARNESS-SIDE CONNECTOR

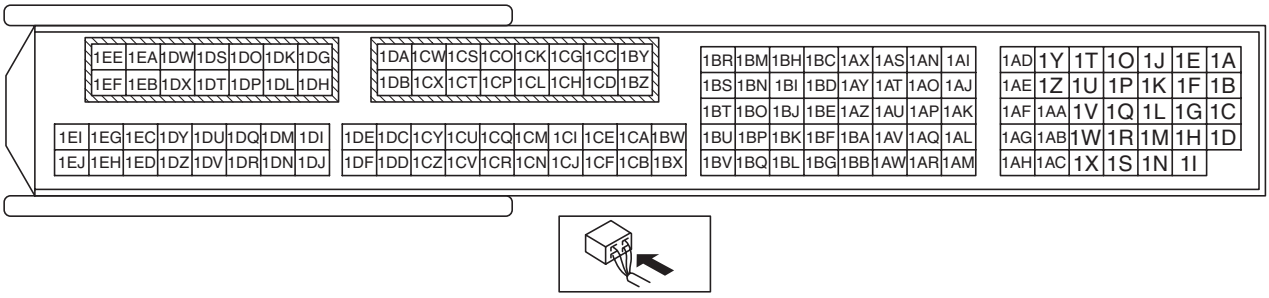

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD VEHICLE STATUS AT TIME OF DTC DETECTION TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the FREEZE FRAME DATA/snapshot data on the repair order.	—	Go to the next step.
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**INSPECT HP-EGR CONTROL VALVE CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the HP-EGR control valve connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 8.
		No	Go to the next step.
4	**INSPECT HP-EGR CONTROL VALVE CIRCUIT FOR SHORT TO GROUND** • Verify that the HP-EGR control valve connector is disconnected. • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — HP-EGR control valve terminal E — HP-EGR control valve terminal A • Is there continuity?	Yes	If the short to ground circuit could be detected in the wiring harness: • Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: — HP-EGR control valve terminal E—PCM terminal 1BH — HP-EGR control valve terminal A—PCM terminal 1BC **If there is a common connector:** — Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. — Repair or replace the malfunctioning part. **If there is no common connector:** — Repair or replace the wiring harness which has a short to ground. If the short to ground circuit could not be detected in the wiring harness: • Replace the PCM (short to ground in the PCM internal circuit). (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to Step 8.
		No	Go to the next step.
5	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 8.
		No	Go to the next step.

STEP	INSPECTION		ACTION
6	**INSPECT HP-EGR CONTROL VALVE CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the HP-EGR control valve and PCM connectors are disconnected. • Switch the ignition ON (engine off). **Note** • Another DTC may be stored by the PCM detecting an open circuit. • Measure the voltage at the following terminals (wiring harness-side): — HP-EGR control valve terminal E — HP-EGR control valve terminal A • Is the voltage **0 V**?	Yes	Go to the next step.
		No	**If there is no common connector:** Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • HP-EGR control valve terminal E—PCM terminal 1BH • HP-EGR control valve terminal A—PCM terminal 1BC **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Repair or replace the malfunctioning part. • Repair or replace the wiring harness which has a short to power supply. Go to Step 8.
7	**INSPECT HP-EGR CONTROL VALVE** • Inspect the HP-EGR control valve. (See HP-EGR CONTROL VALVE INSPECTION [SKYACTIV-D 1.5].) • Is there any malfunction**?**	Yes	Replace the HP-EGR control valve, then go to the next step. (See HP-EGR CONTROL VALVE REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)
		No	Go to the next step.
8	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Perform the KOEO or KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to the next step.
		No	Go to the next step.
9	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.