
DTC P009B:00 [SKYACTIV-D 1.5]

id0102q2211100

DTC P009B:00	Fuel pressure relief valve control circuit open
DETECTION CONDITION	• When the following condition is met, the PCM detects the control current at fuel pressure relief valve as **0.67 A or less** for continuous **8 times**. **MONITORING CONDITIONS** — During engine running — Battery voltage: **8 V or more** — **0.42 msec or more** have elapsed since fuel pressure relief pressure operation (fuel pressure reduction) — **2 s or more** have elapsed since PCM launch — The following DTCs are not detected: • PCM internal processor malfunction: P0606:00 • Internal PCM malfunction: P062B:00 **Diagnostic support note** • This is an intermittent monitor (fuel system). • The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. • FREEZE FRAME DATA/Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	• Inhibits engine-stop by operating the i-stop function.
POSSIBLE CAUSE	• Fuel pressure relief valve connector or terminals malfunction • PCM connector or terminals malfunction • Open circuit in wiring harness between the following terminals: — Fuel pressure relief valve terminal A—PCM terminal 1DK — Fuel pressure relief valve terminal B—PCM terminal 1DG • Fuel pressure relief valve malfunction • PCM malfunction

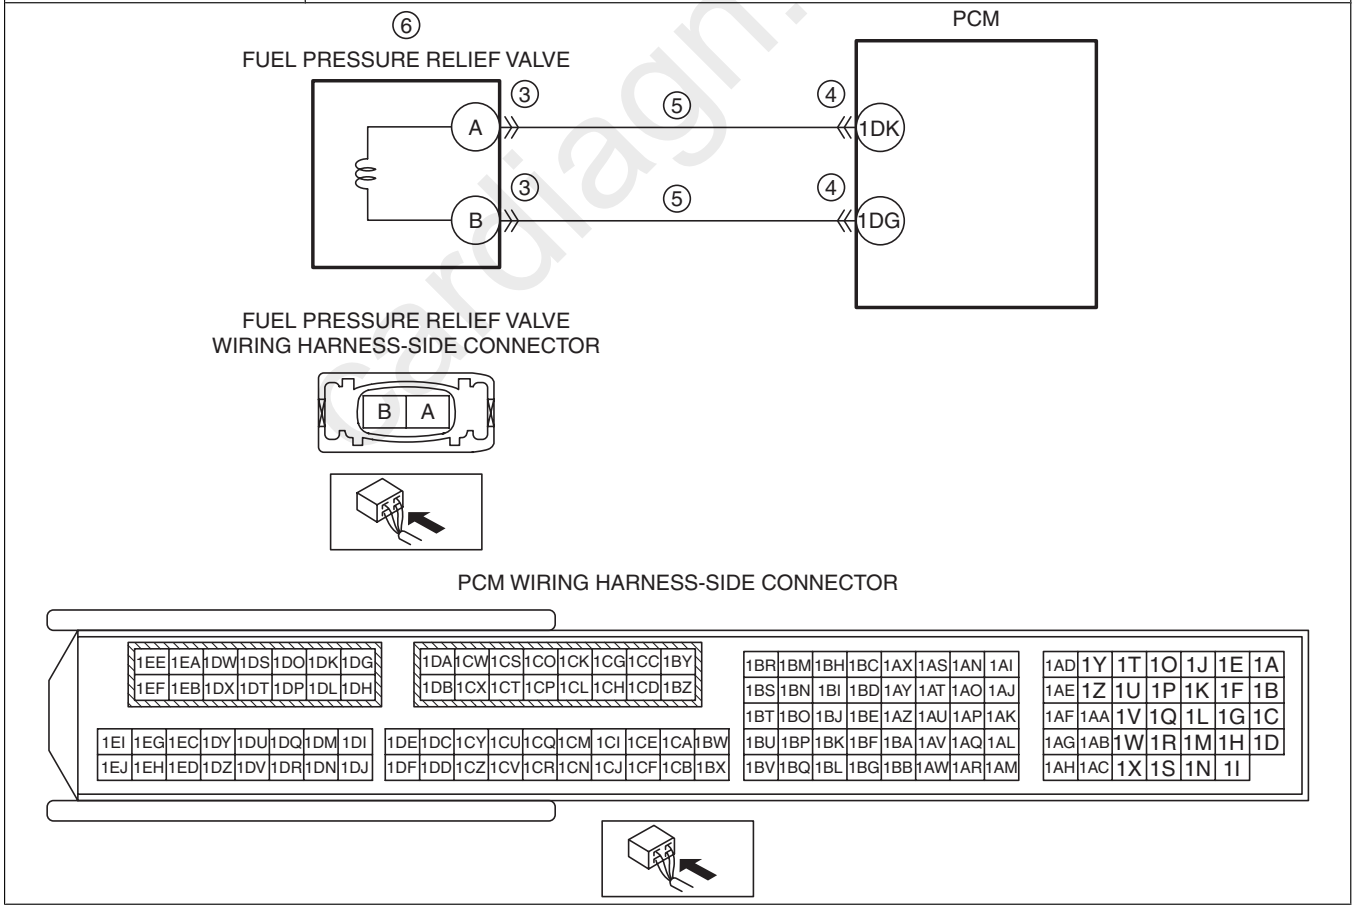

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD VEHICLE STATUS WHEN DTC WAS DETECTED TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture of the PC function. • Record the freeze frame data/snap shot data.	—	Go to the next step.
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**INSPECT FUEL PRESSURE RELIEF VALVE CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the fuel pressure relief valve connector. • Inspect for poor connection (such as damaged/pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 7.
		No	Go to the next step.
4	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 7.
		No	Go to the next step.
5	**INSPECT FUEL PRESSURE RELIEF VALVE CIRCUIT FOR OPEN CIRCUIT** • Verify that the fuel pressure relief valve and PCM connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side): — Fuel pressure relief valve terminal A—PCM terminal 1DK — Fuel pressure relief valve terminal B—PCM terminal 1DG • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Fuel pressure relief valve terminal A—PCM terminal 1DK • Fuel pressure relief valve terminal B—PCM terminal 1DG **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 7.
6	**INSPECT FUEL PRESSURE RELIEF VALVE** • Inspect the fuel pressure relief valve. (See FUEL PRESSURE RELIEF VALVE INSPECTION [SKYACTIV-D 1.5].) • Is there any malfunction?	Yes	Replace the common rail, then go to the next step. (See COMMON RAIL REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
		No	Go to the next step.
7	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Start the engine. • Fully depress (100%) the accelerator pedal with the shift lever in neutral (MTX)/selector lever in P or N position (ATX) then release the pedal immediately. Repeat this procedure 8 times. • Perform the Pending Trouble Code Access Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Is the PENDING CODE for this DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to the next step.
		No	Go to the next step.

cardiagn.com

STEP	INSPECTION		ACTION
8	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.

cardiagn.com