
DTC P06DC:00 [SKYACTIV-D 1.5]

id0102q2214000

DTC P06DC: 00	**Engine oil solenoid valve control circuit high input**
DETECTION CONDITION	• If the PCM detects that the engine oil solenoid valve control current at the PCM terminal 1CO is **3.5 A or more** for **5 s** with the following condition met, the PCM determines that the engine oil solenoid valve circuit voltage is high. **MONITORING CONDITIONS** — Battery voltage: **8—16 V** — **0.5 s** have elapsed after the ignition was switched ON (engine off or on) — Engine oil solenoid valve control duty value: **5% or more** **Diagnostic support note** • This is a continuous monitor (CCM). • The check engine light does not illuminate. • FREEZE FRAME DATA/Snapshot data is not available. • DTC is not stored in the PCM memory.
FAIL-SAFE FUNCTION	• PCM restricts engine torque.
POSSIBLE CAUSE	• Engine oil solenoid valve connector or terminals malfunction • PCM connector or terminals malfunction • Short to power supply in wiring harness between engine oil solenoid valve terminal B and PCM terminal 1CO • Engine oil solenoid valve malfunction • PCM malfunction

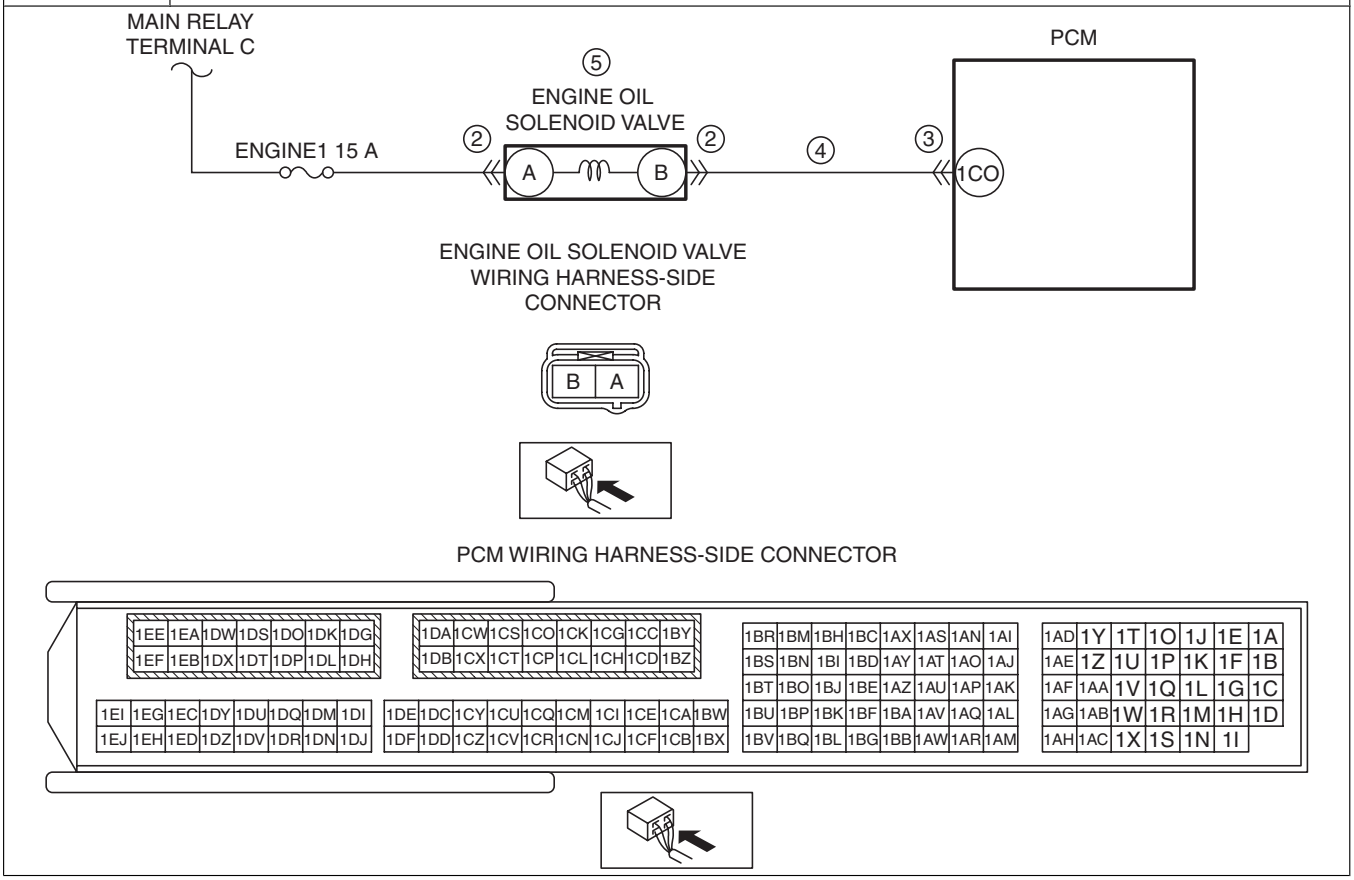

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.

STEP	INSPECTION		ACTION
2	**INSPECT ENGINE OIL SOLENOID VALVE CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the engine oil solenoid valve connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 6.
		No	Go to the next step.
3	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 6.
		No	Go to the next step.
4	**INSPECT ENGINE OIL SOLENOID VALVE CONTROL CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the engine oil solenoid valve and PCM connectors are disconnected. • Switch the ignition ON (engine off). **Note** • Another DTC may be stored by the PCM detecting an open circuit. • Measure the voltage at the engine oil solenoid valve terminal B (wiring harness-side). • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between engine oil solenoid valve terminal B and PCM terminal 1CO. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to power supply. Go to Step 6.
5	**INSPECT ENGINE OIL SOLENOID VALVE** • Inspect the engine oil solenoid valve. (See ENGINE OIL SOLENOID VALVE INSPECTION [SKYACTIV-D 1.5].) • Is there any malfunction?	Yes	Replace the engine oil solenoid valve, then go to the next step. (See ENGINE OIL SOLENOID VALVE REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)
		No	Go to the next step.
6	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Perform the KOEO or KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to the next step.
		No	Go to the next step.
7	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.