

DTC P055F:00 [SKYACTIV-D 1.5]

id0102q2215300

DTC P055F: 00	Engine oil pressure control circuit low oil pressure
DETECTION CONDITION	• The engine oil pressure is the specified value or less after the specified time has elapsed since the engine was started. — Engine speed is **2,300 rpm or less**: **70 kPa {0.71 kgf/cm^2, 10 psi}** — Engine speed is **2,300 to 2,500 rpm**: **70—90 kPa {0.72—0.91 kgf/cm^2, 11—13 psi}** (engine speed is proportional to specified value of engine oil pressure) — Engine speed is **2,500 to 3,500 rpm**: **90—172.5 kPa {0.92—1.75 kgf/cm^2, 14.00—25.01 psi}** (engine speed is proportional to specified value of engine oil pressure) — Engine speed is **3,500 to 5,500 rpm**: **172.5—182.5 kPa {1.759—1.860 kgf/cm^2, 25.02—26.46 psi}** (engine speed is proportional to specified value of engine oil pressure) • Reference:  **Diagnostic support note** • This is a continuous monitor (CCM). • The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. • FREEZE FRAME DATA/Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	• PCM restricts engine torque.
POSSIBLE CAUSE	• Engine oil leakage • Improper engine oil level • Engine oil temperature sensor/engine oil pressure sensor connector or terminals malfunction • Short to ground in wiring harness between the following terminals: — Engine oil temperature sensor/engine oil pressure sensor terminal A—PCM terminal 1BT — Engine oil temperature sensor/engine oil pressure sensor terminal D—PCM terminal 1AB • PCM connector or terminals malfunction • Open circuit in wiring harness between engine oil temperature sensor/engine oil pressure sensor terminal A and PCM terminal 1BT • Engine oil pressure sensor malfunction • Oil strainer clogging • Oil pump malfunction • PCM malfunction

DTC P055F: 00	Engine oil pressure control circuit low oil pressure

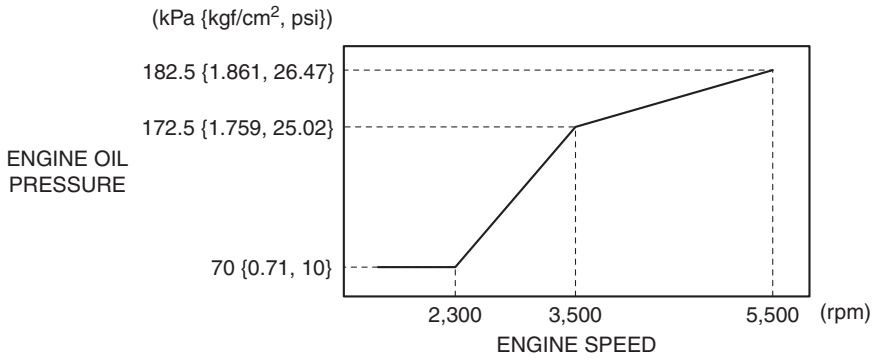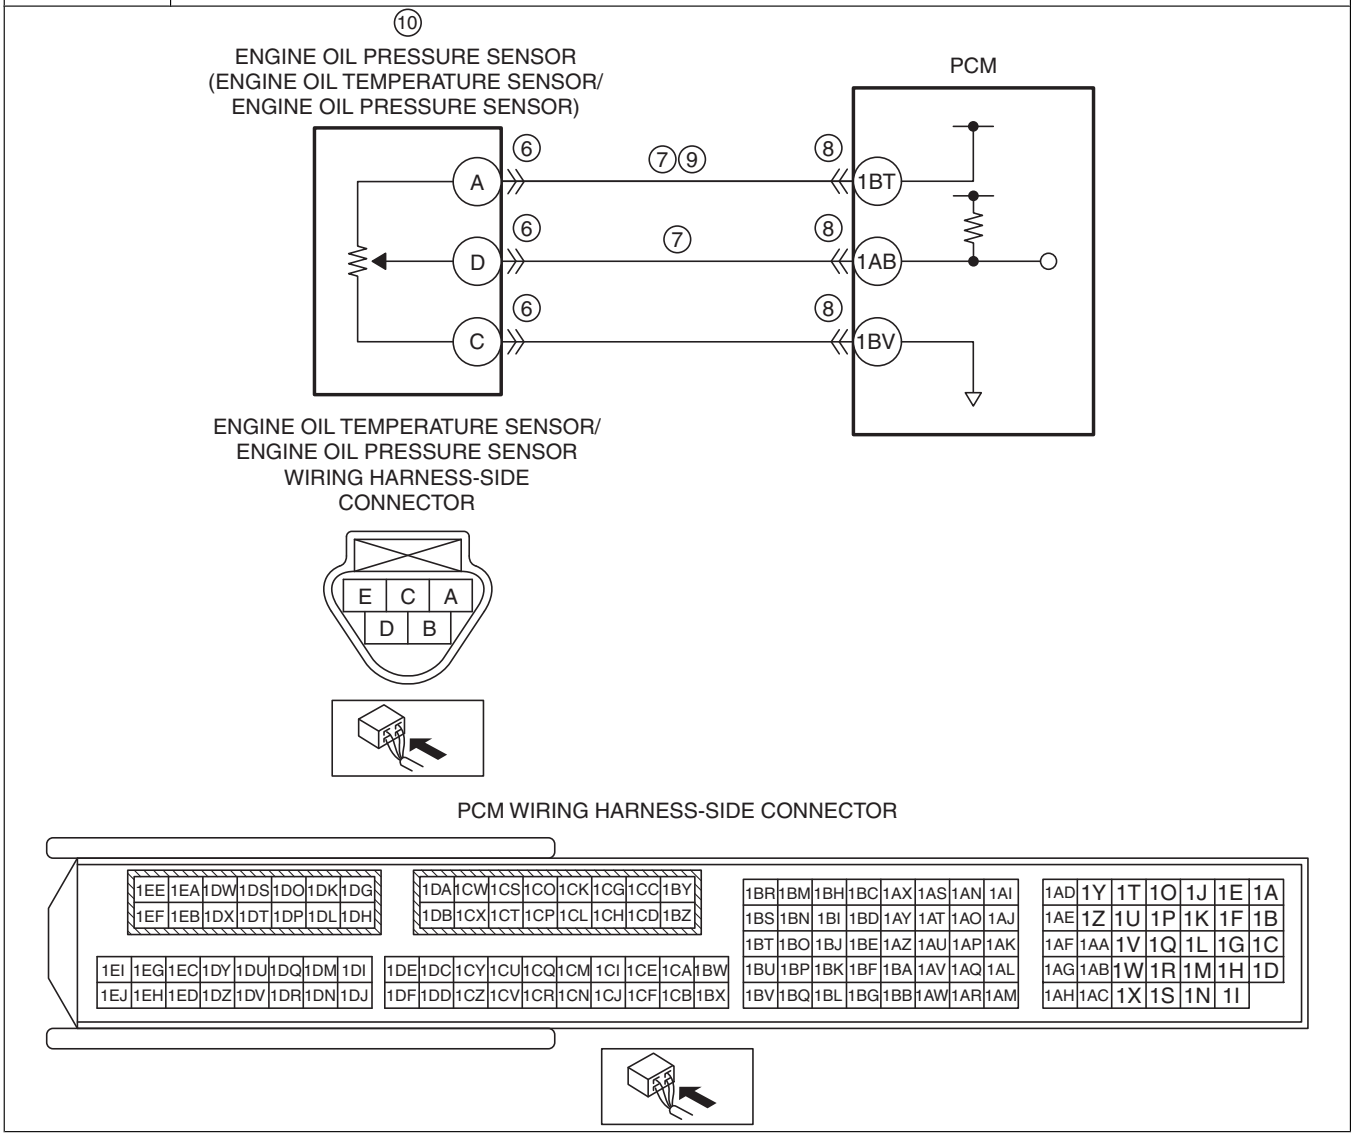

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD VEHICLE STATUS AT TIME OF DTC DETECTION TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the FREEZE FRAME DATA/snapshot data on the repair order.	—	Go to the next step.
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.

STEP	INSPECTION		ACTION
3	**VERIFY RELATED PENDING CODE AND/OR DTC** • Switch the ignition off, then ON (engine off). • Perform the Pending Trouble Code Access Procedure and DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Are any other PENDING CODEs and/or DTCs present?	Yes	Go to the applicable PENDING CODE or DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	Go to the next step.
4	**INSPECT ENGINE OIL LEAKAGE** • Start the engine. • Verify that there is no engine oil leakage in the hydraulic circuit. • Is there any leakage?	Yes	Repair or replace the malfunctioning part according to the inspection results, then add genuine engine oil. Go to the step 12.
		No	Go to the next step.
5	**INSPECT ENGINE OIL LEVEL** • Inspect the engine oil level. (See ENGINE OIL LEVEL INSPECTION [SKYACTIV-D 1.5].) • Is the engine oil level sufficient?	Yes	Go to the next step.
		No	Add genuine engine oil, then go to the next step.
6	**INSPECT ENGINE OIL TEMPERATURE SENSOR/ENGINE OIL PRESSURE SENSOR CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the engine oil temperature sensor/ engine oil pressure sensor connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 12.
		No	Go to the next step.
7	**INSPECT ENGINE OIL PRESSURE SENSOR CIRCUIT FOR SHORT TO GROUND** • Verify that the engine oil temperature sensor/ engine oil pressure sensor connector is disconnected. • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — Engine oil temperature sensor/engine oil pressure sensor terminal A — Engine oil temperature sensor/engine oil pressure sensor terminal D • Is there continuity?	Yes	If the short to ground circuit could be detected in the wiring harness: • Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: — Engine oil temperature sensor/engine oil pressure sensor terminal A—PCM terminal 1BT — Engine oil temperature sensor/engine oil pressure sensor terminal D—PCM terminal 1AB **If there is a common connector:** — Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. — Repair or replace the malfunctioning part. **If there is no common connector:** — Repair or replace the wiring harness which has a short to ground. If the short to ground circuit could not be detected in the wiring harness: • Replace the PCM (short to ground in the PCM internal circuit). (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to Step 12.
		No	Go to the next step.
8	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 12.
		No	Go to the next step.

STEP	INSPECTION		ACTION
9	**INSPECT ENGINE OIL PRESSURE SENSOR POWER SUPPLY CIRCUIT FOR OPEN CIRCUIT** • Verify that the engine oil temperature sensor/ engine oil pressure sensor and PCM connectors are disconnected. • Inspect for continuity between engine oil temperature sensor/engine oil pressure sensor terminal A (wiring harness-side) and PCM terminal 1BT (wiring harness-side). • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between engine oil temperature sensor/engine oil pressure sensor terminal A and PCM terminal 1BT. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 12.
10	**INSPECT ENGINE OIL PRESSURE SENSOR** • Reconnect all disconnected connectors. • Inspect the engine oil pressure sensor. (See ENGINE OIL PRESSURE SENSOR INSPECTION [SKYACTIV-D 1.5].) • Is there any malfunction?	Yes	Replace the engine oil temperature sensor/engine oil pressure sensor, then go to Step 12. (See ENGINE OIL TEMPERATURE SENSOR/ENGINE OIL PRESSURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
		No	Go to the next step.
11	**INSPECT OIL STRAINER** • Inspect the oil strainer for clogging. (See OIL PUMP REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) • Is there any malfunction?	Yes	Replace the oil strainer, then go to the next step. (See OIL PUMP REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
		No	Replace the oil pump, then go to the next step. (See OIL PUMP REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
12	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Start the engine and warm it up completely. **Caution** **• While performing this step, always operate the vehicle in a safe and lawful manner.** **• When the M-MDS is used to observe monitor system status while driving, be sure to have another technician with you, or record the data in the M-MDS using the PID/DATA MONITOR AND RECORD capturing function and inspect later.** • Drive the vehicle under the FREEZE FRAME DATA/snapshot data condition. • Perform the DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to the next step.
		No	Go to the next step.
13	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.