
DTC P06DD:00 [SKYACTIV-D 1.5]

id0102q2215400

DTC P06DD: 00	**Engine oil pressure switch control circuit high input**
DETECTION CONDITION	• When the following condition is met, the engine oil pressure is **exceeds 200 kPa {2.04 kgf/cm^2, 29.0 psi}** for **5 s**. **MONITORING CONDITIONS** — Engine oil temperature sensor: Normal — Engine oil pressure sensor: Normal — During low hydraulic pressure control (during engine oil solenoid valve operation) — Engine oil temperature: **20 °C {68 °F} or more** — Engine speed is specified value or more. • Idle speed or more when engine oil temperature is **20 °C {68 °F}** (when cold) • **2,000 rpm or more** when engine oil temperature is **90 °C {194 °F}** (when hot) • **4,000 rpm or more** when engine oil temperature is **135 °C {275 °F} or more** (when hot) **Diagnostic support note** • This is an intermittent monitor (other). • The check engine light does not illuminate. • FREEZE FRAME DATA/Snapshot data is not available. • DTC is not stored in the PCM memory.
FAIL-SAFE FUNCTION	Not applicable
POSSIBLE CAUSE	• Engine oil solenoid valve connector or terminals malfunction • Engine oil temperature sensor/engine oil pressure sensor connector or terminals malfunction • Short to ground or open circuit in engine oil solenoid valve power supply circuit — Short to ground in wiring harness between ENGINE1 15 A fuse and engine oil solenoid valve terminal A — ENGINE1 15 A fuse malfunction — Open circuit in wiring harness between main relay terminal C and engine oil solenoid valve terminal A • Short to ground in wiring harness between the following terminals: — Engine oil solenoid valve terminal B—PCM terminal 1CO — Engine oil temperature sensor/engine oil pressure sensor terminal A—PCM terminal 1BT — Engine oil temperature sensor/engine oil pressure sensor terminal D—PCM terminal 1AB • PCM connector or terminals malfunction • Open circuit in wiring harness between the following terminals: — Engine oil solenoid valve terminal B—PCM terminal 1CO — Engine oil temperature sensor/engine oil pressure sensor terminal A—PCM terminal 1BT • Engine oil solenoid valve malfunction • Engine oil pressure sensor malfunction • Oil pump malfunction • PCM malfunction

DTC P06DD: 00	Engine oil pressure switch control circuit high input

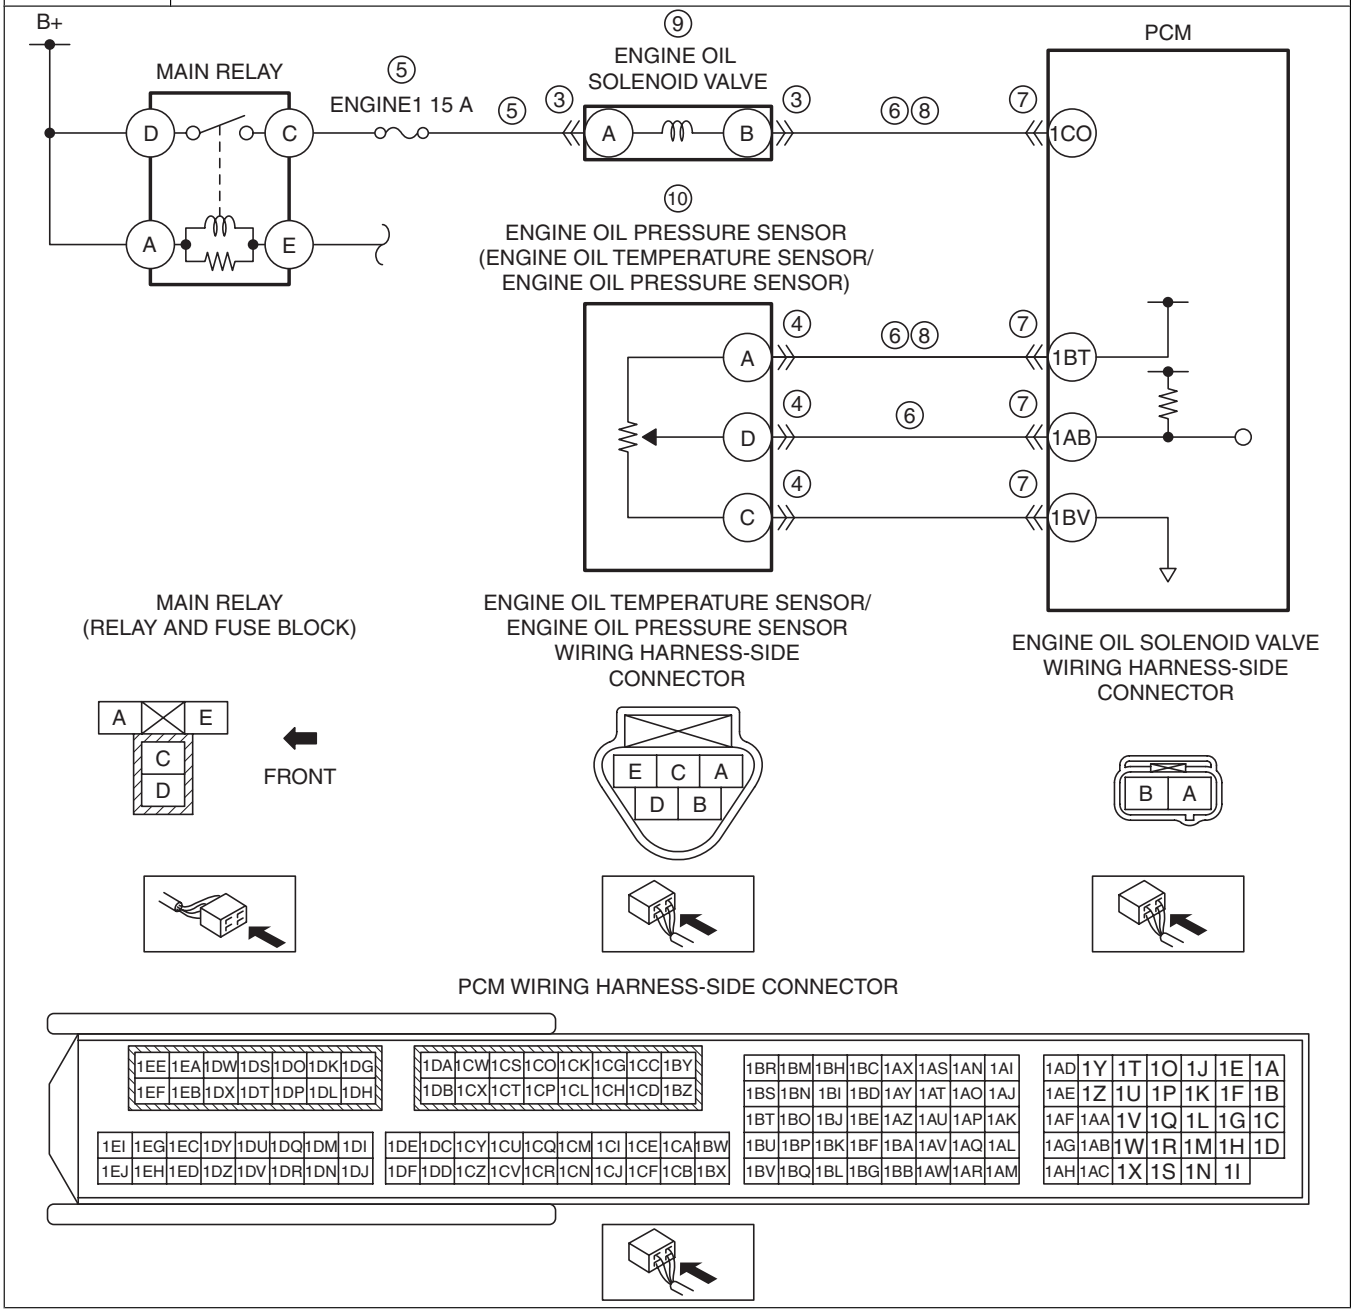

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
2	**VERIFY RELATED PENDING CODE AND/OR DTC** • Switch the ignition off, then ON (engine off). • Perform the Pending Trouble Code Access Procedure and DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Are any other PENDING CODEs and/or DTCs present?	Yes	Go to the applicable PENDING CODE or DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	Go to the next step.

STEP	INSPECTION		ACTION
3	**INSPECT ENGINE OIL SOLENOID VALVE CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the engine oil solenoid valve connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 11.
		No	Go to the next step.
4	**INSPECT ENGINE OIL TEMPERATURE SENSOR/ENGINE OIL PRESSURE SENSOR CONNECTOR CONDITION** • Disconnect the engine oil temperature sensor/ engine oil pressure sensor connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 11.
		No	Go to the next step.
5	**INSPECT ENGINE OIL SOLENOID VALVE POWER SUPPLY CIRCUIT FOR SHORT TO GROUND OR OPEN CIRCUIT** • Verify that the engine oil solenoid valve and engine oil temperature sensor/engine oil pressure sensor connectors are disconnected. • Switch the ignition ON (engine off). **Note** • Another DTC may be stored by the PCM detecting an open circuit. • Measure the voltage at the engine oil solenoid valve terminal A (wiring harness-side). • Is the voltage **B+**?	Yes	Go to the next step.
		No	Inspect the ENGINE1 15 A fuse. • If the fuse is blown: — Refer to the wiring diagram and verify whether or not there is a common connector between ENGINE1 15 A fuse and engine oil solenoid valve terminal A. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. • Replace the fuse. • If the fuse is damaged: — Replace the fuse. • If the fuse is normal: — Refer to the wiring diagram and verify whether or not there is a common connector between main relay terminal C and engine oil solenoid valve terminal A. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 11.

STEP	INSPECTION		ACTION
6	**INSPECT ENGINE OIL SOLENOID VALVE CIRCUIT AND ENGINE OIL PRESSURE SENSOR CIRCUIT FOR SHORT TO GROUND** • Verify that the engine oil solenoid valve and engine oil temperature sensor/engine oil pressure sensor connectors are disconnected. • Switch the ignition off. • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — Engine oil solenoid valve terminal B — Engine oil temperature sensor/engine oil pressure sensor terminal A — Engine oil temperature sensor/engine oil pressure sensor terminal D • Is there continuity?	Yes	If the short to ground circuit could be detected in the wiring harness: • Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: — Engine oil solenoid valve terminal B—PCM terminal 1CO — Engine oil temperature sensor/engine oil pressure sensor terminal A—PCM terminal 1BT — Engine oil temperature sensor/engine oil pressure sensor terminal D—PCM terminal 1AB **If there is a common connector:** — Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. — Repair or replace the malfunctioning part. **If there is no common connector:** — Repair or replace the wiring harness which has a short to ground. If the short to ground circuit could not be detected in the wiring harness: • Replace the PCM (short to ground in the PCM internal circuit). (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to Step 11.
		No	Go to the next step.
7	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 11.
		No	Go to the next step.
8	**INSPECT ENGINE OIL SOLENOID VALVE CIRCUIT AND ENGINE OIL PRESSURE SENSOR CIRCUIT FOR OPEN CIRCUIT** • Verify that the engine oil solenoid valve and engine oil temperature sensor/engine oil pressure sensor and PCM connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side): — Engine oil solenoid valve terminal B—PCM terminal 1CO — Engine oil temperature sensor/engine oil pressure sensor terminal A—PCM terminal 1BT • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Engine oil solenoid valve terminal B—PCM terminal 1CO • Engine oil temperature sensor/engine oil pressure sensor terminal A—PCM terminal 1BT **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 11.
9	**INSPECT ENGINE OIL SOLENOID VALVE** • Inspect the engine oil solenoid valve. (See ENGINE OIL SOLENOID VALVE INSPECTION [SKYACTIV-D 1.5].) • Is there any malfunction?	Yes	Replace the engine oil solenoid valve, then go to Step 11. (See ENGINE OIL SOLENOID VALVE REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)
		No	Go to the next step.
10	**INSPECT ENGINE OIL PRESSURE SENSOR** • Reconnect all disconnected connectors. • Inspect the engine oil pressure sensor. (See ENGINE OIL PRESSURE SENSOR INSPECTION [SKYACTIV-D 1.5].) • Is there any malfunction?	Yes	Replace the engine oil temperature sensor/engine oil pressure sensor, then go to the next step. (See ENGINE OIL TEMPERATURE SENSOR/ENGINE OIL PRESSURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
		No	Replace the oil pump, then go to the next step. (See OIL PUMP REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

STEP	INSPECTION		ACTION
11	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Start the engine and warm it up completely. **Caution** **• While performing this step, always operate the vehicle in a safe and lawful manner.** **• When the M-MDS is used to observe monitor system status while driving, be sure to have another technician with you, or record the data in the M-MDS using the PID/DATA MONITOR AND RECORD capturing function and inspect later.** • Drive the vehicle under the FREEZE FRAME DATA/snapshot data condition. • Perform the DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to the next step.
		No	Go to the next step.
12	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.