
DTC P009C:00 [SKYACTIV-D 1.5]

id0102q2228800

DTC P009C:00	Fuel pressure relief valve control circuit low input
DETECTION CONDITION	• When the following condition is met, control voltage at fuel pressure relief valve as **1.2 V or less** for countinuous **1 s** (engine off) or continuous **8 times** (engine on). **MONITORING CONDITIONS** — Battery voltage: **8 V or more** — **2 s or more** have elapsed since PCM launch — Any one of the following conditions is met: • Fuel pressure when engine speed is **1,800 rpm or more** is **211 MPa {2152 kgf/cm^2, 30604 psi} or more** • Engine speed of **3,300 rpm or less** (also when vehicle is stopped) — The following DTCs are not detected: • PCM internal processor malfunction: P0606:00 • Internal PCM malfunction: P062B:00 **Diagnostic support note** • This is an intermittent monitor (fuel system). • The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. • FREEZE FRAME DATA/Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	• Inhibits engine-stop by operating the i-stop function.
POSSIBLE CAUSE	• Fuel pressure relief valve connector or terminals malfunction • Short to ground in wiring harness between the following terminals: — Fuel pressure relief valve terminal A—PCM terminal 1DK — Fuel pressure relief valve terminal B—PCM terminal 1DG • PCM connector or terminals malfunction • Fuel pressure relief valve malfunction • PCM malfunction

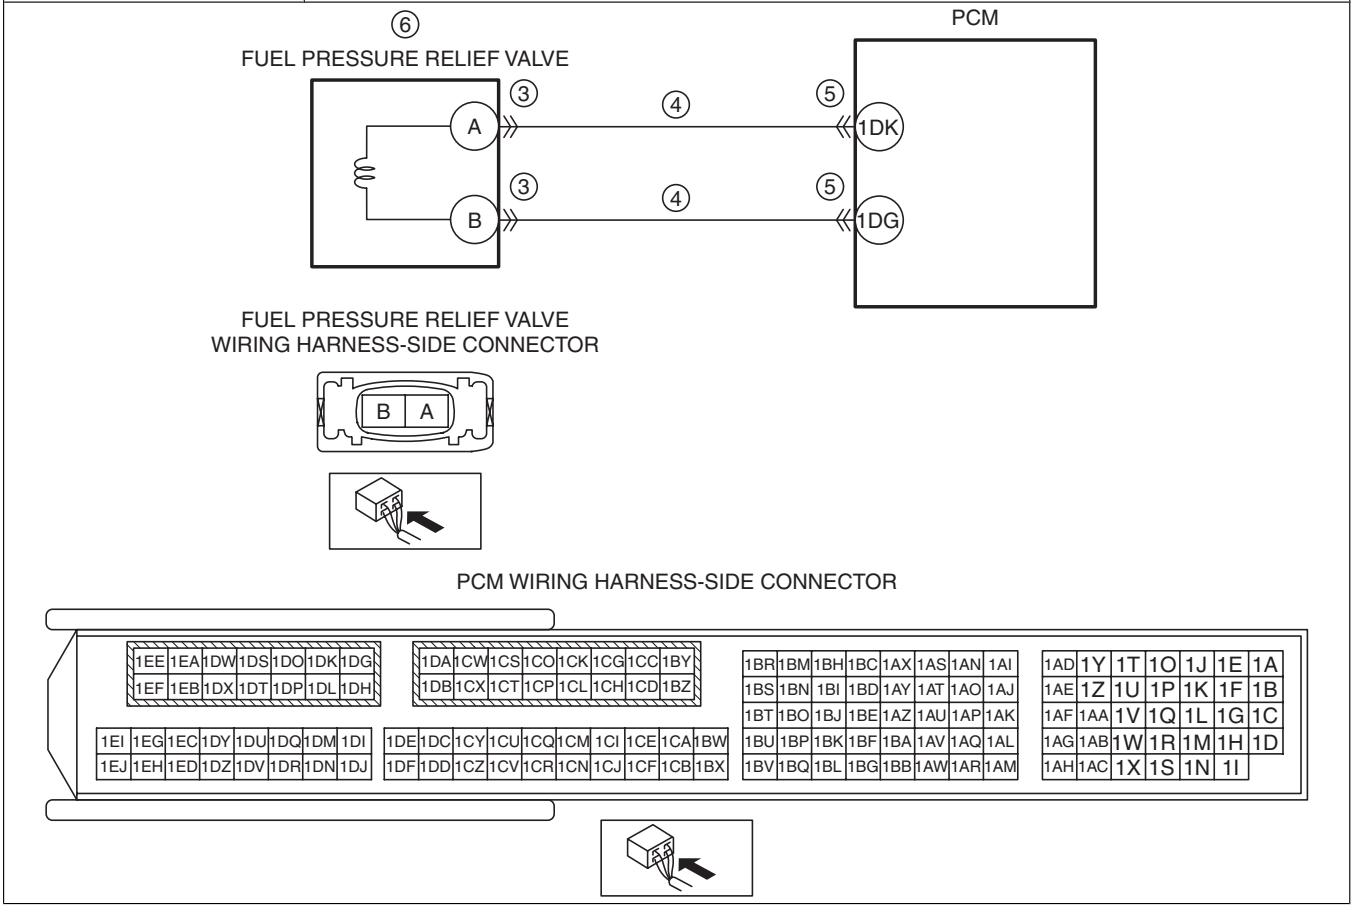

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD VEHICLE STATUS WHEN DTC WAS DETECTED TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture of the PC function. • Record the freeze frame data/snap shot data.	—	Go to the next step.
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**INSPECT FUEL PRESSURE RELIEF VALVE CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the fuel pressure relief valve connector. • Inspect for poor connection (such as damaged/pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 7.
		No	Go to the next step.
4	**INSPECT FUEL PRESSURE RELIEF VALVE CIRCUIT FOR OPEN CIRCUIT** • Verify that the fuel pressure relief valve and PCM connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — Fuel pressure relief valve terminal A—PCM terminal 1DK — Fuel pressure relief valve terminal B—PCM terminal 1DG • Is there continuity?	Yes	Go to the next step.
		No	**If the short to ground circuit could be detected in the wiring harness:** • Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: — Fuel pressure relief valve terminal A—PCM terminal 1DK — Fuel pressure relief valve terminal B—PCM terminal 1DG **If there is a common connector:** — Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. — Repair or replace the malfunctioning part. **If there is no common connector:** — Repair or replace the wiring harness which has a short to ground. **If the short to ground circuit could not be detected in the wiring harness:** • Replace the PCM (short to ground in the PCM internal circuit). (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5]. Go to Step 7.
5	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 7.
		No	Go to the next step.
6	**INSPECT FUEL PRESSURE RELIEF VALVE** • Inspect the fuel pressure relief valve. (See FUEL PRESSURE RELIEF VALVE INSPECTION [SKYACTIV-D 1.5].) • Is there any malfunction?	Yes	Replace the common rail, then go to the next step. (See COMMON RAIL REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
		No	Go to the next step.

STEP	INSPECTION		ACTION
7	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Perform the KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to the next step.
		No	Go to the next step.
8	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.