
DTC P0698:00 [SKYACTIV-D 1.5]

id0102q2268400

DTC P0698:00	Constant voltage power supply circuit low input
DETECTION CONDITION	• When the following condition is met, the output voltage of the **5 V** power supply terminal **2.45 V** or less for a continuous **1 s**: **MONITORING CONDITIONS** — Battery voltage: **8 V or more** — **0.5 s** have elapsed after the ignition was switched ON (under the engine on or off) **Diagnostic support note** • This is a continuous monitor (CCM). • The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. • FREEZE FRAME DATA/Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	• PCM restricts engine torque. • Inhibits the EGR control. • Fully open the intake shutter valve. • Inhibits engine-stop by operating the i-stop function.
POSSIBLE CAUSE	• Fuel pressure sensor connector or terminals malfunction • HP-EGR control valve connector or terminals malfunction • Short to ground in wiring harness between the following terminals: — Fuel pressure sensor terminal A—PCM terminal 1AF — HP-EGR control valve terminal B—PCM terminal 1BE — LP-EGR control valve terminal C—PCM terminal 1AP • LP-EGR control valve connector or terminals malfunction: • PCM connector or terminals malfunction • PCM malfunction

cardiagn.com

DTC P0698:00	Constant voltage power supply circuit low input

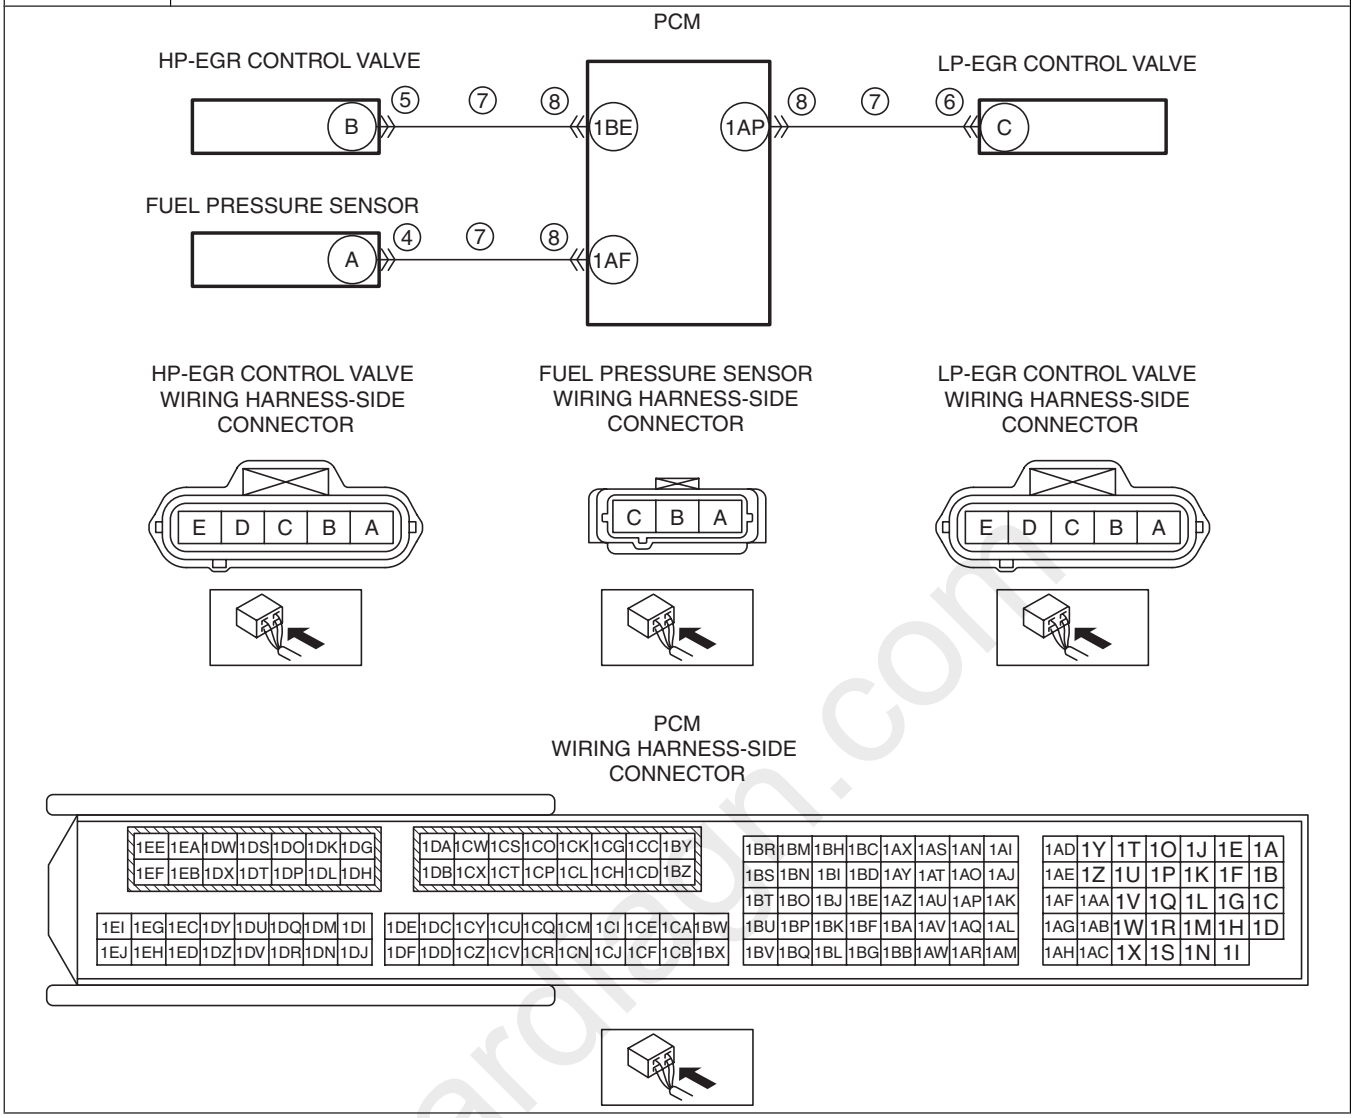

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD VEHICLE STATUS WHEN DTC WAS DETECTED TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture of the PC function. • Record the freeze frame data/snap shot data.	—	Go to the next step.
2	**VERIFY RELATED REPAIR INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**VERIFY RELATED PENDING CODE AND/OR DTC** • Switch the ignition off, then ON (engine off). • Perform the Pending Trouble Code Access Procedure and DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Are any other PENDING CODEs and/or DTCs present?	Yes	Go to the applicable PENDING CODE or DTC inspection. (SeeDTC TABLE [SKYACTIV-D 1.5].)
		No	Go to the next step.

carmanuals.com

STEP	INSPECTION		ACTION
4	**INSPECT FUEL PRESSURE SENSOR CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the fuel pressure sensor connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 9.
		No	Go to the next step.
5	**INSPECT HP-EGR CONTROL VALVE CONNECTOR CONDITION** • Disconnect the HP-EGR control valve connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 9.
		No	Go to the next step.
6	**INSPECT LP-EGR CONTROL VALVE CONNECTOR CONDITION** • Disconnect the LP-EGR control valve connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 9.
		No	Go to the next step.
7	**INSPECT EACH POWER SUPPLY CIRCUIT FOR SHORT TO GROUND** • Verify that the fuel pressure sensor, HP-EGR control valve and LP-EGR control valve position sensor connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — Fuel pressure sensor terminal A — HP-EGR control valve terminal B — LP-EGR control valve terminal C • Is there continuity?	Yes	If the short to ground circuit could be detected in the wiring harness: • Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: — Fuel pressure sensor terminal A—PCM terminal 1AF — HP-EGR control valve terminal B—PCM terminal 1BE — LP-EGR control valve terminal C—PCM terminal 1AP **If there is a common connector:** — Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. — Repair or replace the malfunctioning part. **If there is no common connector:** — Repair or replace the wiring harness which has a short to ground. If the short to ground circuit could not be detected in the wiring harness: • Replace the PCM (short to ground in the PCM internal circuit). (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to Step 9.
		No	Go to the next step.
8	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to the next step.
		No	Go to the next step
9	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Perform the KOEO self test. (See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
		No	Go to the next step

cardiagn.com

STEP	INSPECTION		ACTION
10	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.

cardiagn.com