

DTC P0A07:00 [SKYACTIV-D 1.5]

id0102q2359800


DTC P0A07:00	Electric water pump control circuit high input
DETECTION CONDITION	• When the following conditions are met, the accumulated time under a condition in which the electric water pump control current exceeds **5.9 A is 5 s or more**. **MONITORING CONDITIONS** — All of the following conditions is met for 1min: • Battery voltage: **11—16 V** • Duty value of the electric water pump: **0—85 %** **Diagnostic support note** • This is a continuous monitor (other). • The check engine light does not illuminate. • FREEZE FRAME DATA/Snapshot data is not available. • DTC is not stored in the PCM memory.
FAIL-SAFE FUNCTION	Not applicable
POSSIBLE CAUSE	• Electric water pump connector or terminals malfunction • PCM connector or terminals malfunction • Short to power supply circuit in wiring harness between the electric water pump terminal A and PCM terminal 1CP • Electric water pump malfunction • PCM malfunction

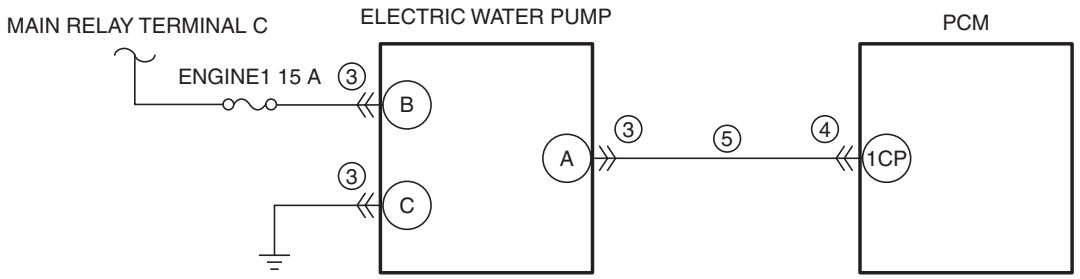

ELECTRIC WATER PUMP
WIRING HARNESS-SIDE CONNECTOR

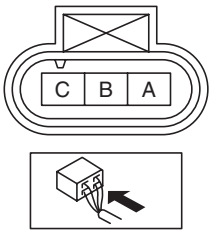

PCM
WIRING HARNESS-SIDE CONNECTOR

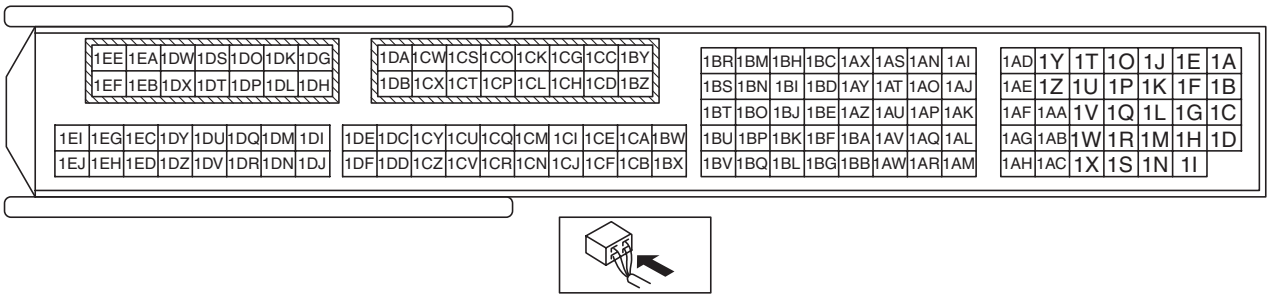

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD VEHICLE STATUS WHEN DTC WAS DETECTED TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture of the PC function. • Record the freeze frame data/snap shot data.	—	Go to the next step.
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**INSPECT ELECTRIC WATER PUMP CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the electric water pump connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 6.
		No	Go to the next step.
4	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 6.
		No	Go to the next step.
5	**INSPECT ELECTRIC WATER PUMP CONTROL CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the electric water pump and PCM connectors are disconnected. • Switch the ignition off. • Measure the voltage between electric water pump terminal A (wiring harness-side) and ground. • Is the voltage 0 V?	Yes	Replace the electric water pump, then go to the next step. (See ELECTRIC WATER PUMP REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)
		No	Refer to the wiring diagram and verify whether or not there is a common connector between electric water pump terminal A and PCM terminal 1CP. • If there is a common connector: — Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. — Repair or replace the malfunctioning part. • If there is no common connector: — Repair or replace the wiring harness which has a short to power supply. Go to the next step.
6	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Perform the KOEO self test. (See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to the next step.
		No	Go to the next step.
7	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.