
DTC P2580:00 [SKYACTIV-D 1.5]

id0102q2448400

DTC P2580:00	Speed sensor assy. (turbocharger) circuit low input
DETECTION CONDITION	• If the input voltage at the PCM terminal 1EJ is **less than 2.5 V** for **3.5 s**, the PCM determines that the speed sensor assy. (turbocharger) circuit is low. **MONITORING CONDITIONS** — **5 s** have elapsed after the engine was started. **Diagnostic support note** • This is a continuous monitor (Turbo system). • The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. • FREEZE FRAME DATA/Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	• Inhibits the EGR control. • Inhibits the diesel particulate filter regeneration control. • Inhibits engine-stop by operating the i-stop function.
POSSIBLE CAUSE	• Speed sensor assy. (turbocharger) connector or terminals malfunction • Short to ground in wiring harness between the following terminals: — Speed sensor assy. (turbocharger) terminal A—PCM terminal 1EJ — Speed sensor assy. (turbocharger) terminal D—PCM terminal 1BI • PCM connector or terminals malfunction • Speed sensor assy. (turbocharger) signal circuit and ground circuit are shorted to each other • Open circuit in wiring harness speed sensor assy. (turbocharger) terminal A—PCM terminal 1BI • Speed sensor assy. (turbocharger) malfunction • PCM malfunction

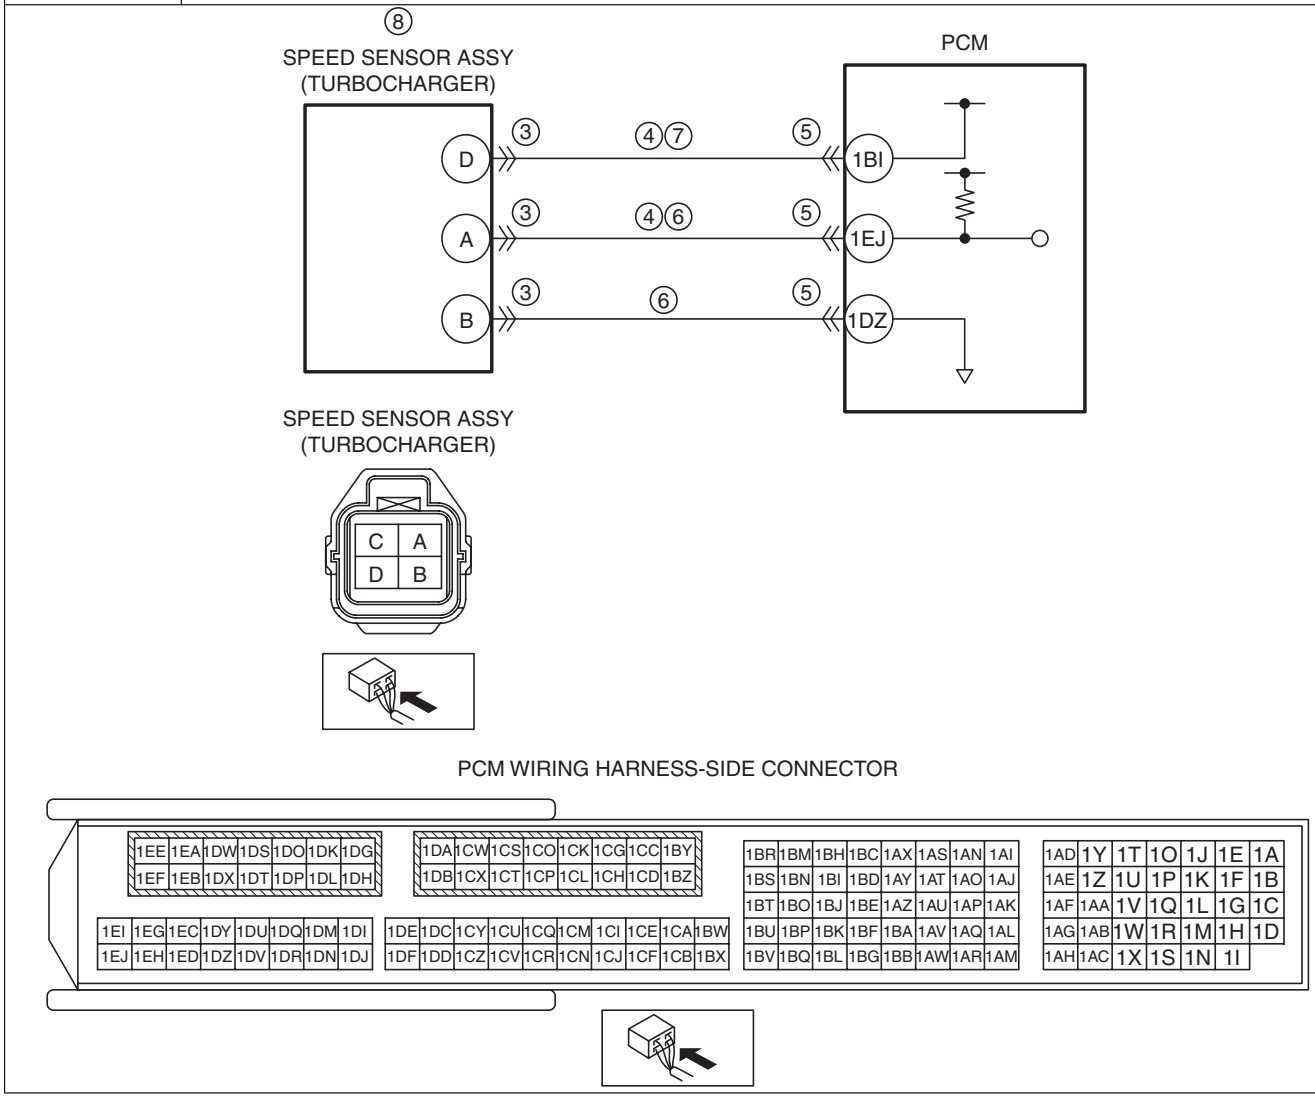

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD VEHICLE STATUS WHEN DTC WAS DETECTED TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture of the PC function. • Record the freeze frame data/snap shot data.	—	Go to the next step.
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**INSPECT SPEED SENSOR ASSY. (TURBOCHARGER) CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the speed sensor assy. (turbocharger) connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 9.
		No	Go to the next step.
4	**INSPECT SPEED SENSOR ASSY. (TURBOCHARGER) CIRCUIT FOR SHORT TO GROUND** • Verify that the speed sensor assy. (turbocharger) connector is disconnected. • Inspect for continuity between the following terminals (wiring harness-side) and body ground: — Speed sensor assy. (turbocharger) terminal A — Speed sensor assy. (turbocharger) terminal D • Is there continuity?	Yes	If the short to ground circuit could be detected in the wiring harness: • Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: — Speed sensor assy. (turbocharger) terminal A— PCM terminal 1EJ — Speed sensor assy. (turbocharger) terminal D— PCM terminal 1BI **If there is a common connector:** — Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. — Repair or replace the malfunctioning part. **If there is no common connector:** — Repair or replace the wiring harness which has a short to ground. **If the short to ground circuit could not be detected in the wiring harness:** — Replace the PCM (short to ground in the PCM internal circuit). (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to Step 9.
		No	Go to the next step.
5	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 9.
		No	Go to the next step.

STEP	INSPECTION		ACTION
6	**INSPECT SPEED SENSOR ASSY. (TURBOCHARGER) SIGNAL CIRCUIT AND GROUND CIRCUIT FOR SHORT TO EACH OTHER** • Verify that the Speed sensor assy. (turbocharger) and PCM connectors are disconnected. • Inspect for continuity between speed sensor assy. (turbocharger) terminals A and B (wiring harness-side). • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Speed sensor assy. (turbocharger) terminal A—PCM terminal 1EJ • Speed sensor assy. (turbocharger) terminal B—PCM terminal 1DZ **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to each other. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to each other. Go to Step 9.
		No	Go to the next step.
7	**INSPECT SPEED SENSOR ASSY. (TURBOCHARGER) POWER SUPPLY CIRCUIT FOR OPEN CIRCUIT** • Verify that the Speed sensor assy. (turbocharger) and PCM connectors are disconnected. • Inspect for continuity between speed sensor assy. (turbocharger) (wiring harness-side) and PCM terminal (wiring harness-side). • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between speed sensor assy. (turbocharger) terminal D and PCM terminal 1BI. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 9.
8	**INSPECT SPEED SENSOR ASSY. (TURBOCHARGER)** • Reconnect all disconnected connectors. • Inspect the speed sensor assy. (turbocharger). (See SPEED SENSOR ASSY (TURBOCHARGER WITH VARIABLE TURBINE GEOMETRY) INSPECTION [SKYACTIV-D 1.5].) • Is there any malfunction?	Yes	Replace the speed sensor assy. (turbocharger), then go to the next step. (See SPEED SENSOR ASSY (TURBOCHARGER WITH VARIABLE TURBINE GEOMETRY) REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
		No	Go to the next step.
9	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Perform the KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to the next step.
		No	Go to the next step.
10	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.