
DTC P0108:00 [SKYACTIV-D 1.5]

id0102q2701200

DTC P0108:00	MAP sensor circuit high input
DETECTION CONDITION	• The PCM monitors the input voltage from the MAP sensor. If the input voltage at the PCM terminal 1BA is **above 4.92 V** for **4 s**, the PCM determines that the MAP sensor circuit has a malfunction. **MONITORING CONDITIONS** — Battery voltage: **8—20 V** — **0.5 s** have elapsed after the ignition was switched ON (engine off or on) **Diagnostic support note** • This is an intermittent monitor (turbo system). • The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. • FREEZE FRAME DATA/Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	• PCM restricts engine torque. • Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Inhibits the boost control. • Inhibits the EGR control. • PCM restricts engine-transaxle integration control. (ATX) • Inhibits engine-stop by operating the i-stop function.
POSSIBLE CAUSE	• Turbocharger malfunction • MAP sensor/boost air temperature sensor connector or terminals malfunction • PCM connector or terminals malfunction • Short to power supply in wiring harness between MAP sensor/boost air temperature sensor terminal D and PCM terminal 1BA • MAP sensor power supply circuit and signal circuit are shorted to each other • Open circuit in wiring harness between the following terminals: — MAP sensor/boost air temperature sensor terminal C—PCM terminal 1AZ — MAP sensor/boost air temperature sensor terminal D—PCM terminal 1BA — MAP sensor/boost air temperature sensor terminal A—PCM terminal 1BB • MAP sensor malfunction • PCM malfunction

DTC P0108:00	MAP sensor circuit high input

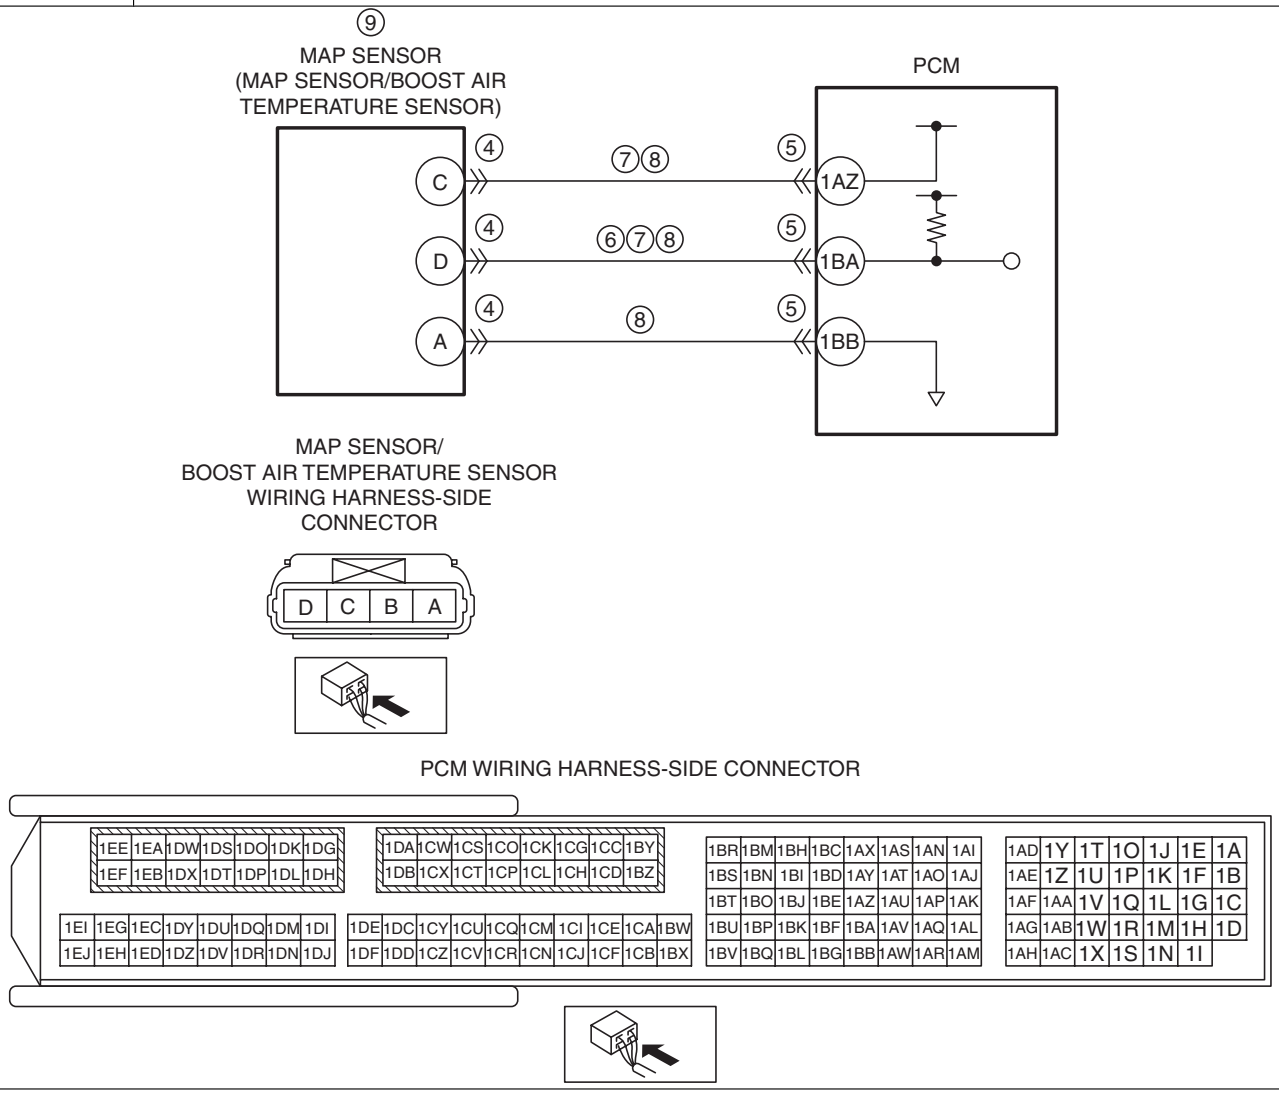

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD VEHICLE STATUS AT TIME OF DTC DETECTION TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the FREEZE FRAME DATA/snapshot data on the repair order.	—	Go to the next step.
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**VERIFY RELATED PENDING CODE AND/OR DTC** • Switch the ignition off, then ON (engine off). • Perform the Pending Trouble Code Access Procedure and DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Are any other PENDING CODEs and/or DTCs present?	Yes	Go to the applicable PENDING CODE or DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	Go to the next step.

STEP	INSPECTION		ACTION
4	**INSPECT MAP SENSOR/BOOST AIR TEMPERATURE SENSOR CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the MAP sensor/boost air temperature sensor connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 10.
		No	Go to the next step.
5	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 10.
		No	Go to the next step.
6	**INSPECT MAP SENSOR SIGNAL CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the MAP sensor/boost air temperature sensor and PCM connectors are disconnected. • Switch the ignition ON (engine off). **Note** • Another DTC may be stored by the PCM detecting an open circuit. • Measure the voltage at the MAP sensor/boost air temperature sensor terminal D (wiring harness-side). • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between MAP sensor/boost air temperature sensor terminal D and PCM terminal 1BA. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to power supply. Go to Step 10.
7	**INSPECT MAP SENSOR POWER SUPPLY CIRCUIT AND SIGNAL CIRCUIT FOR SHORT TO EACH OTHER** • Verify that the MAP sensor/boost air temperature sensor and PCM connectors are disconnected. • Switch the ignition off. • Inspect for continuity between MAP sensor/boost air temperature sensor terminals C and D (wiring harness-side). • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • MAP sensor/boost air temperature sensor terminal C—PCM terminal 1AZ • MAP sensor/boost air temperature sensor terminal D—PCM terminal 1BA **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to each other. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to each other. Go to Step 10.
		No	Go to the next step.
8	**INSPECT MAP SENSOR CIRCUIT FOR OPEN CIRCUIT** • Verify that the MAP sensor/boost air temperature sensor and PCM connectors are disconnected. • Inspect for continuity between the following terminals (wiring harness-side): — MAP sensor/boost air temperature sensor terminal C—PCM terminal 1AZ — MAP sensor/boost air temperature sensor terminal D—PCM terminal 1BA — MAP sensor/boost air temperature sensor terminal A—PCM terminal 1BB • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • MAP sensor/boost air temperature sensor terminal C—PCM terminal 1AZ • MAP sensor/boost air temperature sensor terminal D—PCM terminal 1BA • MAP sensor/boost air temperature sensor terminal A—PCM terminal 1BB **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 10.

STEP	INSPECTION		ACTION
9	**INSPECT MAP SENSOR** • Reconnect all disconnected connectors. • Inspect the MAP sensor. (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR INSPECTION [SKYACTIV-D 1.5].) • Is there any malfunction?	Yes	Replace the MAP sensor/boost air temperature sensor, then go to the next step. (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/BOOST AIR TEMPERATURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
		No	Go to the next step.
10	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Perform the KOEO or KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to the next step.
		No	Go to the next step.
11	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.