
DTC P0132:00 [SKYACTIV-D 1.5]

id0102q2702300

DTC P0132:00	A/F sensor circuit high input
DETECTION CONDITION	• When the following condition is met, the voltage at A/F sensor terminal A **exceeds 4.15 V** or the voltage at A/F sensor terminal B **exceeds 3.79 V** for a continuous **5 s**. **MONITORING CONDITIONS** — Battery voltage: **11—16 V** **Diagnostic support note** • This is an intermittent monitor (A/F sensor). • The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. • FREEZE FRAME DATA/Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	• PCM restricts engine torque. • Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Inhibits the EGR control. • Inhibits engine-stop by operating the i-stop function.
POSSIBLE CAUSE	• A/F sensor connector or terminals malfunction • PCM connector or terminals malfunction • Short to power supply in wiring harness between the following terminals: — A/F sensor terminal A—PCM terminal 1H — A/F sensor terminal B—PCM terminal 1I • A/F sensor malfunction • PCM malfunction

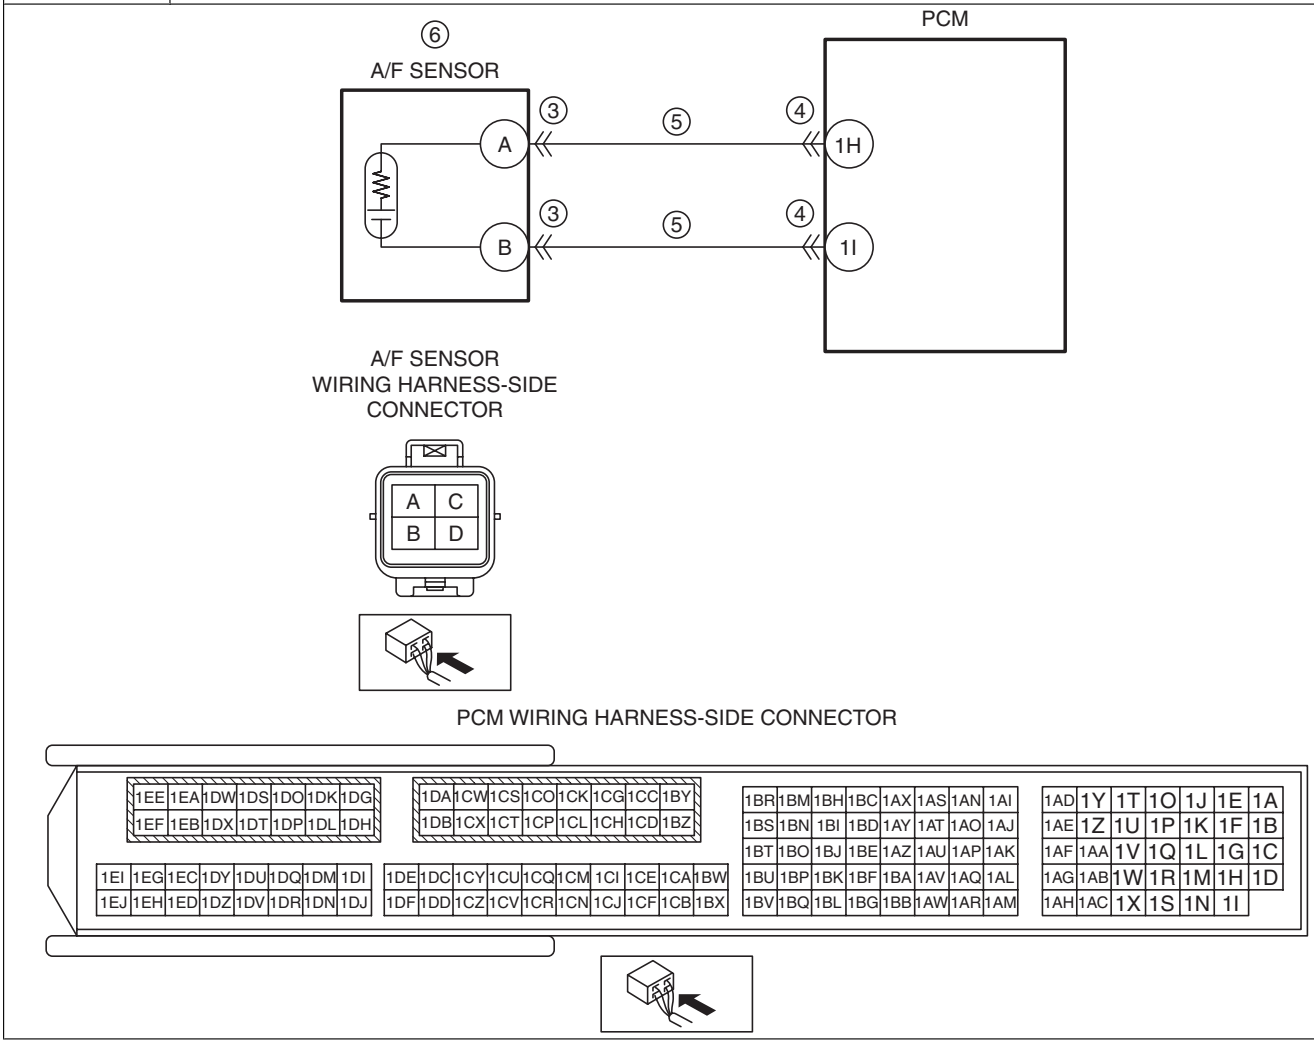

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD FREEZE FRAME DATA/SNAPSHOT DATA AND DIAGNOSTIC MONITORING TEST RESULTS TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the FREEZE FRAME DATA/snapshot data and DIAGNOSTIC MONITORING TEST RESULTS (A/F sensor related) on the repair order.	—	Go to the next step.
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**INSPECT A/F SENSOR CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the A/F sensor connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 7.
		No	Go to the next step.
4	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 7.
		No	Go to the next step.
5	**INSPECT A/F SENSOR CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the A/F sensor and PCM connectors are disconnected. • Switch the ignition ON (engine off). **Note** • Another DTC may be stored by the PCM detecting an open circuit. • Measure the voltage at the following terminals (wiring harness-side): — A/F sensor terminal A — A/F sensor terminal B • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • A/F sensor terminal A—PCM terminal 1H • A/F sensor terminal B—PCM terminal 1I **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to power supply. Go to Step 7.
6	**INSPECT A/F SENSOR** • Switch the ignition off. • Reconnect all disconnected connectors. • Inspect the A/F sensor. (See AIR FUEL RATIO (A/F) SENSOR INSPECTION [SKYACTIV-D 1.5].) • Is there any malfunction?	Yes	Replace the A/F sensor, then go to the next step. (See AIR FUEL RATIO (A/F) SENSOR REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)
		No	Go to the next step.
7	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Perform the KOEO or KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to the next step.
		No	Go to the next step.

STEP	INSPECTION		ACTION
8	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.