
DTC P2123:00 [SKYACTIV-D 1.5]

id0102q2708400

DTC P2123:00	APP sensor No.1 circuit high input
DETECTION CONDITION	• The PCM monitors the input voltage from APP sensor No.1. If the input voltage at the PCM terminal 2AN is **above 4.83 V** for **0.5 s**, the PCM determines that the APP sensor No.1 circuit input voltage is high. **MONITORING CONDITIONS** — Battery voltage: **8—20 V** — Ignition switched ON (engine off or on) **Diagnostic support note** • This is a continuous monitor (CCM). • The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. • FREEZE FRAME DATA/Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	• Limits the engine torque or the upper limit of the engine speed. • Inhibits engine-stop by operating the i-stop function.
POSSIBLE CAUSE	• APP sensor connector or terminals malfunction • PCM connector or terminals malfunction • Short to power supply in wiring harness between APP sensor terminal B and PCM terminal 2AN • APP sensor No.1 power supply circuit and signal circuit are shorted to each other • Open circuit in wiring harness between APP sensor terminal C and PCM terminal 2AO • APP sensor No.1 malfunction • PCM malfunction

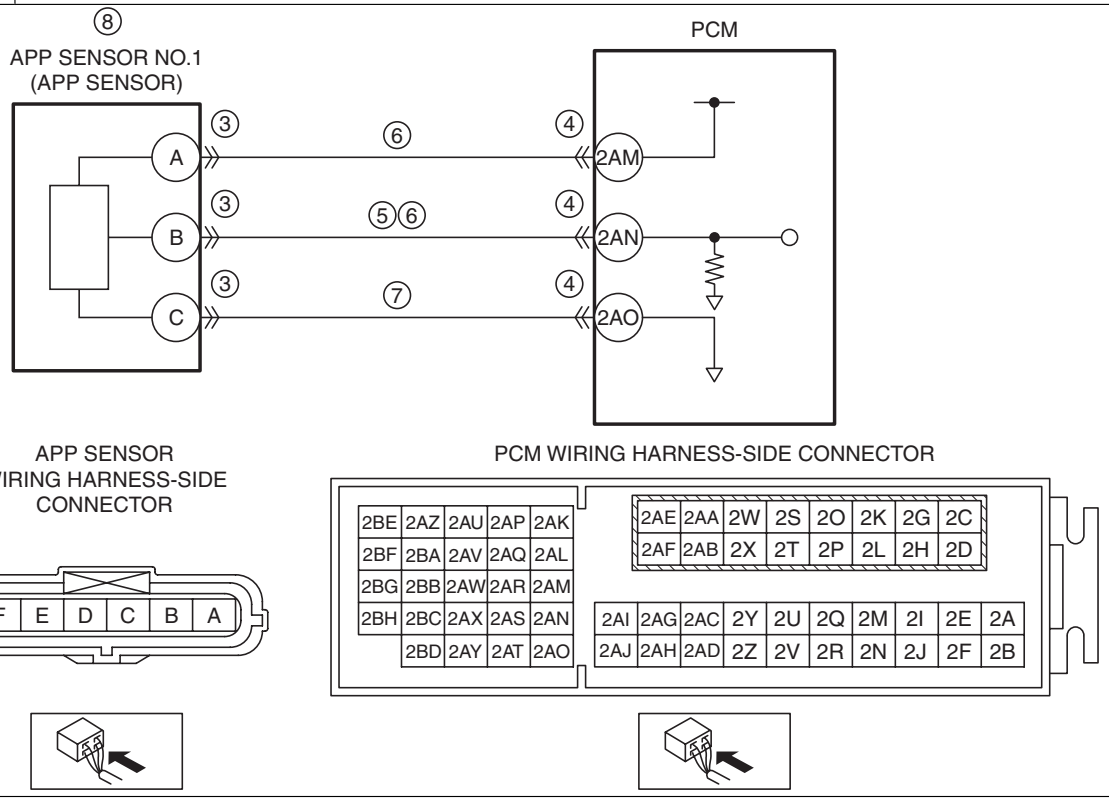

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD VEHICLE STATUS AT TIME OF DTC DETECTION TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the FREEZE FRAME DATA/snapshot data on the repair order.	—	Go to the next step.

STEP	INSPECTION		ACTION
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**INSPECT APP SENSOR CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the APP sensor connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 9.
		No	Go to the next step.
4	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 9.
		No	Go to the next step.
5	**INSPECT APP SENSOR NO.1 CIRCUIT FOR SHORT TO POWER SUPPLY** • Verify that the APP sensor and PCM connectors are disconnected. • Switch the ignition ON (engine off). **Note** • Another DTC may be stored by the PCM detecting an open circuit. • Measure the voltage at the APP sensor terminal B (wiring harness-side). • Is the voltage **0 V**?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between APP sensor terminal B and PCM terminal 2AN. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to power supply. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to power supply. Go to Step 9.
6	**INSPECT APP SENSOR NO.1 POWER SUPPLY CIRCUIT AND SIGNAL CIRCUIT FOR SHORT TO EACH OTHER** • Verify that the APP sensor and PCM connectors are disconnected. • Switch the ignition off. • Inspect for continuity between APP sensor terminals A and B (wiring harness-side). • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • APP sensor terminal A—PCM terminal 2AM • APP sensor terminal B—PCM terminal 2AN **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to each other. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to each other. Go to Step 9.
		No	Go to the next step.
7	**INSPECT APP SENSOR NO.1 GROUND CIRCUIT FOR OPEN CIRCUIT** • Verify that the APP sensor and PCM connectors are disconnected. • Inspect for continuity between APP sensor terminal C (wiring harness-side) and PCM terminal 2AO (wiring harness-side). • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between APP sensor terminal C and PCM terminal 2AO. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 9.

STEP	INSPECTION		ACTION
8	**INSPECT APP SENSOR NO.1** • Reconnect all disconnected connectors. • Inspect the APP sensor No.1. (See ACCELERATOR PEDAL POSITION (APP) SENSOR INSPECTION [SKYACTIV-D 1.5].) • Is there any malfunction?	Yes	Replace the accelerator pedal, then go to the next step. (See ACCELERATOR PEDAL REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
		No	Go to the next step.
9	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Perform the KOEO or KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to the next step.
		No	Go to the next step.
10	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.