
DTC U1100:00 [SKYACTIV-D 1.5]

id0102q2855900

DTC U1100:00	LIN communication: communication error to engine oil level sensor
DETECTION CONDITION	• With the following conditions continued for **1.5 s**, a communication error between the PCM and engine oil level sensor is continued for **5 s or more**. — Battery voltage: **10—16 V** — Ignition switched ON (engine off or on) **Diagnostic support note** • This is an intermittent monitor (other). • The check engine light does not illuminate. • FREEZE FRAME DATA/Snapshot data is not available. • DTC is not stored in the PCM memory.
FAIL-SAFE FUNCTION	• Not applicable
POSSIBLE CAUSE	• LIN communication line malfunction between engine oil level sensor and PCM • Engine oil level sensor connector or terminals malfunction • Short to ground or open circuit in engine oil level sensor power supply circuit — Short to ground in wiring harness between ENGINE3 15 A fuse and engine oil level sensor terminal A — ENGINE3 15 A fuse malfunction — Open circuit in wiring harness between main relay terminal C and engine oil level sensor terminal A • PCM connector or terminals malfunction • Engine oil level sensor malfunction • PCM malfunction

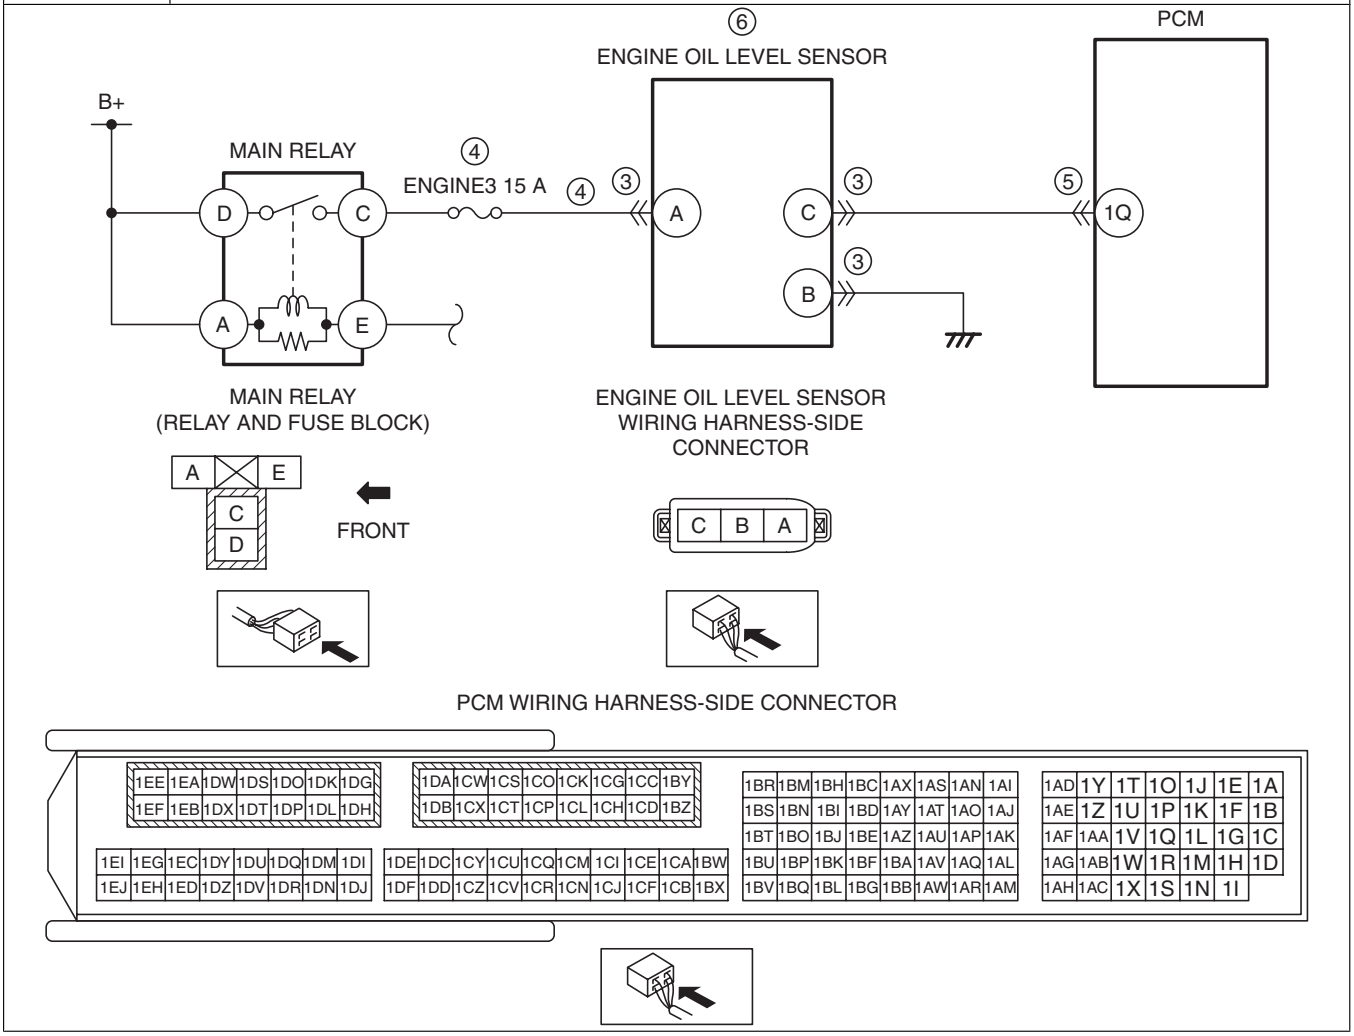

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
2	**VERIFY RELATED PENDING CODE AND/OR DTC** • Switch the ignition off, then ON (engine off). • Perform the Pending Trouble Code Access Procedure and DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Are any other PENDING CODEs and/or DTCs present?	Yes	Go to the applicable PENDING CODE or DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	Go to the next step.
3	**INSPECT ENGINE OIL LEVEL SENSOR CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the engine oil level sensor connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 7.
		No	Go to the next step.
4	**INSPECT ENGINE OIL LEVEL SENSOR POWER SUPPLY CIRCUIT FOR SHORT TO GROUND OR OPEN CIRCUIT** • Verify that the engine oil level sensor connector is disconnected. • Switch the ignition ON (engine off). **Note** • Another DTC may be stored by the PCM detecting an open circuit. • Measure the voltage at the engine oil level sensor terminal A (wiring harness-side). • Is the voltage **B+**?	Yes	Go to the next step.
		No	Inspect the ENGINE3 15 A fuse. • If the fuse is blown: — Refer to the wiring diagram and verify whether or not there is a common connector between ENGINE3 15 A fuse and engine oil level sensor terminal A. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground. • Replace the fuse. • If the fuse is damaged: — Replace the fuse. • If the fuse is normal: — Refer to the wiring diagram and verify whether or not there is a common connector between main relay terminal C and engine oil level sensor terminal A. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit. Go to Step 7.
5	**INSPECT PCM CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 7.
		No	Go to the next step.

STEP	INSPECTION		ACTION
6	**INSPECT ENGINE OIL LEVEL SENSOR** • Inspect the engine oil level sensor. (See ENGINE OIL LEVEL SENSOR INSPECTION [SKYACTIV-D 1.5].) • Is there any malfunction?	Yes	Replace the engine oil level sensor, then go to the next step. (See ENGINE OIL LEVEL SENSOR REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)
		No	Go to the next step.
7	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Perform the DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to the next step.
		No	Go to the next step.
8	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.