

DTC U0302:00 [SKYACTIV-D 1.5]

id0102q2901000


DTC U0302:00	TCM processor error
DETECTION CONDITION	• With the battery voltage **10 V or more**, any of the following conditions is continuously met for **3.5 s**. — Check sum error in signal from TCM — Counter error in signal from TCM **Diagnostic support note** • This is a continuous monitor (CCM). • The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. • FREEZE FRAME DATA/Snapshot data is available. • DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	• Inhibits engine-stop by operating the i-stop function.
POSSIBLE CAUSE	• TCM connector or terminals malfunction • PCM connector or terminals malfunction • CAN communication line malfunction between PCM and TCM (local CAN between PCM and TCM) — TCM terminal G—PCM terminal 1G — TCM terminal H—PCM terminal 1C • TCM DTC is stored. • CAN drive error (TCM or PCM) • PCM malfunction • TCM malfunction

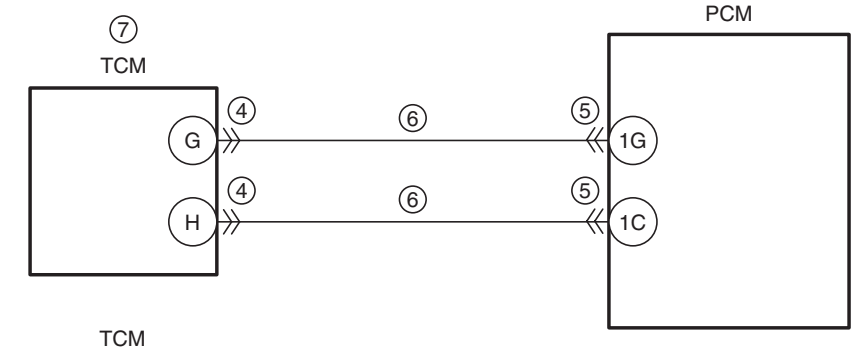

TCM
WIRING HARNESS-SIDE
CONNECTOR

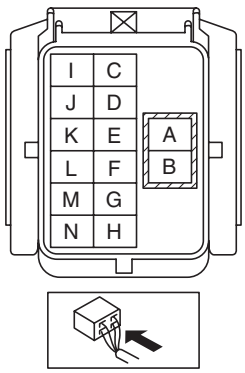

PCM WIRING HARNESS-SIDE CONNECTOR

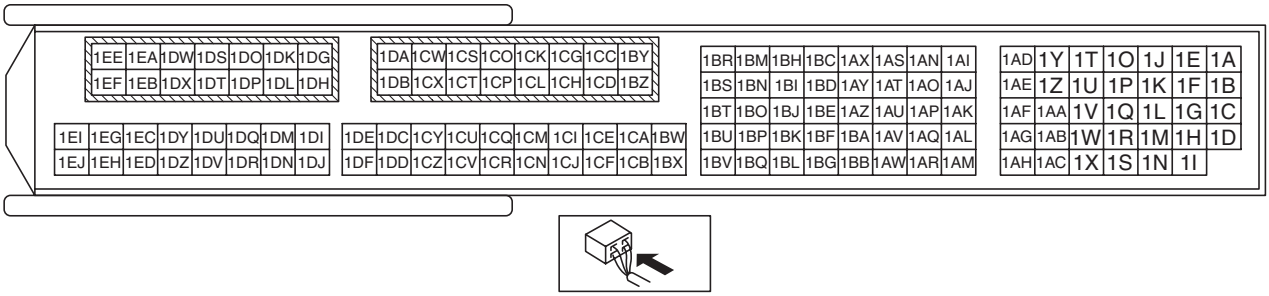

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**RECORD VEHICLE STATUS AT TIME OF DTC DETECTION TO UTILIZE WITH REPEATABILITY VERIFICATION** **Note** • Recording can be facilitated using the screen capture function of the PC. • Record the FREEZE FRAME DATA/snapshot data on the repair order.	—	Go to the next step.
2	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
3	**VERIFY RELATED PENDING CODE AND/OR DTC** • Switch the ignition off, then ON (engine off). • Perform the Pending Trouble Code Access Procedure and DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Are any other PENDING CODEs and/or DTCs present?	Yes	Go to the applicable PENDING CODE or DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	Go to the next step.
4	**INSPECT TCM CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the TCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 7.
		No	Go to the next step.
5	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 7.
		No	Go to the next step.
6	**CONFIRM TCM DTC** • Perform the TCM DTC inspection using the M-MDS. (See ON-BOARD DIAGNOSTIC SYSTEM DTC INSPECTION [TCM (EW6A-EL)].) • Are any DTCs present?	Yes	DTC U0074:00 or U0115:00 is displayed: • CAN communication line can be considered the cause. — Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • TCM terminal G—PCM terminal 1G • TCM terminal H—PCM terminal 1C **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a malfunction. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness. • Go to the next step. DTC other than U0074:00 and U0115:00 is displayed: • Go to the applicable DTC inspection. (See ON-BOARD DIAGNOSTIC SYSTEM DTC TABLE [TCM (EW6A-EL)].)
		No	PCM can be considered the cause. • Replace the PCM, then go to the next step. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

STEP	INSPECTION		ACTION
7	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Perform the DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the control valve body. (See CONTROL VALVE BODY REMOVAL/ INSTALLATION [EW6A-EL].) Go to the next step.
		No	Go to the next step.
8	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.