

DTC U0315:00 [SKYACTIV-D 1.5]

id0102q2901200


DTC U0315:00	DSC HU/CM error
DETECTION CONDITION	• With the battery voltage **10 V or more**, any of the following conditions is continuously met for **3.5 s**. — Check sum error in signal from DSC HU/CM — Counter error in signal from DSC HU/CM **Diagnostic support note** • This is an intermittent monitor (other). • The check engine light does not illuminate. • FREEZE FRAME DATA/Snapshot data is not available. • DTC is not stored in the PCM memory.
FAIL-SAFE FUNCTION	Not applicable
POSSIBLE CAUSE	• CAN drive error (instrument cluster or PCM) • CAN communication line malfunction between DSC HU/CM and PCM — DSC HU/CM terminal AF—PCM terminal 2C — DSC HU/CM terminal AC—PCM terminal 2D • DSC HU/CM connector or terminals malfunction • PCM connector or terminals malfunction • DSC HU/CM malfunction • PCM malfunction

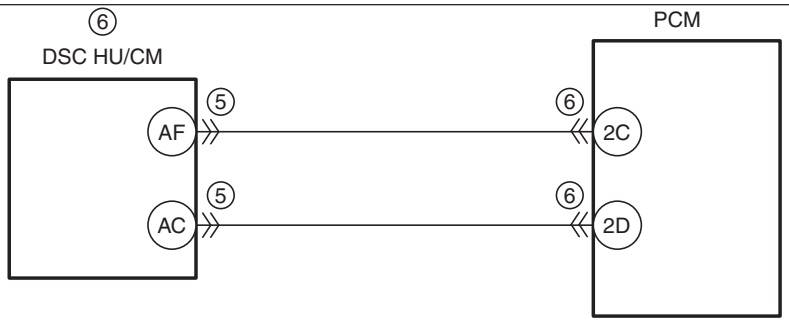

DSC HU/CM WIRING HARNESS-SIDE CONNECTOR

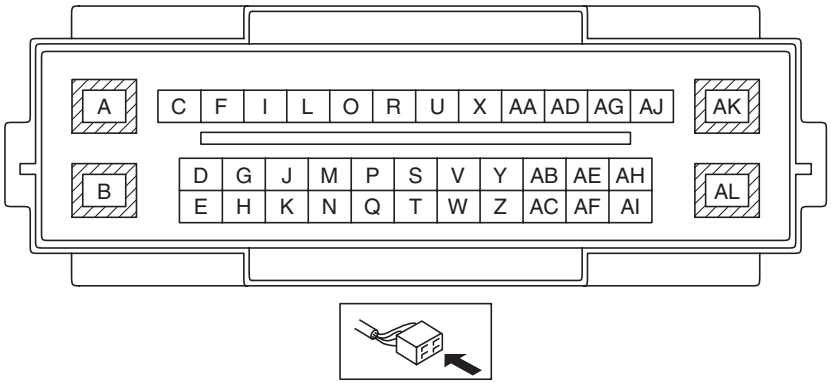

PCM WIRING HARNESS-SIDE CONNECTOR

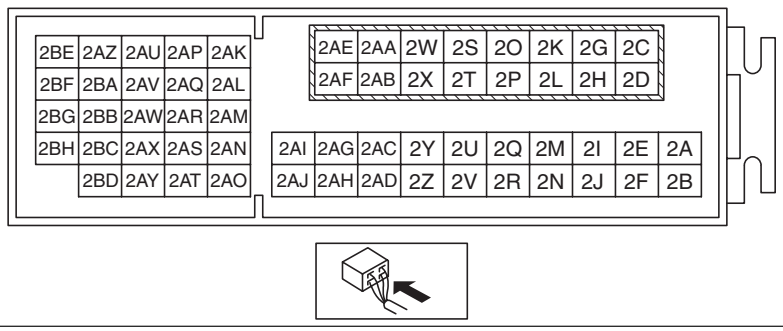

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
2	**VERIFY DTC FOR MODULE COMMUNICATION** • Switch the ignition off, then ON (engine off). • Perform the Pending Trouble Code Access Procedure and DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Are any other PENDING CODEs and/or DTCs present?	Yes	Go to the applicable PENDING CODE or DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	Go to the next step.
3	**CONFIRM DSC HU/CM DTC** • Perform the DSC HU/CM DTC inspection using the M-MDS. (See DTC INSPECTION [DSC HU/CM].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [DSC HU/CM].)
		No	Go to the next step.
4	**CONFIRM INSTRUMENT CLUSTER DTC** • Perform the instrument cluster DTC inspection using the M-MDS. (See DTC INSPECTION [INSTRUMENT CLUSTER].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [INSTRUMENT CLUSTER].)
		No	Go to the next step.
5	**INSPECT DSC HU/CM CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the DSC HU/CM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 7.
		No	Go to the next step.
6	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to the next step.
		No	CAN communication line can be considered the cause. • Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: — DSC HU/CM terminal AF—PCM terminal 2C — DSC HU/CM terminal AC—PCM terminal 2D **If there is a common connector:** — Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a malfunction. — Repair or replace the malfunctioning part. **If there is no common connector:** — Repair or replace the wiring harness. If the malfunction recurs, replace the DSC HU/CM. (See DSC HU/CM REMOVAL/INSTALLATION [R.H.D.].) Go to the next step.
7	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Perform the DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to the next step.
		No	Go to the next step.

STEP	INSPECTION		ACTION
8	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.