

DTC U0320:00 [SKYACTIV-D 1.5]

id0102q2901300

DTC U0320:00	EPS control module error
DETECTION CONDITION	• With the battery voltage **10 V or more**, any of the following conditions is continuously met for **3.5 s**. — Check sum error in signal from EPS control module — Counter error in signal from EPS control module **Diagnostic support note** • This is an intermittent monitor (other). • The check engine light does not illuminate. • FREEZE FRAME DATA/Snapshot data is not available. • DTC is not stored in the PCM memory.
FAIL-SAFE FUNCTION	• Not applicable
POSSIBLE CAUSE	• CAN drive error (instrument cluster or PCM) • CAN communication line malfunction between EPS control module and PCM — EPS control module terminal 1G—BCM terminal 2D — EPS control module terminal 1H—BCM terminal 2C — BCM terminal 3C—PCM terminal 2C — BCM terminal 3D—PCM terminal 2D • BCM malfunction • EPS control module connector or terminals malfunction • PCM connector or terminals malfunction • EPS control module malfunction • PCM malfunction

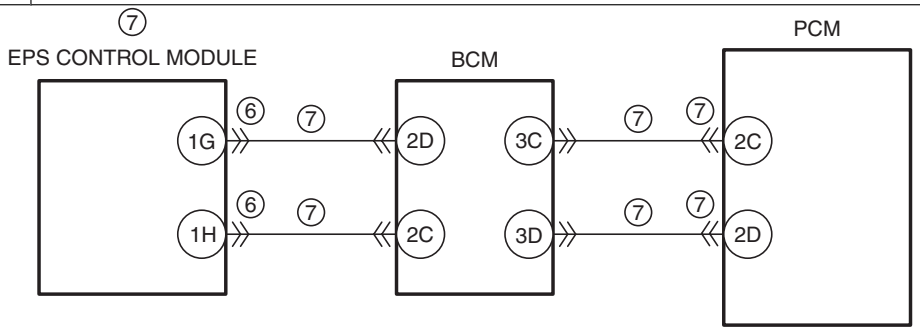


BCM
WIRING HARNESS-SIDE
CONNECTOR

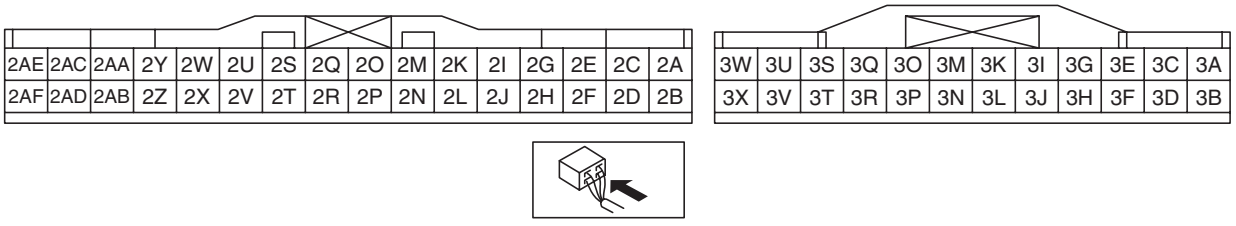


2AE	2AC	2AA	2Y	2W	2U	2S	2Q	2O	2M	2K	2I	2G	2E	2C	2A
2AF	2AD	2AB	2Z	2X	2V	2T	2R	2P	2N	2L	2J	2H	2F	2D	2B

3W	3U	3S	3Q	3O	3M	3K	3I	3G	3E	3C	3A
3X	3V	3T	3R	3P	3N	3L	3J	3H	3F	3D	3B


EPS CONTROL MODULE
WIRING HARNESS-SIDE
CONNECTOR



1G			1A
1H	1F	1D	1B




PCM WIRING HARNESS-SIDE CONNECTOR

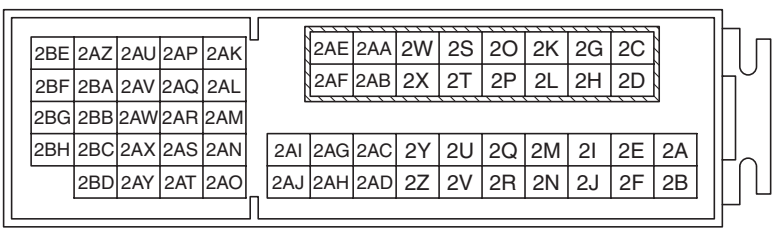

2BE	2AZ	2AU	2AP	2AK
2BF	2BA	2AV	2AQ	2AL
2BG	2BB	2AW	2AR	2AM
2BH	2BC	2AX	2AS	2AN
	2BD	2AY	2AT	2AO

2AE	2AA	2W	2S	2O	2K	2G	2C
2AF	2AB	2X	2T	2P	2L	2H	2D

2AI	2AG	2AC	2Y	2U	2Q	2M	2I	2E	2A
2AJ	2AH	2AD	2Z	2V	2R	2N	2J	2F	2B



Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.
2	**VERIFY DTC FOR MODULE COMMUNICATION** • Switch the ignition off, then ON (engine off). • Perform the Pending Trouble Code Access Procedure and DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Are any other PENDING CODEs and/or DTCs present?	Yes	Go to the applicable PENDING CODE or DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	Go to the next step.
3	**CONFIRM BCM DTC** • Perform the BCM DTC inspection using the M-MDS. (See DTC INSPECTION [BCM].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [BCM].)
		No	Go to the next step.
4	**CONFIRM EPS CONTROL MODULE DTC** • Perform the EPS control module DTC inspection using the M-MDS. (See DTC INSPECTION [EPS CONTROL MODULE].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [EPS CONTROL MODULE].)
		No	Go to the next step.
5	**CONFIRM INSTRUMENT CLUSTER DTC** • Perform the instrument cluster DTC inspection using the M-MDS. (See DTC INSPECTION [INSTRUMENT CLUSTER].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [INSTRUMENT CLUSTER].)
		No	Go to the next step.
6	**INSPECT EPS CONTROL MODULE CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the EPS control module connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to Step 8.
		No	Go to the next step.
7	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to the next step.
		No	CAN communication line can be considered the cause. • Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: — EPS control module terminal 1G—BCM terminal 2D — EPS control module terminal 1H—BCM terminal 2C — BCM terminal 3C—PCM terminal 2C — BCM terminal 3D—PCM terminal 2D **If there is a common connector:** — Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a malfunction. — Repair or replace the malfunctioning part. **If there is no common connector:** — Repair or replace the wiring harness. If the malfunction recurs, replace the EPS control module. (See STEERING WHEEL AND COLUMN REMOVAL/ INSTALLATION.) Go to the next step.

STEP	INSPECTION		ACTION
8	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Perform the DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to the next step.
		No	Go to the next step.
9	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.