
DTC P1905:00 [SKYACTIV-D 1.5]

id0102q2968400

DTC P1905:00	Check connector circuit low input
DETECTION CONDITION	• PCM detects that the check connector voltage is **approx. 0 V** for a continuous **0.016 s**. **Diagnostic support note** • This is an intermittent monitor (other). • The check engine light does not illuminate. • FREEZE FRAME DATA/Snapshot data is not available. • DTC is not stored in the PCM memory.
FAIL-SAFE FUNCTION	Not applicable
POSSIBLE CAUSE	**Note** • If the fuel injection amount learning, compulsory DPF regeneration, timing chain learning, or engine oil data reset is performed without using the M-MDS, DTC P1905:00 may be detected by grounding the check connector (test terminal) to the body. In this case, DTC P1905:00 is automatically erased by disconnecting the check connector (test terminal) ground. • The purpose of DTC P1905:00 is to prevent forgetting to disconnect the check connector (test terminal) ground. • Short to ground in wiring harness between check connector terminal E and PCM terminal 2E • PCM connector or terminals malfunction • PCM malfunction

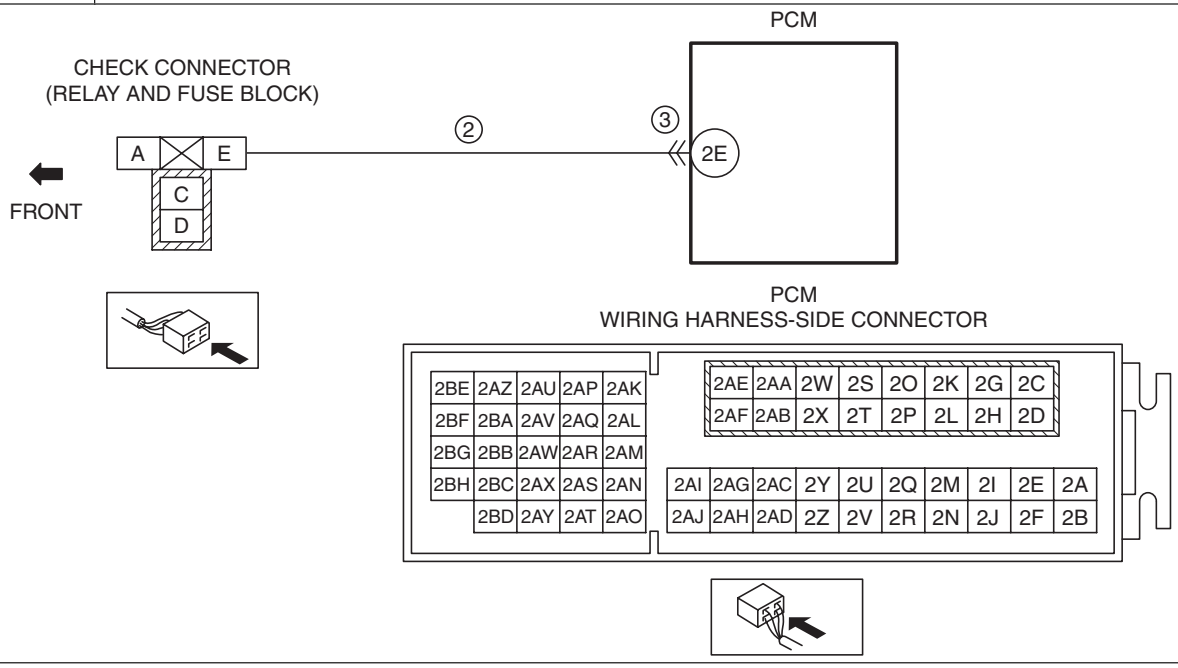

Diagnostic Procedure

STEP	INSPECTION		ACTION
1	**VERIFY RELATED SERVICE INFORMATION AVAILABILITY** • Verify related Service Information availability. • Is any related Service Information available?	Yes	Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No	Go to the next step.

STEP	INSPECTION		ACTION
2	**INSPECT CHECK CONNECTOR CIRCUIT FOR SHORT TO GROUND** • Switch the ignition off. • Inspect for continuity between check connector terminal E (wiring harness-side) and body ground. • Is there continuity?	Yes	If the short to ground circuit could be detected in the wiring harness: • Refer to the wiring diagram and verify whether or not there is a common connector between check connector terminal E and PCM terminal 2E. **If there is a common connector:** — Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. — Repair or replace the malfunctioning part. **If there is no common connector:** — Repair or replace the wiring harness which has a short to ground. If the short to ground circuit could not be detected in the wiring harness: • Replace the PCM (short to ground in the PCM internal circuit). (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to Step 4.
		No	Go to the next step.
3	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals, then go to the next step.
		No	Go to the next step.
4	**VERIFY DTC TROUBLESHOOTING COMPLETED** • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Perform the DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Is the same DTC present?	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) Go to the next step.
		No	Go to the next step.
5	**VERIFY AFTER REPAIR PROCEDURE** • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	DTC troubleshooting completed.