
NO.2 CHECK ENGINE LIGHT ILLUMINATES [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0103q1205000

2	CHECK ENGINE LIGHT ILLUMINATES
DESCRIPTION	• Check engine light illuminates incorrectly. **Note** • If there is a malfunction in the engine system, the PCM stores a DTC and illuminates the check engine light.
POSSIBLE CAUSE	• Check engine light illuminates for emission-related concern (DTC is stored in PCM) • Short to ground in wiring harness between the following terminals: — Instrument cluster terminal 1B—BCM terminal 2D — Instrument cluster terminal 1D—BCM terminal 2C — BCM terminal 3C—PCM terminal 2AK — BCM terminal 3D—PCM terminal 2AL • Open circuit in wiring harness between the following terminals: — Instrument cluster terminal 1B—BCM terminal 2D — Instrument cluster terminal 1D—BCM terminal 2C — BCM terminal 3C—PCM terminal 2AK — BCM terminal 3D—PCM terminal 2AL • Instrument cluster malfunction

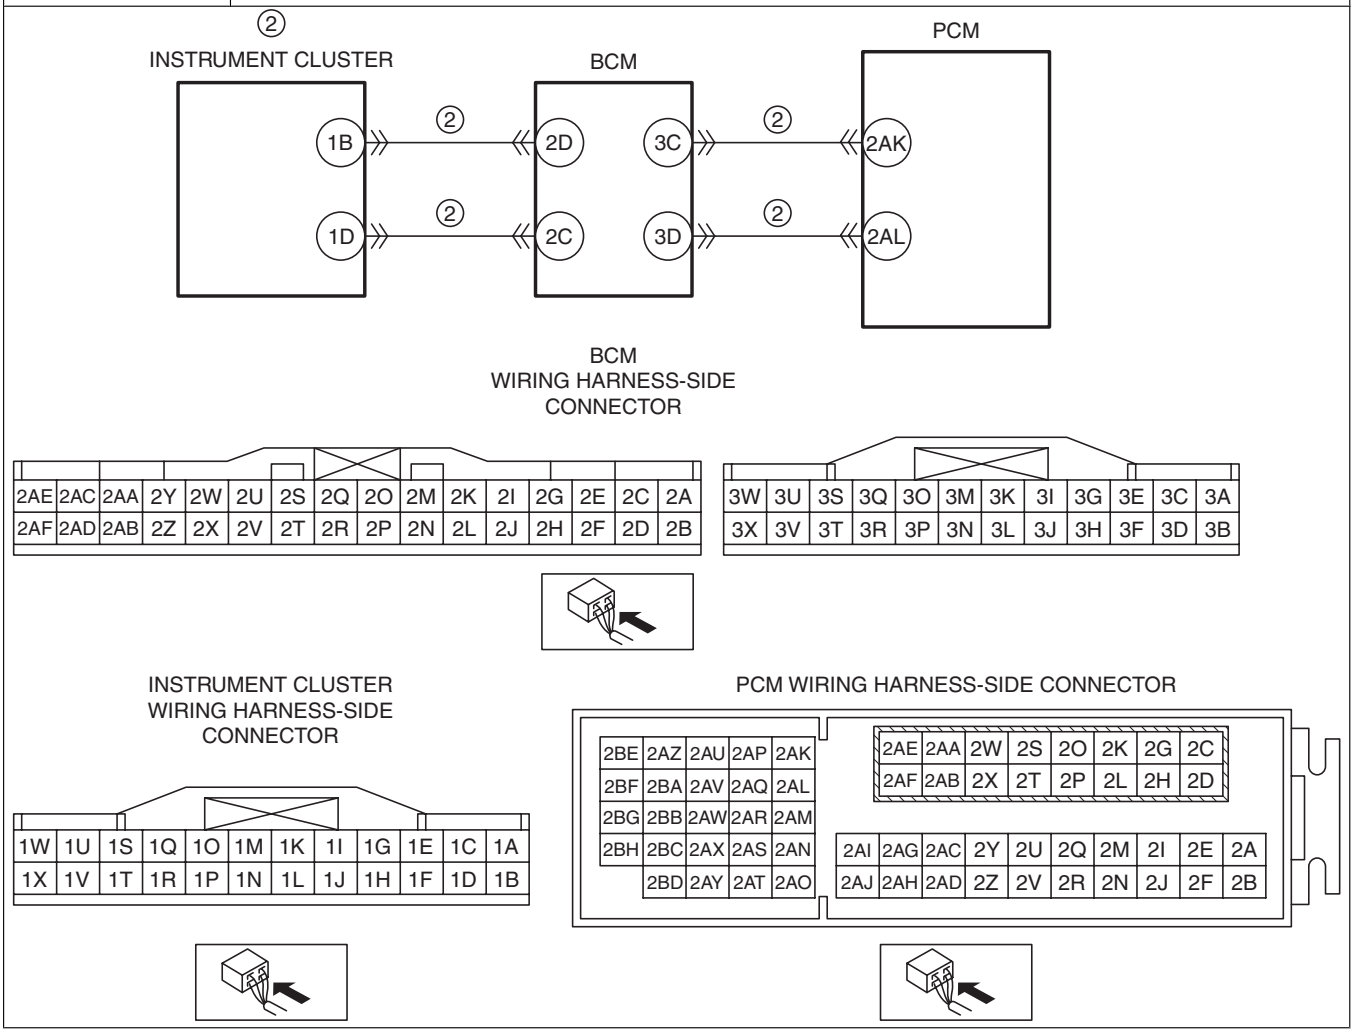

Diagnostic Procedure

STEP	INSPECTION	RESULTS	ACTION
1	**VERIFY PCM DTC** • Retrieve any DTCs using the M-MDS. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	Go to the next step.

STEP	INSPECTION	RESULTS	ACTION
2	**INSPECT COMMUNICATION LINE BETWEEN PCM AND INSTRUMENT CLUSTER** • Inspect for a short or open circuit between the following terminals: — Instrument cluster terminal 1B—BCM terminal 2D — Instrument cluster terminal 1D—BCM terminal 2C — BCM terminal 3C—PCM terminal 2AK — BCM terminal 3D—PCM terminal 2AL • Is the wiring harness normal?	Yes	Inspect the instrument cluster. (See INSTRUMENT CLUSTER INSPECTION.) • If there is any malfunction: — Repair or replace the malfunctioning part according to the inspection results, then go to the next step. (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.)
		No	Refer to the wiring diagram and verify whether or not there is a common connector between the following terminals: • Instrument cluster terminal 1B—BCM terminal 2D • Instrument cluster terminal 1D—BCM terminal 2C • BCM terminal 3C—PCM terminal 2AK • BCM terminal 3D—PCM terminal 2AL **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground or open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground or open circuit.
3	Verify the test results. • If normal, return to the diagnostic index to service any additional symptoms. (See SYMPTOM DIAGNOSTIC INDEX [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • If a malfunction remains, inspect the related Service Information and perform the repair or diagnosis. — If the vehicle is repaired, troubleshooting is completed. — If the vehicle is not repaired or additional diagnostic information is not available, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)		