
NO.1 BLOWN FUSES [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0103q1507100

1	BLOWN FUSES

[TROUBLESHOOTING HINTS]

• Inspect condition of fuse.

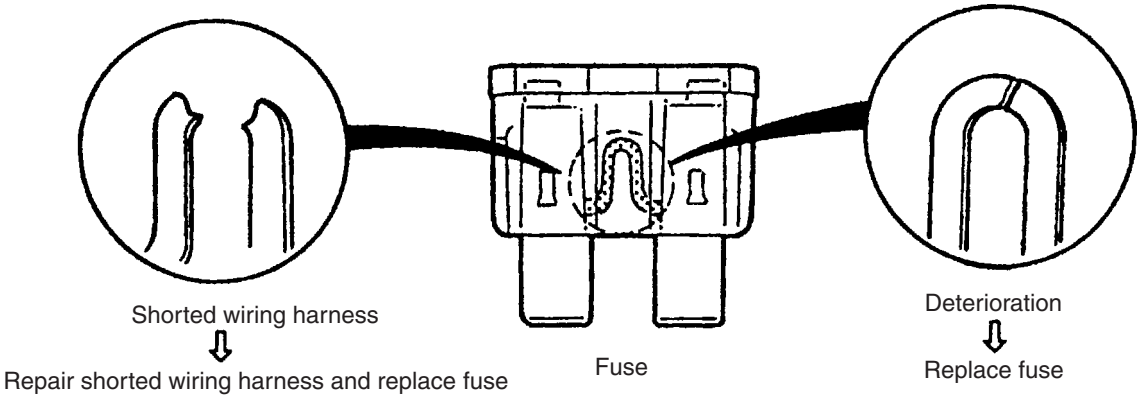

Damaged fuse	Related wiring harness
MAIN	• FAN1 fuse*1 • FAN2 fuse*1 • FUEL PUMP fuse*1 • IG2 fuse*1 • ENG+B2 fuse*1 • ROOM fuse*1 • ENG.MAIN fuse*1 • INJECTOR fuse*1 • EVVT fuse*1 • IG1 relay*1 • DC-DC converter (i-ELOOP)*2
FAN1	• Cooling fan relay No.2
FAN2	• Cooling fan relay No.1
ENGINE IG1	• Fuel pump relay • PCM
FUEL PUMP	• Fuel pump relay
STR	• Generator*1 • Starter
DCDC*3	• DC-DC converter
RADIO*3	• Ignition relay (ACC_STAB)
METER2*3	• Ignition relay (IG1_STAB)
C/U IG1	• DC-DC converter*3 • Ignition relay (IG1_STAB)*3 • DC-DC converter (i-ELOOP)*2 • Generator*2
IG2	• ACC relay • Starter relay
ROOM	• ENG+B fuse
ENG+B	• PCM
ENG+B2	• Current sensor*3
ENG.MAIN	• Main relay
INJECTOR	• Fuel injector relay
EVVT	• Electric variable valve timing relay*5

Damaged fuse	Related wiring harness
ENGINE1	• Electric variable valve timing relay*5 • A/F sensor • HO2S • MAF sensor/IAT sensor No.1 • Intake CMP sensor
ENGINE2	• Fuel injector relay • Purge solenoid valve • OCV • PCM • Engine oil solenoid valve*5 • Exhaust CMP sensor*5 • Ignition coil/ion sensor No.1*5 • Ignition coil/ion sensor No.2*5 • Ignition coil/ion sensor No.3*5 • Ignition coil/ion sensor No.4*5 • Ignition coil No.1*6 • Ignition coil No.2*6 • Ignition coil No.3*6 • Ignition coil No.4*6
ENGINE3	• Cooling fan relay No.2 • Cooling fan relay No.1 • Electric AT oil pump relay*4

*1 : Vehicles without i-ELOOP
*2 : Vehicles with i-ELOOP
*3 : Vehicles without i-ELOOP, with i-stop
*4 : Vehicles with i-stop
*5 : SKYACTIV-G 1.5 (with 4-2-1 exhaust system)
*6 : SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)