
NO.7 ENGINE OIL WARNING LIGHT ILLUMINATED/MESSAGE RELATED TO ENGINE HYDRAULIC PRESSURE MALFUNCTION INDICATED IN DISPLAY [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0103q1876900

7	ENGINE OIL WARNING LIGHT ILLUMINATED/MESSAGE RELATED TO ENGINE HYDRAULIC PRESSURE MALFUNCTION INDICATED IN DISPLAY
DESCRIPTION	• Engine oil warning light illuminated. • Message related to engine hydraulic pressure malfunction indicated in display. (With center display)
POSSIBLE CAUSE	• Engine oil leakage • Improper engine oil level • Oil pressure switch connector or terminals malfunction • PCM connector or terminals malfunction • Short to ground in wiring harness between oil pressure switch terminal A and PCM terminal 1P • Open circuit in wiring harness between oil pressure switch terminal A and PCM terminal 1P • Oil pump malfunction • Oil pressure switch malfunction • Instrument cluster malfunction • PCM malfunction

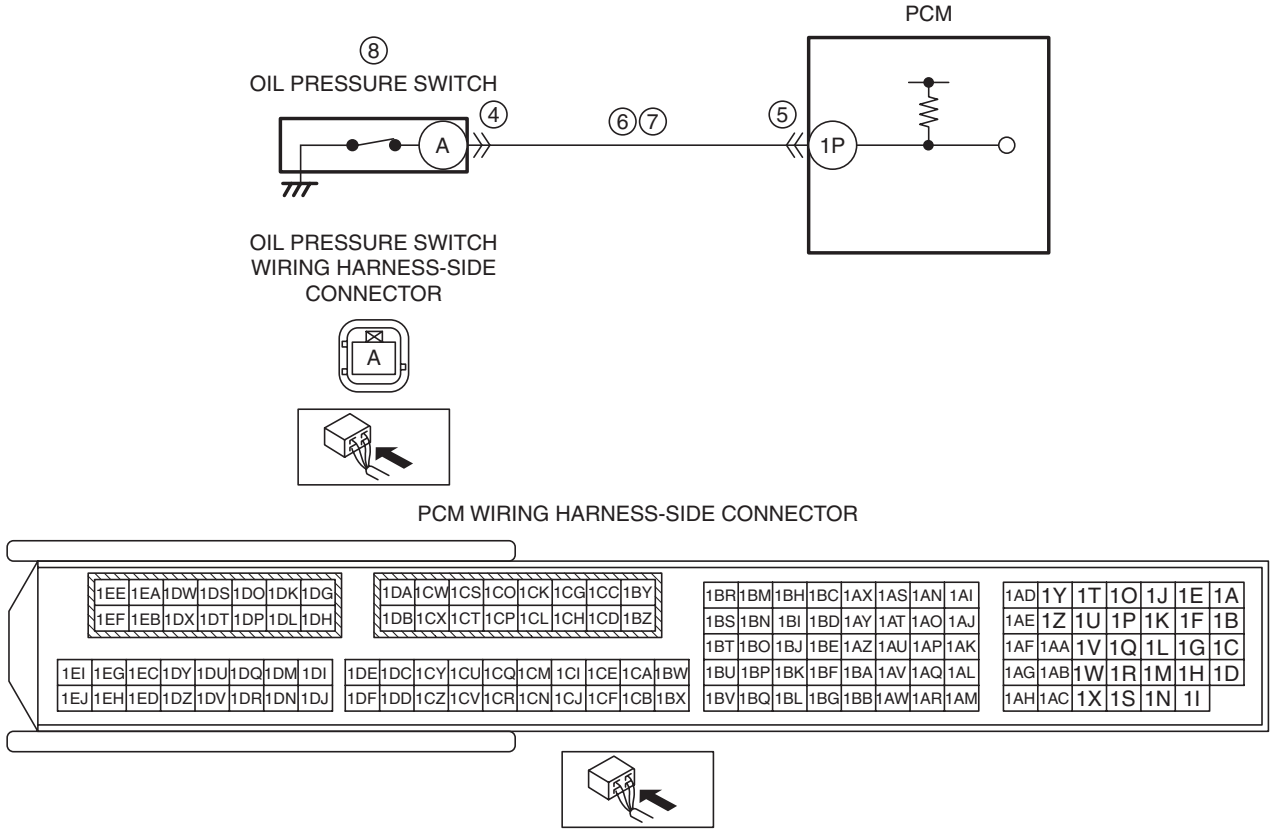

Diagnostic Procedure

STEP	INSPECTION	RESULTS	ACTION
1	**INSPECT ENGINE OIL LEVEL** • Inspect the engine oil level. (See ENGINE OIL LEVEL INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is there any malfunction?	Yes	Engine oil level is below L: • Add genuine motor oil, then go to the next step. Engine oil level is above F: • Replace the engine oil, then go to the next step. (penetration of fuel into engine oil can be considered) (See ENGINE OIL REPLACEMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	Go to Step 3.
2	**VERIFY IF ENGINE OIL WARNING LIGHT ILLUMINATES** • Start the engine. • Increase and keep the engine speed at **2,500 rpm** for **5 s**. • Does the engine oil warning light illuminate?	Yes	Go to the next step.
		No	Symptom troubleshooting is completed.

STEP	INSPECTION	RESULTS	ACTION
3	**VERIFY DTC** • Retrieve the PCM and instrument cluster DTCs using the M-MDS. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See DTC INSPECTION [INSTRUMENT CLUSTER].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See DTC TABLE [INSTRUMENT CLUSTER].)
		No	Go to the next step.
4	**INSPECT OIL PRESSURE SWITCH CONNECTOR CONDITION** • Switch the ignition off. • Disconnect the oil pressure switch connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals.
		No	Go to the next step.
5	**INSPECT PCM CONNECTOR CONDITION** • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). • Is there any malfunction?	Yes	Repair or replace the connector and/or terminals.
		No	Go to the next step.
6	**INSPECT OIL PRESSURE SWITCH SIGNAL CIRCUIT FOR SHORT TO GROUND** • Verify that the oil pressure switch and PCM connectors are disconnected. • Inspect for continuity between oil pressure switch terminal A (wiring harness-side) and body ground. • Is there continuity?	Yes	Refer to the wiring diagram and verify whether or not there is a common connector between oil pressure switch terminal A and PCM terminal 1P. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for a short to ground. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has a short to ground.
		No	Go to the next step.
7	**INSPECT OIL PRESSURE SWITCH SIGNAL CIRCUIT FOR OPEN CIRCUIT** • Verify that the oil pressure switch and PCM connectors are disconnected. • Inspect for continuity between oil pressure switch terminal A (wiring harness-side) and PCM terminal 1P (wiring harness-side). • Is there continuity?	Yes	Go to the next step.
		No	Refer to the wiring diagram and verify whether or not there is a common connector between oil pressure switch terminal A and PCM terminal 1P. **If there is a common connector:** • Determine the malfunctioning part by inspecting the common connector and the terminal for corrosion, damage, or pin disconnection, and the common wiring harness for an open circuit. • Repair or replace the malfunctioning part. **If there is no common connector:** • Repair or replace the wiring harness which has an open circuit.
8	**INSPECT ENGINE OIL PRESSURE** • Inspect the engine oil pressure. (See OIL PRESSURE INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • Is there any malfunction?	Yes	Replace the oil pump, then go to the next step. (See OIL PUMP REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
		No	Replace the oil pressure switch, then go to the next step. (See ENGINE OIL SOLENOID VALVE REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
9	Verify the test results. • If normal, return to the diagnostic index to service any additional symptoms. (See SYMPTOM DIAGNOSTIC INDEX [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) • If a malfunction remains, inspect the related Service Information and perform the repair or diagnosis. — If the vehicle is repaired, troubleshooting is completed. — If the vehicle is not repaired or additional diagnostic information is not available, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)		