

NO.2 CHECK ENGINE LIGHT ILLUMINATES [SKYACTIV-D 1.5]

id0103q2897100


2	CHECK ENGINE LIGHT ILLUMINATES
DESCRIPTION	• Check engine light illuminates incorrectly. **Note** • If there is a malfunction in the engine system, the PCM stores a DTC and illuminates the check engine light.
POSSIBLE CAUSE	• Emission system malfunction (DTC is stored in PCM) • ATX related malfunction (DTC is stored in TCM) (ATX) • Short or open circuit in wiring harness between the following terminals: — Instrument cluster terminal 1B—Body control module (BCM) terminal 2D — Instrument cluster terminal 1D—Body control module (BCM) terminal 2C — Body control module (BCM) terminal 3C—PCM terminal 2C — Body control module (BCM) terminal 3D—PCM terminal 2D • Instrument cluster malfunction

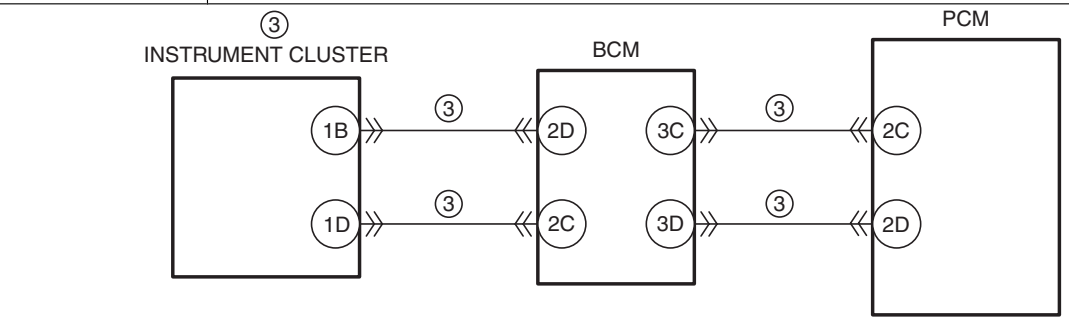


INSTRUMENT CLUSTER
WIRING HARNESS-SIDE CONNECTOR

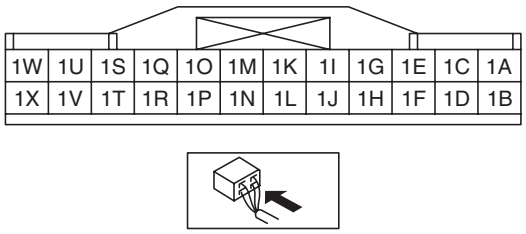

BCM
WIRING HARNESS-SIDE CONNECTOR

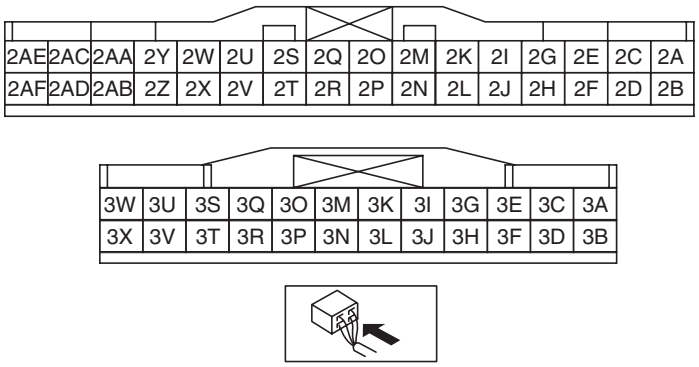

PCM
WIRING HARNESS-SIDE CONNECTOR

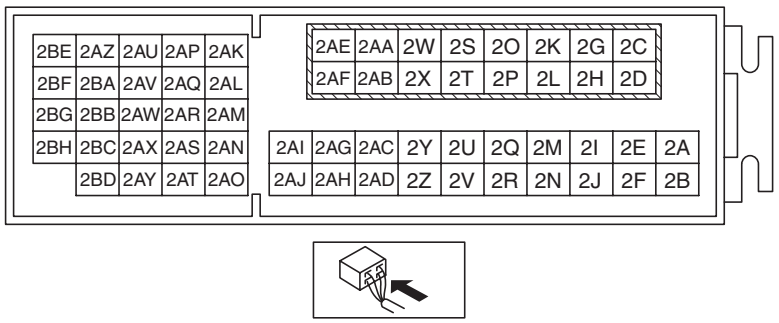

Diagnostic Procedure

STEP	INSPECTION	RESULTS	ACTION
1	**VERIFY PCM DTC** • Retrieve PCM DTCs using the M-MDS. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 1.5].)
		No	ATX: • Go to the next step. MTX: • Go to Step 3.
2	**VERIFY TCM DTC** • Retrieve TCM DTCs using the M-MDS. (See ON-BOARD DIAGNOSTIC SYSTEM DTC INSPECTION [TCM (EW6A-EL)].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See ON-BOARD DIAGNOSTIC SYSTEM DTC TABLE [TCM (EW6A-EL)].)
		No	Go to the next step.
3	**INSPECT COMMUNICATION LINE BETWEEN PCM AND INSTRUMENT CLUSTER** • Inspect for short or open circuit between the following terminals: — Instrument cluster terminal 1B—Body control module (BCM) terminal 2D — Instrument cluster terminal 1D—Body control module (BCM) terminal 2C — Body control module (BCM) terminal 3C—PCM terminal 2C — Body control module (BCM) terminal 3D—PCM terminal 2D • Is the wiring harness normal?	Yes	Inspect the instrument cluster. (See INSTRUMENT CLUSTER INSPECTION.) • If there is any malfunction: — Repair or replace the malfunctioning part according to the inspection results, then go to the next step. (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.)
		No	Repair or replace the suspected wiring harness.
4	Verify the test results. • If normal, return to the diagnostic index to service any additional symptoms. (See SYMPTOM DIAGNOSTIC INDEX [SKYACTIV-D 1.5].) • If a malfunction remains, inspect the related Service Information and perform the repair or diagnosis. — If the vehicle is repaired, troubleshooting is completed. — If the vehicle is not repaired or additional diagnostic information is not available, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)		