
ENGINE LOCATION INDEX [SKYACTIV-D 1.5]

id0110q2800100

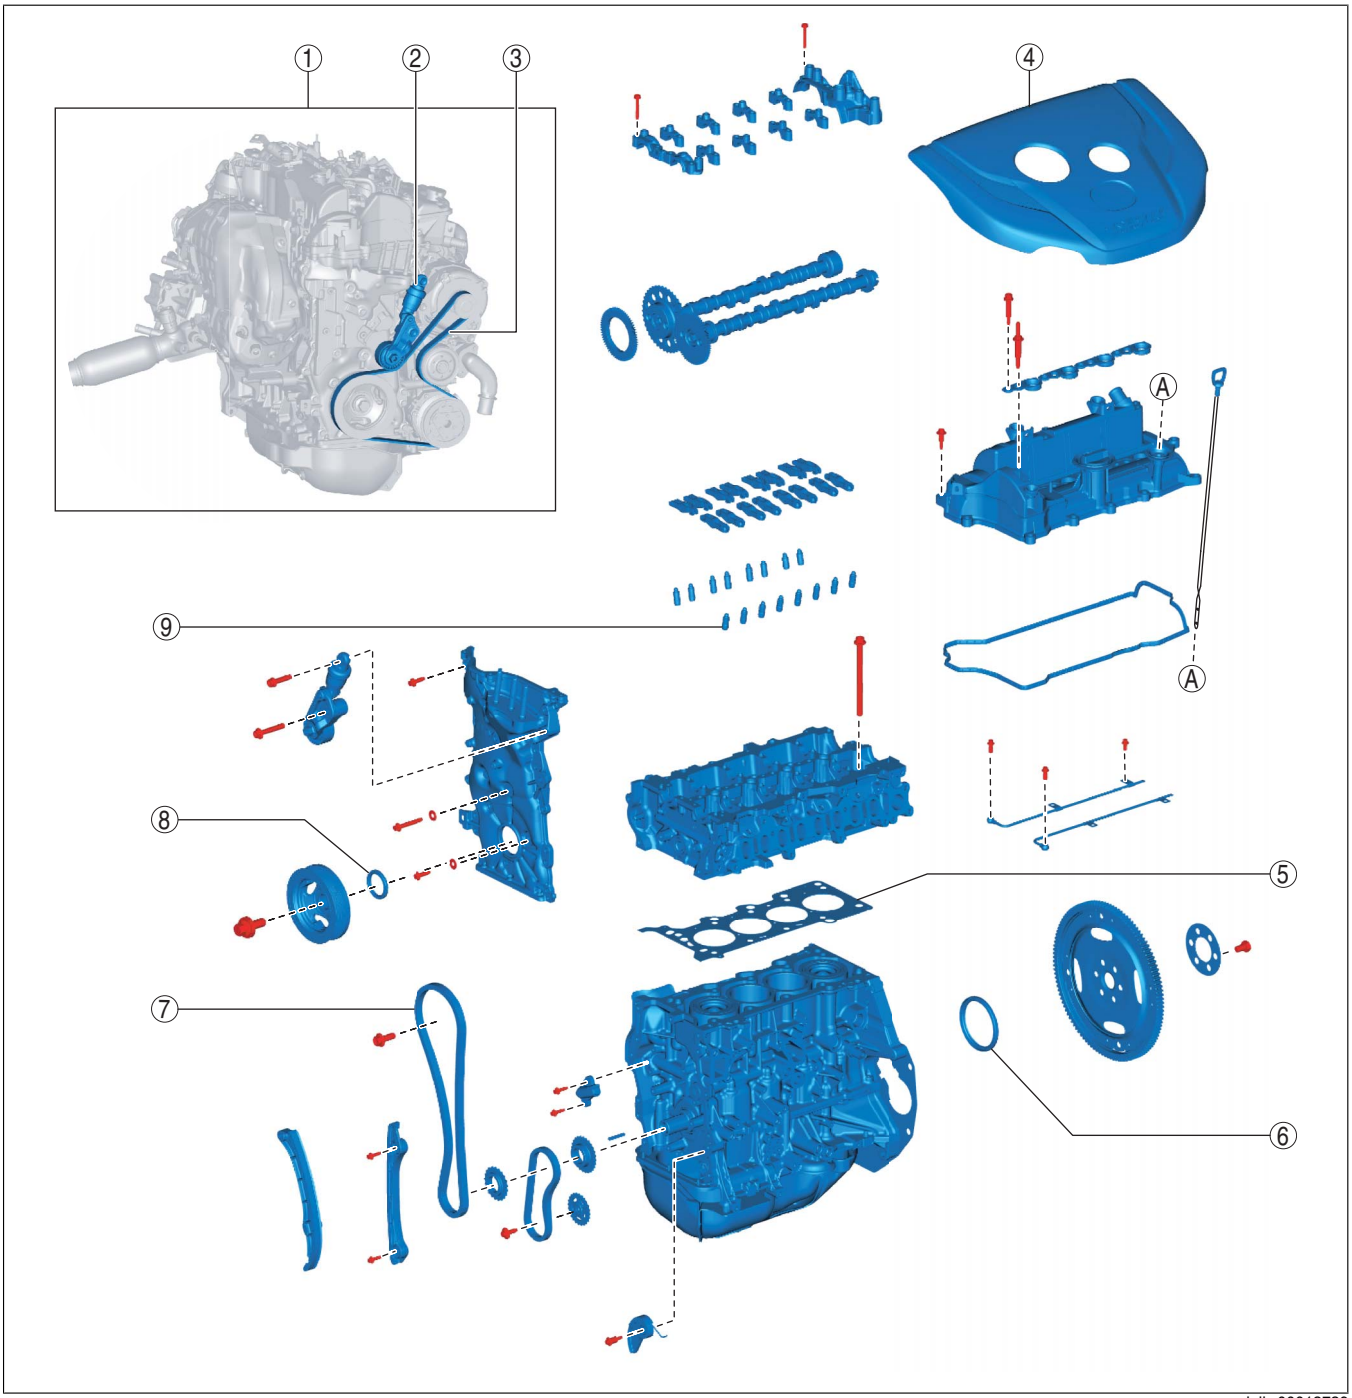

adejjw00012729

1	Engine (See ENGINE TUNE-UP [SKYACTIV-D 1.5].) (See COMPRESSION INSPECTION [SKYACTIV-D 1.5].) (See ENGINE MOUNT DISASSEMBLY/ASSEMBLY [SKYACTIV-D 1.5].) (See ENGINE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See ENGINE DISASSEMBLY/ASSEMBLY [SKYACTIV-D 1.5].)
2	Drive belt auto tensioner (See DRIVE BELT AUTO TENSIONER INSPECTION [SKYACTIV-D 1.5].) (See DRIVE BELT AUTO TENSIONER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

3	Drive belt (See DRIVE BELT INSPECTION [SKYACTIV-D 1.5].) (See DRIVE BELT REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
4	Engine cover (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
5	Cylinder head gasket (See CYLINDER HEAD GASKET REPLACEMENT [SKYACTIV-D 1.5].)
6	Rear oil seal (See REAR OIL SEAL REPLACEMENT [SKYACTIV-D 1.5].)

7	Timing chain (See TIMING CHAIN REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
8	Front oil seal (See FRONT OIL SEAL REPLACEMENT [SKYACTIV-D 1.5].)

9	Hydraulic lash adjuster (HLA) (See HYDRAULIC LASH ADJUSTER (HLA) INSPECTION [SKYACTIV-D 1.5].) (See HYDRAULIC LASH ADJUSTER (HLA) REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)