
REAR OIL SEAL REPLACEMENT [SKYACTIV-D 1.5]

id0110q2800900

1. Remove the transaxle. (See MANUAL TRANSAXLE REMOVAL/INSTALLATION [F66M-R (SKYACTIV-D 1.5)] (MTX).) (See AUTOMATIC TRANSAXLE REMOVAL/INSTALLATION [EW6A-EL] (ATX).)
2. Remove the dual-mass flywheel (MTX) or the drive plate (ATX). (See CLUTCH UNIT REMOVAL/INSTALLATION [F66M-R] (MTX).) (See DRIVE PLATE REMOVAL/INSTALLATION [EW6A-EL] (ATX).)
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.


1	Rear oil seal (See Rear Oil Seal Removal Note.) (See Rear Oil Seal Installation Note.)

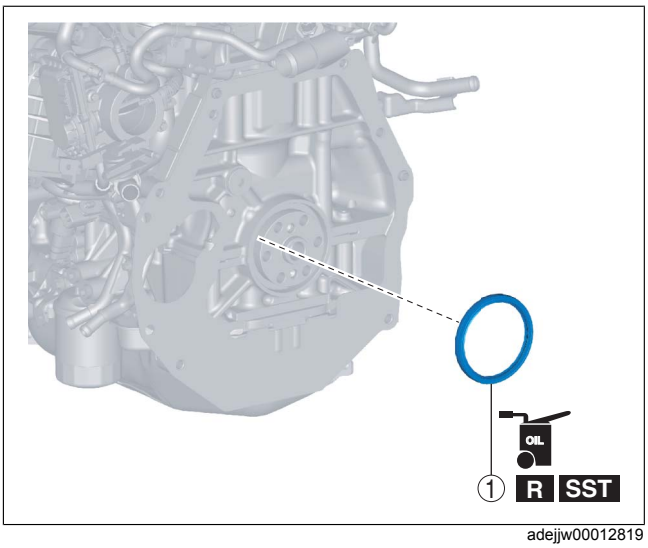

adejjw00012819

Rear Oil Seal Removal Note

1. Cut the oil seal lip using a utility knife.
2. Remove the oil seal using a flathead screwdriver with the tip protected by a clean cloth to prevent damage to the oil seal sliding part of the crankshaft.

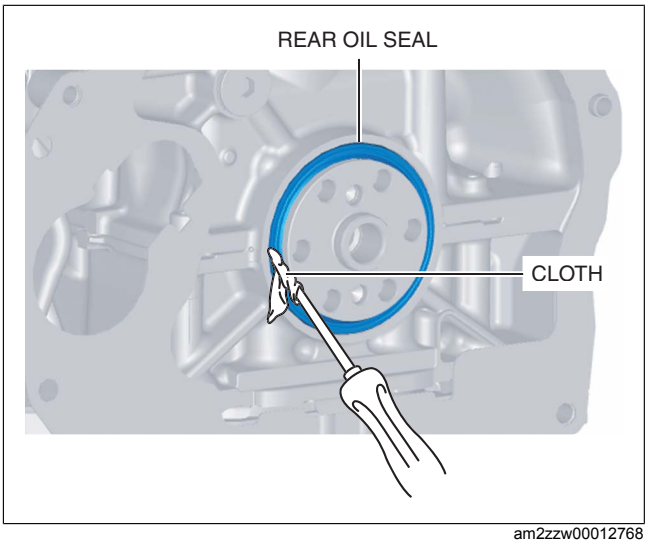


am2zzw00012768

Rear Oil Seal Installation Note


1. Apply clean engine oil to the inner surface of a new rear oil seal.
2. Insert the rear oil seal into the cylinder block by hand.

3. Tap the oil seal in evenly using the **SST** and a hammer.

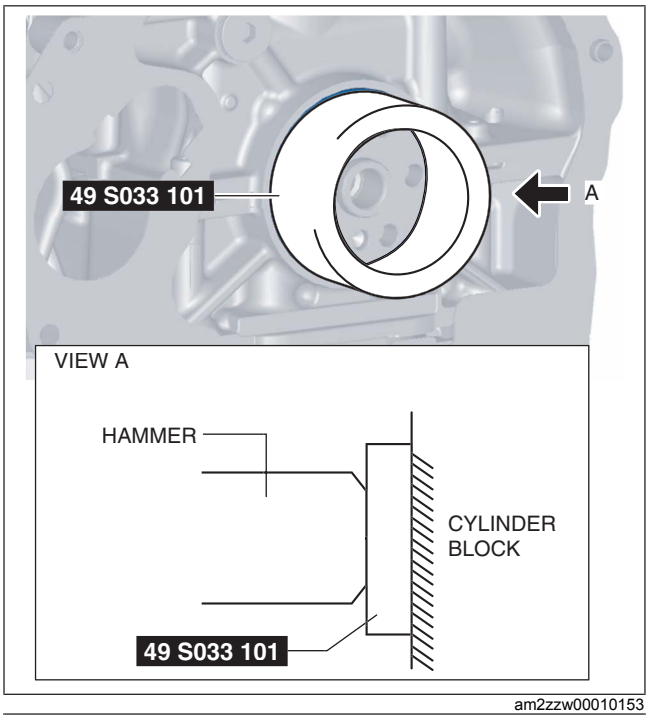

am2zzw00010153

Rear oil seal press on amount C
0—0.5 mm {0—0.019 in} from cylinder block

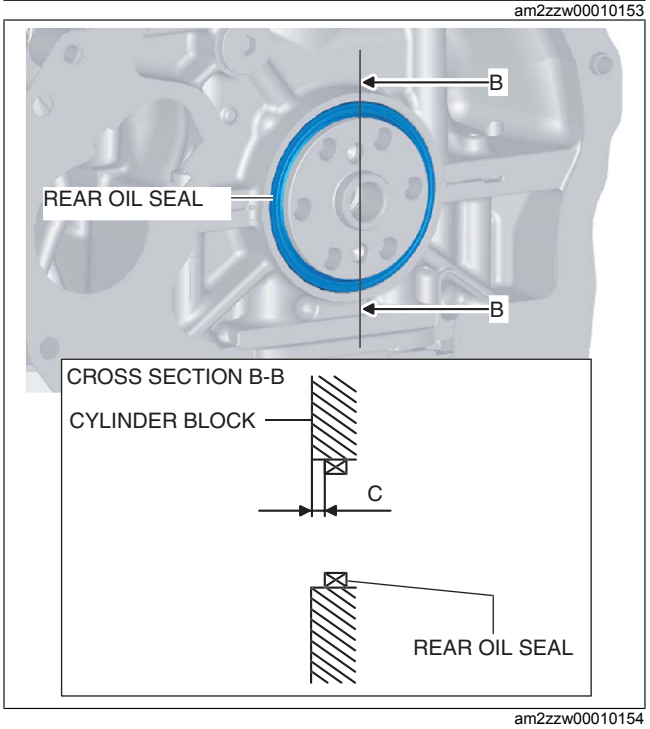

am2zzw00010154