CAMSHAFT [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0110q3001400

Purpose, Function

- The camshaft is rotated by receiving the rotation force of the crankshaft via the timing chain. The valve is opened and closed according to the cam shape at this time.

Construction


- The camshaft is located on the cylinder head.

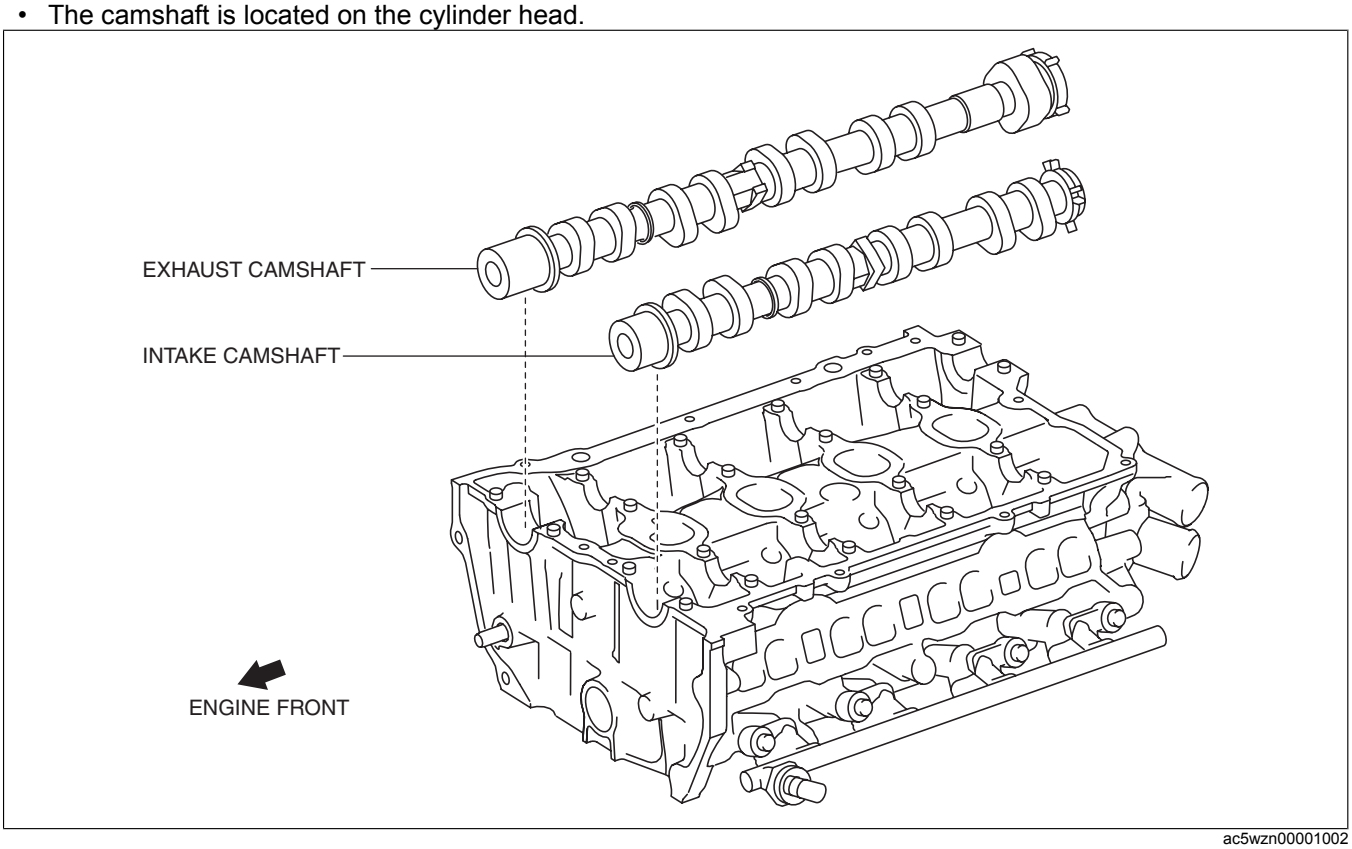

ac5wzn00001002


- The intake camshaft is a five-bearing type and the exhaust camshaft is a six-bearing type.
- The camshaft thrust force is suppressed by the No.1 journal.
- The camshaft has the following parts shown in the figure.

SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)

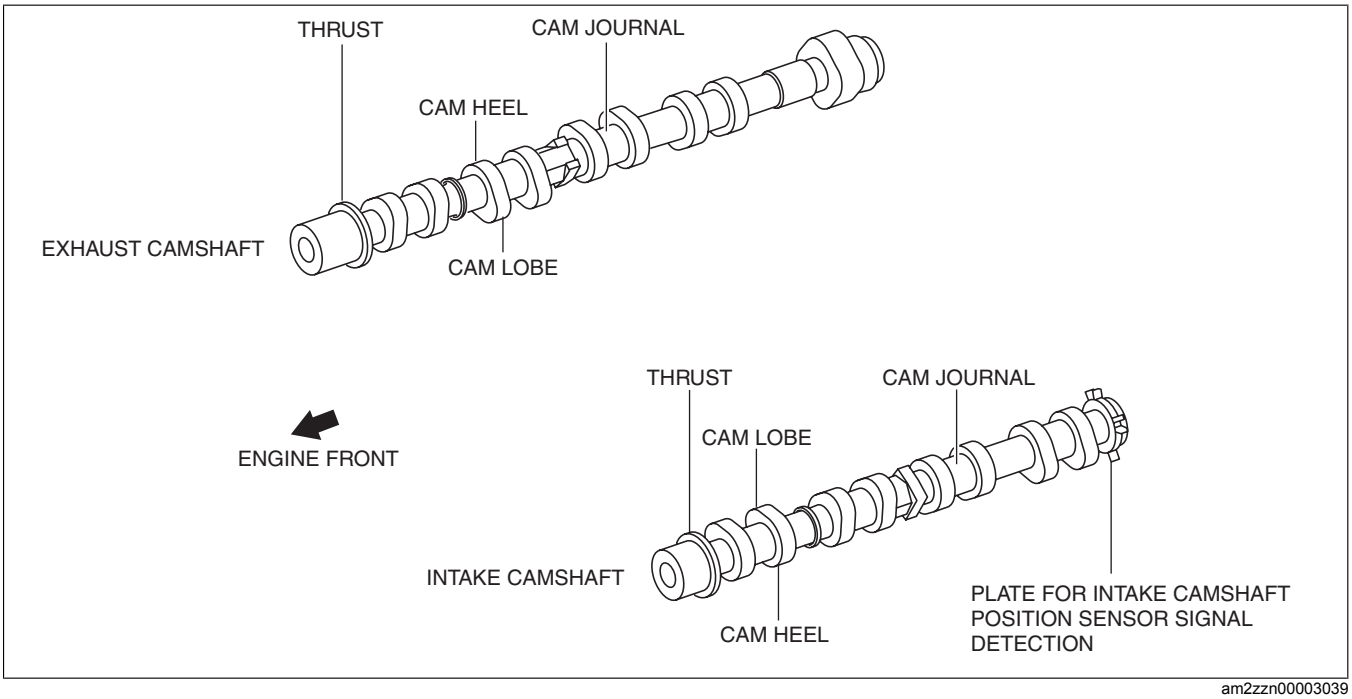


am2zzn00003039

SKYACTIV-G 1.5 (with 4-2-1 exhaust system)

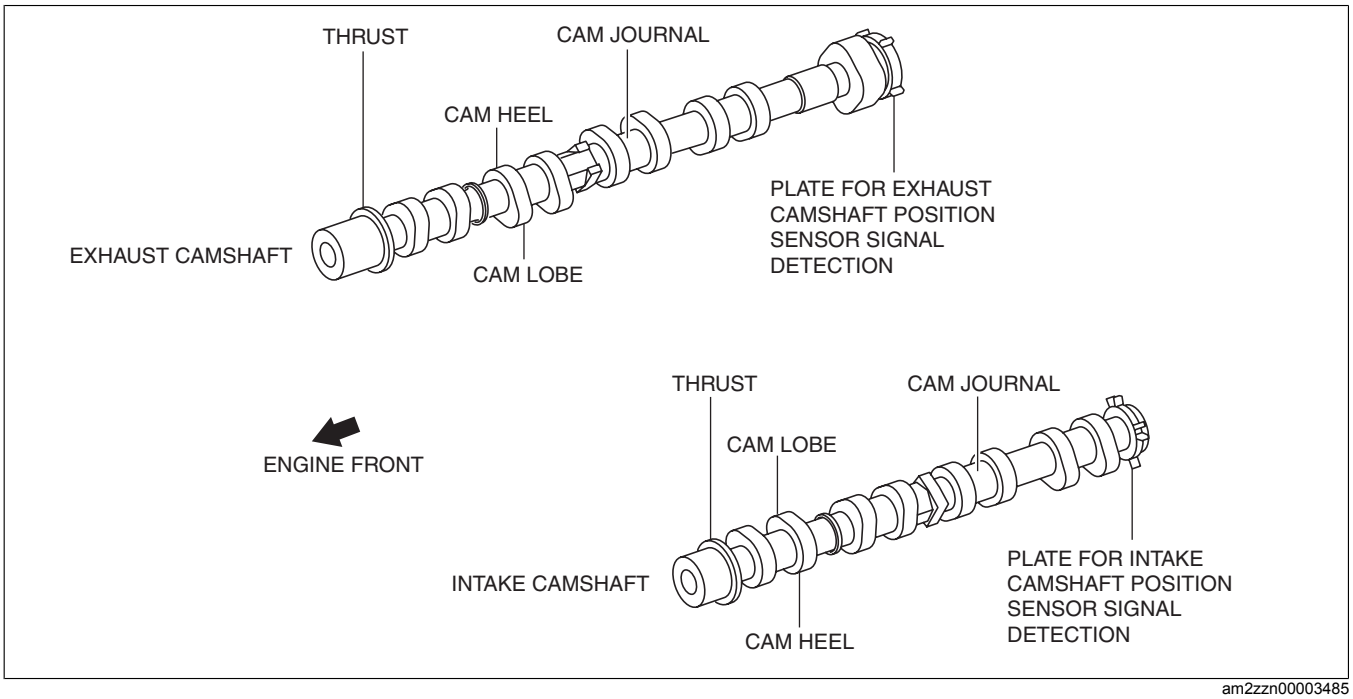

am2zzn00003485


Valve timing
SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)

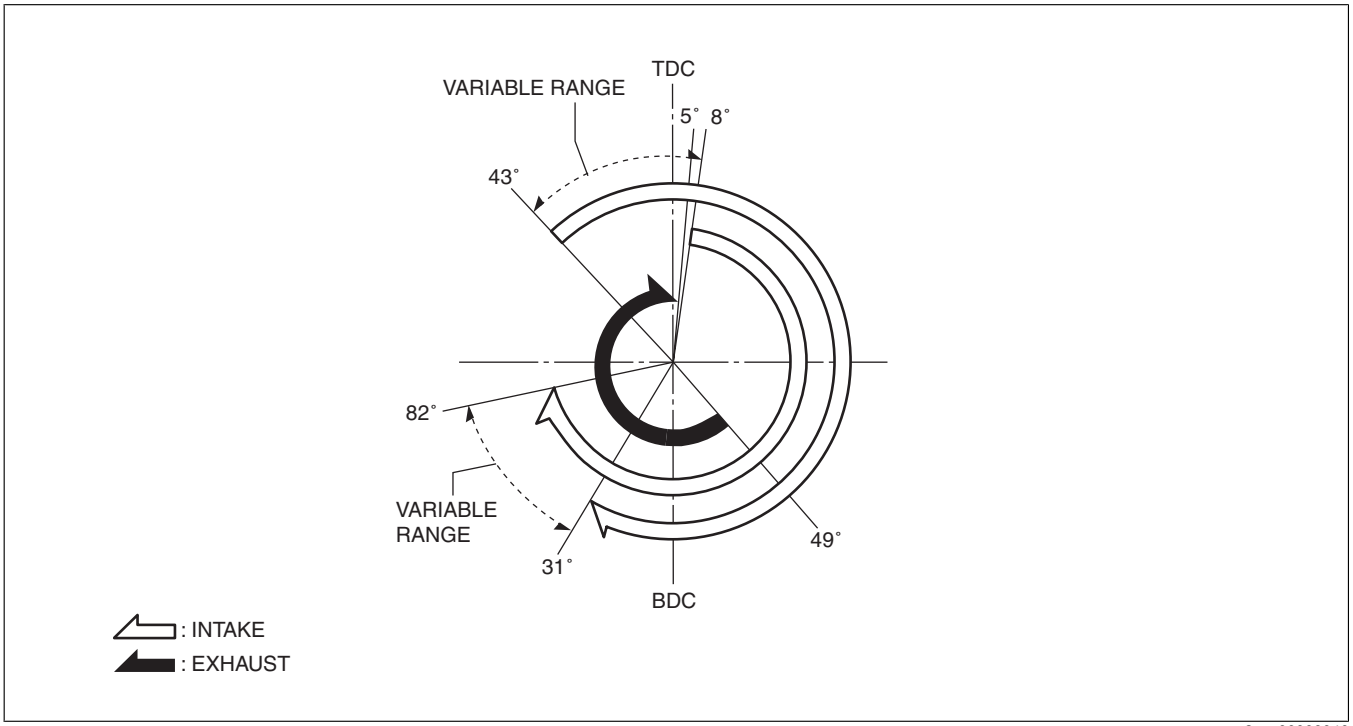

am2zzn00003040

Item				Specification
Valve timing	IN	Open	(°)	BTDC 43—ATDC 8
		Close	(°)	ABDC 31—ABDC 82
	EX	Open	(°)	BBDC 49
		Close	(°)	ATDC 5

SKYACTIV-G 1.5 (with 4-2-1 exhaust system)

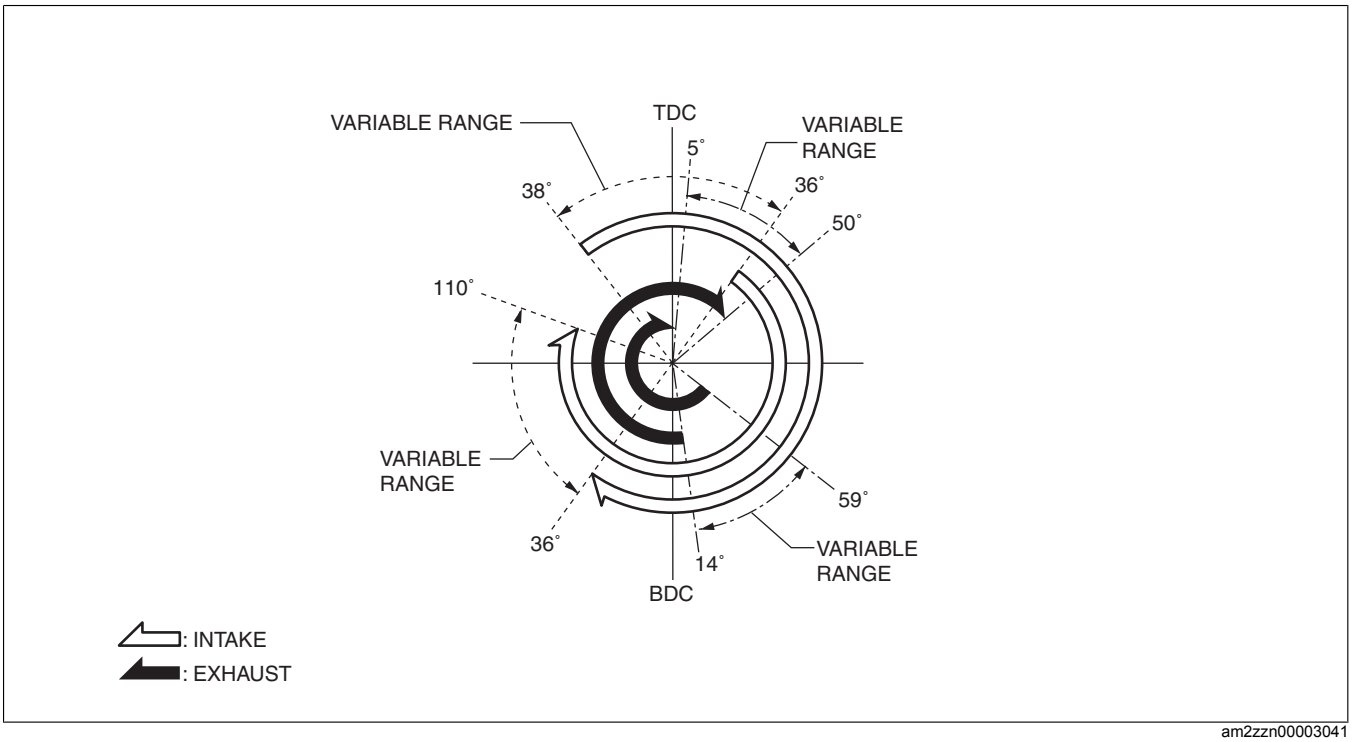

am2zzn00003041

Item				Specification
Valve timing	IN	Open	(°)	BTDC 38—ATDC 36
		Close	(°)	ABDC 36—ABDC 110
	EX	Open	(°)	BBDC 59—BBDC 14
		Close	(°)	ATDC 5—ATDC 50