ENGINE MOUNT [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0110q3001800

Purpose, Function

- The engine mount secures the engine and transaxle to the vehicle body, reducing vibration and noise.

Construction

- The three points at the front of the engine (No.3 engine mount), one side of the transaxle (No.1 engine mount), and the rear upper part of the transaxle (No.4 engine mount) are supported.


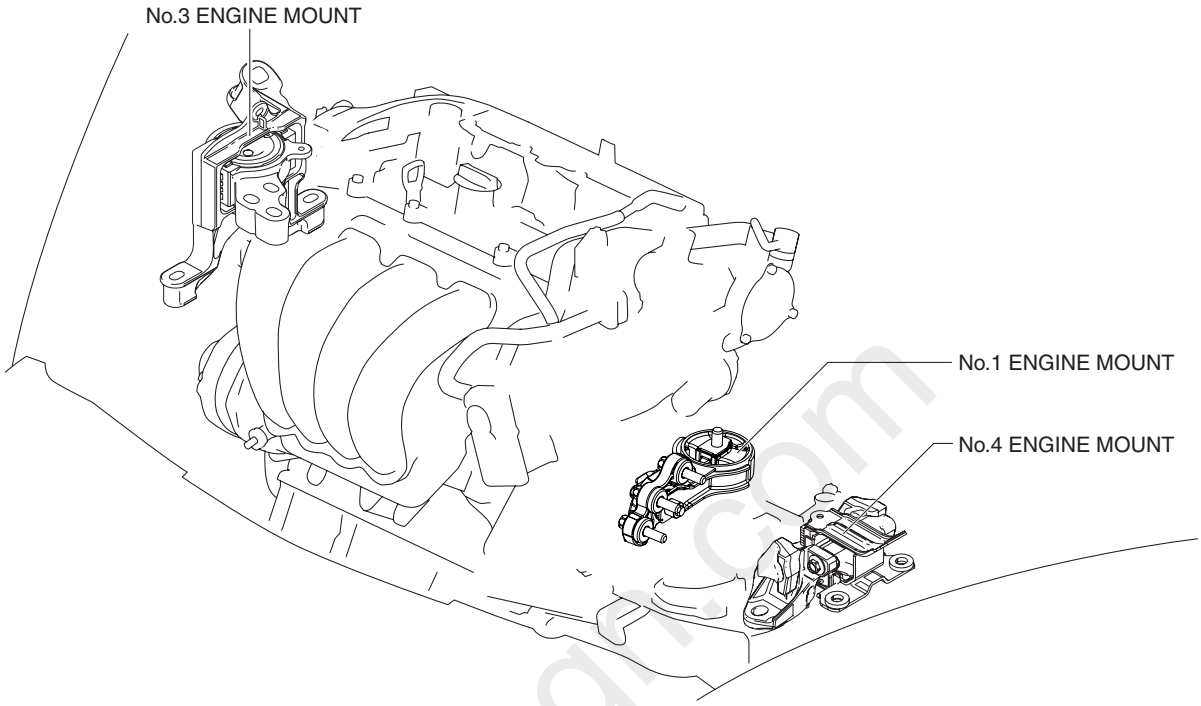


ILLUSTRATION SHOWS WITH SKYACTIV-G 1.5 (WITH 4-2-1 EXHAUST SYSTEM)


am2zzn00003062

- The inside of the No.3 engine mount is filled with fluid for improved damper effect.

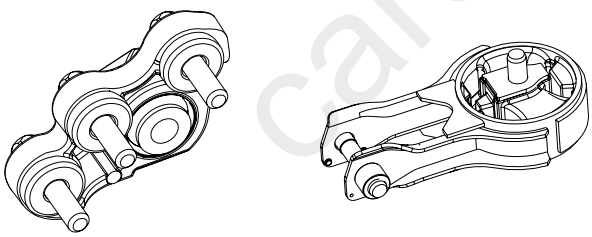


No.1 ENGINE MOUNT BRACKET

No.1 ENGINE MOUNT RUBBER

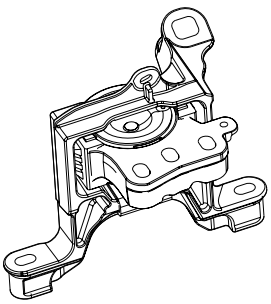


SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)

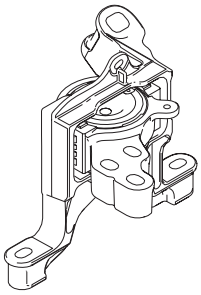


SKYACTIV-G 1.5 (with 4-2-1 exhaust system)


No.3 ENGINE MOUNT

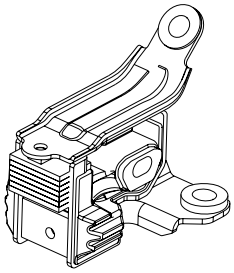

No.4 ENGINE MOUNT RUBBER

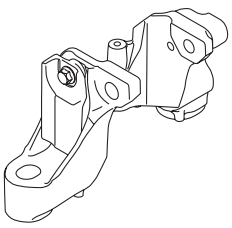

MTX

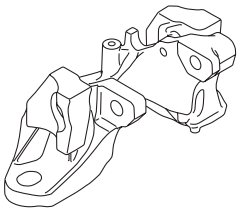

ATX


No.4 ENGINE MOUNT BRACKET

am2zzn00003063

cardiagn.com

Operation

- By locating the one side of the transaxle (No.1 engine mount) to the transaxle lower end, the No.1 engine mount absorbs the rotation force to the powertrain generated during engine torque fluctuation. The layout is designed to disperse the rotation force to the front/back directions of the engine.

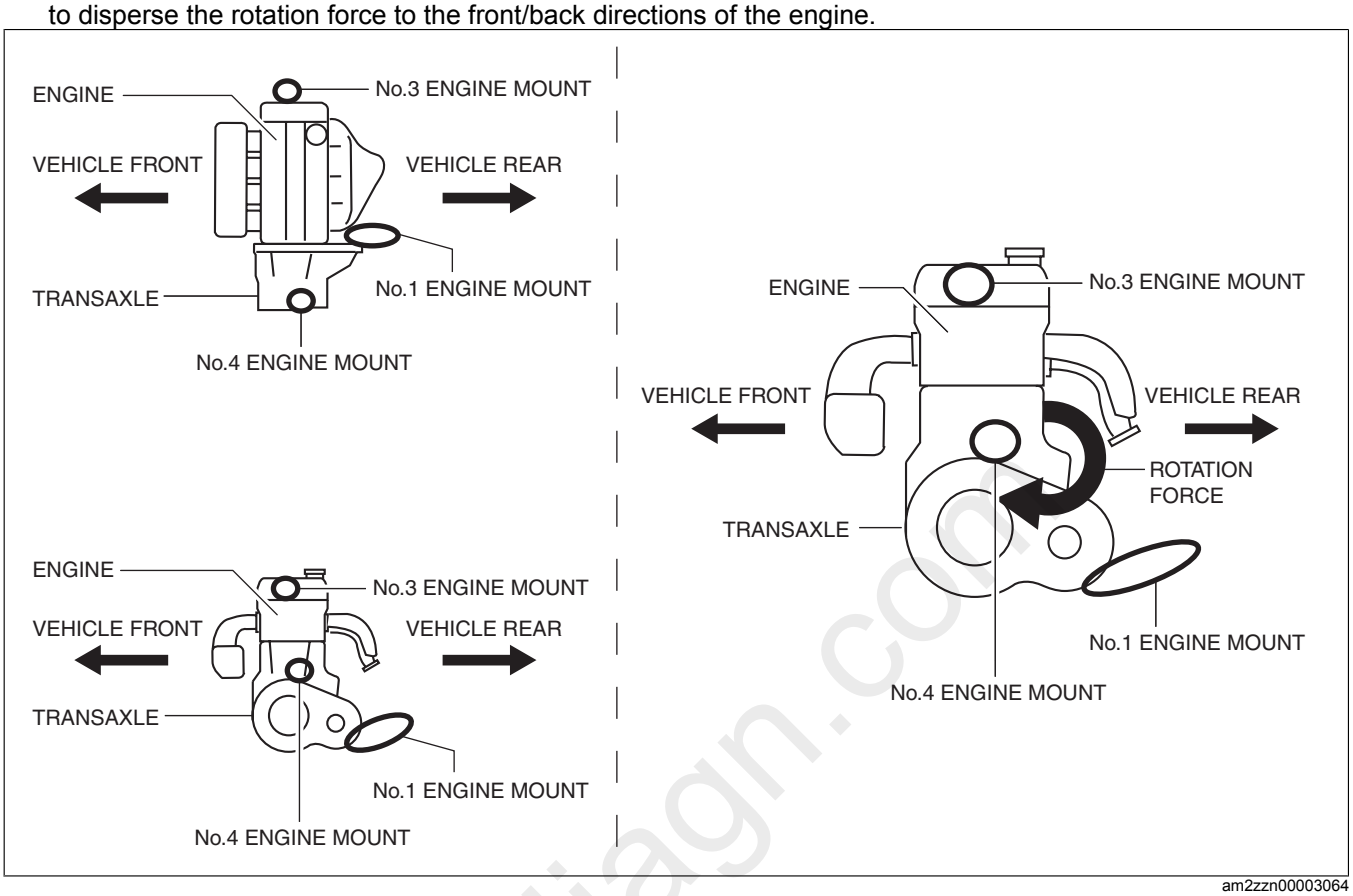

am2zzn00003064

cardiagn.com