## ELECTRIC VARIABLE VALVE TIMING ACTUATOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0110q3555500

**SKYACTIV-G 1.5 (with 4-2-1 exhaust system)**

**Warning**


- **A hot engine can cause severe burns. Turn off the engine and wait until it is cool before servicing.**

**Caution**

- **Do not disassemble the electric variable valve timing actuator because it is a precision unit.**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the plug hole plate. (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Remove the electric variable valve timing motor/driver. (See ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4. Rotate the eccentric shaft of the electric variable valve timing actuator by hand and verify that it rotates smoothly.
   - If it does not rotate smoothly, replace the electric variable valve timing actuator. (See ELECTRIC VARIABLE VALVE TIMING ACTUATOR, HYDRAULIC VARIABLE VALVE TIMING ACTUATOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

   **Note**
   - Hook a finger onto the joint groove of the eccentric shaft to rotate the shaft easily.
   - The eccentric shaft stops rotating at the maximum retard position when it is rotated counterclockwise as viewed from the front, and at the maximum advance position when rotated clockwise.
   - The eccentric shaft rotates 15.8 turns from the maximum retard position to the maximum advance position.
5. Install in the reverse order of removal.

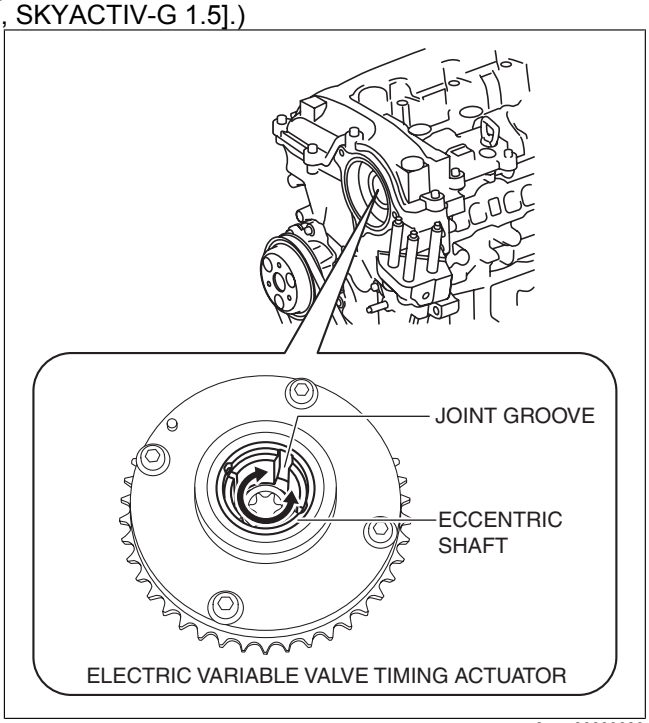


am3uuw00009039