
ENGINE LOCATION INDEX [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0110q3800100

SKYACTIV-G 1.3, SKYACTIV-G 1.5 (with 4-1 exhaust system)

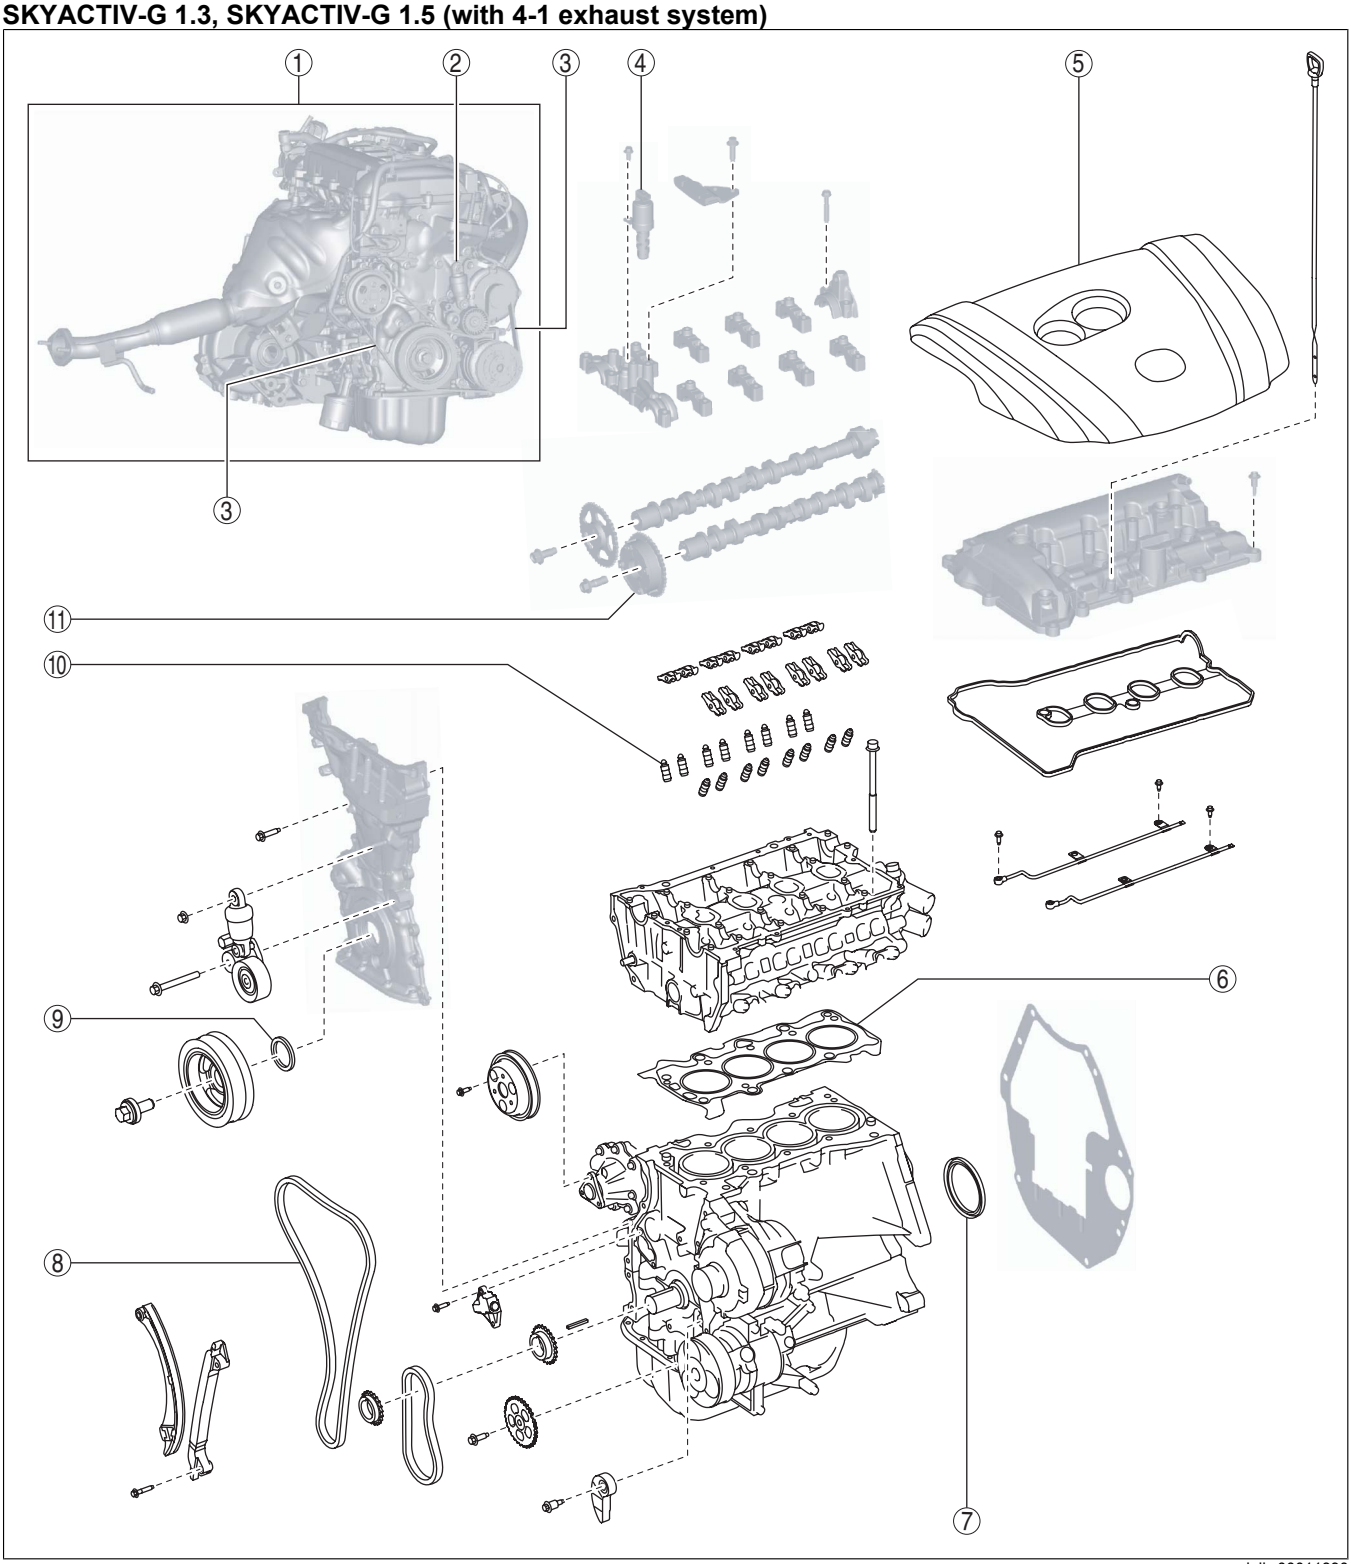


adejjw00011390

1	Engine (See ENGINE TUNE-UP [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See COMPRESSION INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ENGINE MOUNT DISASSEMBLY/ASSEMBLY [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ENGINE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ENGINE DISASSEMBLY/ASSEMBLY [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

2	Drive belt auto tensioner (See DRIVE BELT AUTO TENSIONER INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See DRIVE BELT AUTO TENSIONER REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

3	Drive belt (See DRIVE BELT INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See DRIVE BELT REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4	OCV (See OIL CONTROL VALVE (OCV) INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See OIL CONTROL VALVE (OCV) REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
5	Plug hole plate (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
6	Cylinder head gasket (See CYLINDER HEAD GASKET REPLACEMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
7	Rear oil seal (See REAR OIL SEAL REPLACEMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
8	Timing chain (See TIMING CHAIN REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
9	Front oil seal (See FRONT OIL SEAL REPLACEMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
10	Hydraulic lash adjuster (HLA) (See HYDRAULIC LASH ADJUSTER (HLA) INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See HYDRAULIC LASH ADJUSTER (HLA) REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
11	Hydraulic variable valve timing actuator (See HYDRAULIC VARIABLE VALVE TIMING ACTUATOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ELECTRIC VARIABLE VALVE TIMING ACTUATOR, HYDRAULIC VARIABLE VALVE TIMING ACTUATOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

SKYACTIV-G 1.5 (with 4-2-1 exhaust system)

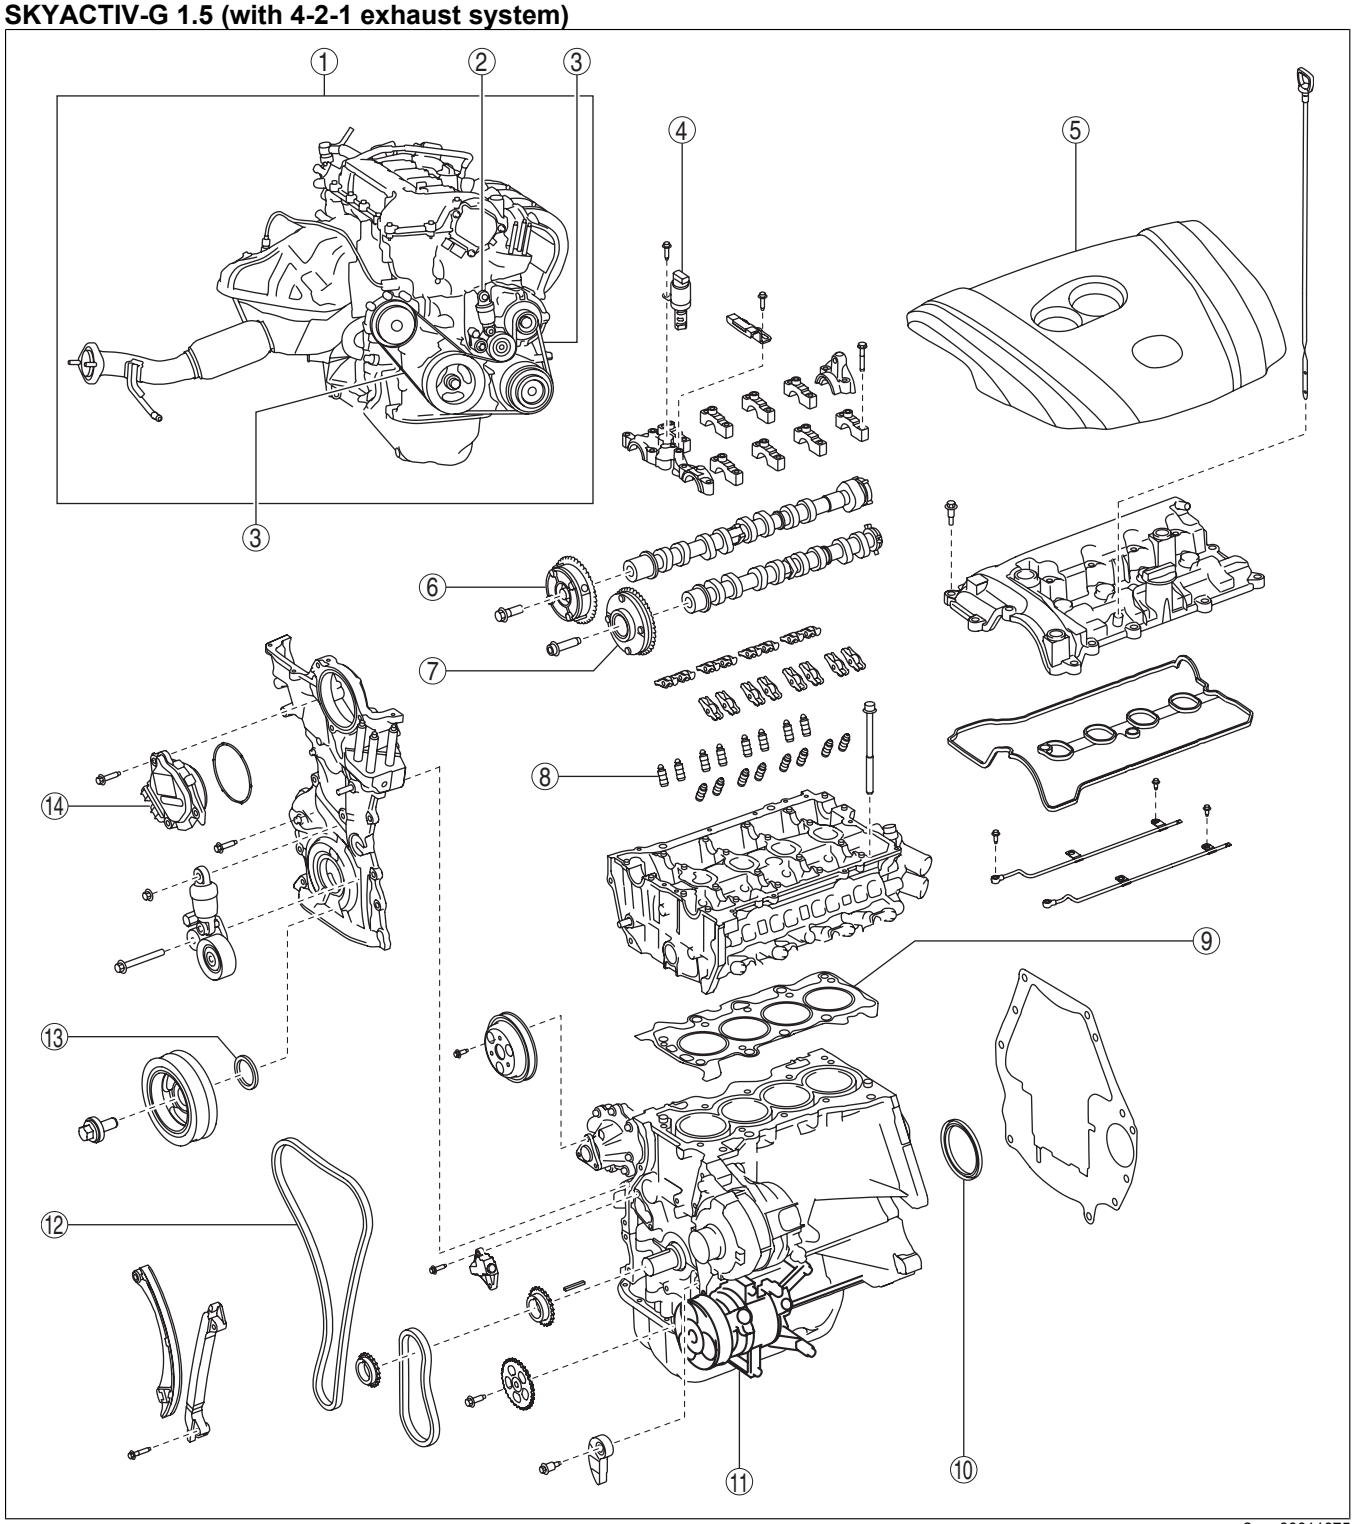

am2zzw00011075

1	Engine (See ENGINE TUNE-UP [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See COMPRESSION INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ENGINE MOUNT DISASSEMBLY/ASSEMBLY [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ENGINE REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ENGINE DISASSEMBLY/ASSEMBLY [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

2	Drive belt auto tensioner (See DRIVE BELT AUTO TENSIONER INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See DRIVE BELT AUTO TENSIONER REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3	Drive belt (See DRIVE BELT INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See DRIVE BELT REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

4	OCV (See OIL CONTROL VALVE (OCV) INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See OIL CONTROL VALVE (OCV) REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
5	Plug hole plate (See PLUG HOLE PLATE REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
6	Hydraulic variable valve timing actuator (See HYDRAULIC VARIABLE VALVE TIMING ACTUATOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ELECTRIC VARIABLE VALVE TIMING ACTUATOR, HYDRAULIC VARIABLE VALVE TIMING ACTUATOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
7	Electric variable valve timing actuator (See ELECTRIC VARIABLE VALVE TIMING ACTUATOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ELECTRIC VARIABLE VALVE TIMING ACTUATOR, HYDRAULIC VARIABLE VALVE TIMING ACTUATOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
8	Hydraulic lash adjuster (HLA) (See HYDRAULIC LASH ADJUSTER (HLA) INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See HYDRAULIC LASH ADJUSTER (HLA) REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
9	Cylinder head gasket (See CYLINDER HEAD GASKET REPLACEMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
10	Rear oil seal (See REAR OIL SEAL REPLACEMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
11	Idler (Without A/C) (See IDLER REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See IDLER DISASSEMBLY/ASSEMBLY [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See MAGNETIC CLUTCH ADJUSTMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See MAGNETIC CLUTCH INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
12	Timing chain (See TIMING CHAIN REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
13	Front oil seal (See FRONT OIL SEAL REPLACEMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
14	Electric variable valve timing motor/driver (See ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)