
REAR OIL SEAL REPLACEMENT [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0110q3800900

1. Remove the transaxle. (See MANUAL TRANSAXLE REMOVAL/INSTALLATION [F65M-R] (MTX).) (See MANUAL TRANSAXLE REMOVAL/INSTALLATION [F66M-R (SKYACTIV-G 1.5)] (MTX).) (See AUTOMATIC TRANSAXLE REMOVAL/INSTALLATION [CW6A-EL] (ATX).)
2. Remove the flywheel (MTX) or the drive plate (ATX). (See CLUTCH UNIT REMOVAL/INSTALLATION [F65M-R] (MTX).)(See CLUTCH UNIT REMOVAL/INSTALLATION [F66M-R] (MTX).) (See DRIVE PLATE REMOVAL/INSTALLATION [CW6A-EL] (ATX).)
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal.


1	Rear oil seal (See Rear Oil Seal Removal Note.) (See Rear Oil Seal Installation Note.)

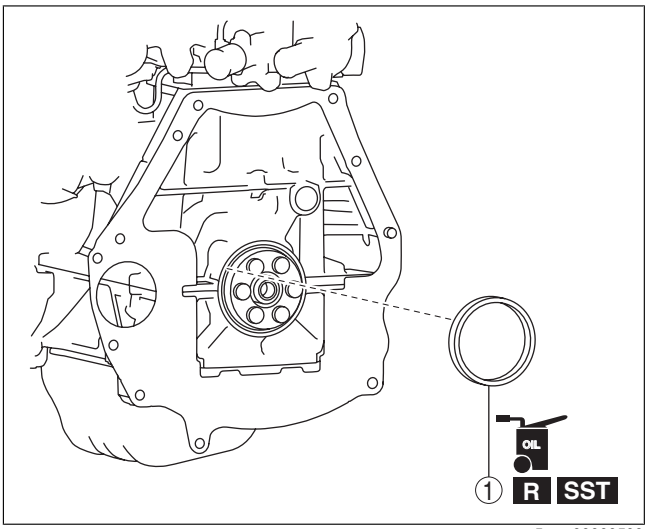

ac5uuw00000503

Rear Oil Seal Removal Note

1. Remove the rear oil seal lip using a utility knife.
2. Remove the rear oil seal using a flathead screwdriver with the tip protected by a cloth to prevent damage to the rear oil seal sliding part of the crankshaft.

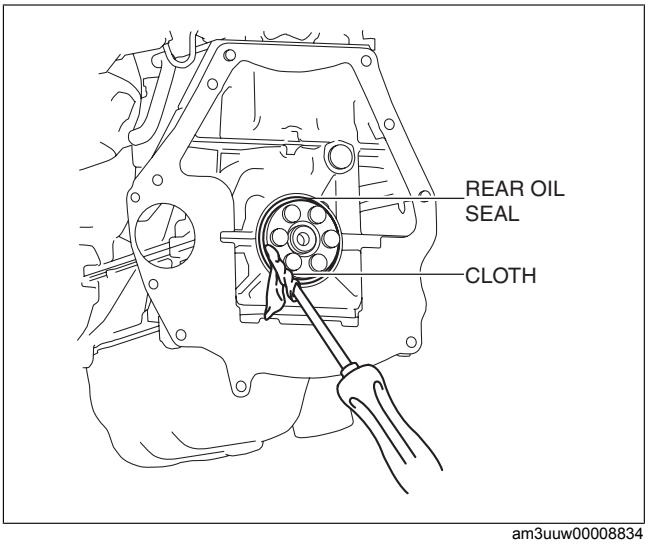


am3uuw00008834

Rear Oil Seal Installation Note


1. Apply clean engine oil to the inner surface of a new rear oil seal.
2. Insert the rear oil seal into the cylinder block by hand.

3. Tap the oil seal in evenly using the **SST** and a hammer.

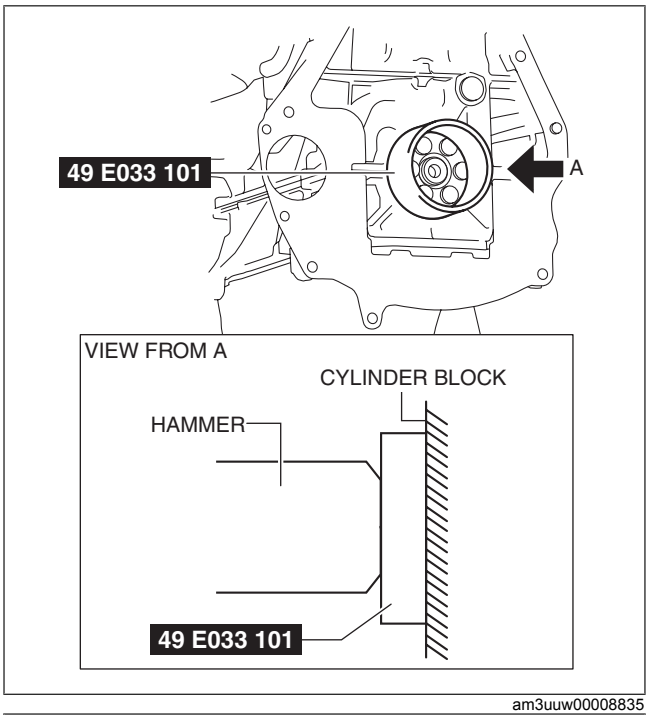

am3uuw00008835

Rear oil seal press on amount C
0—0.5 mm {0—0.019 in} from cylinder block

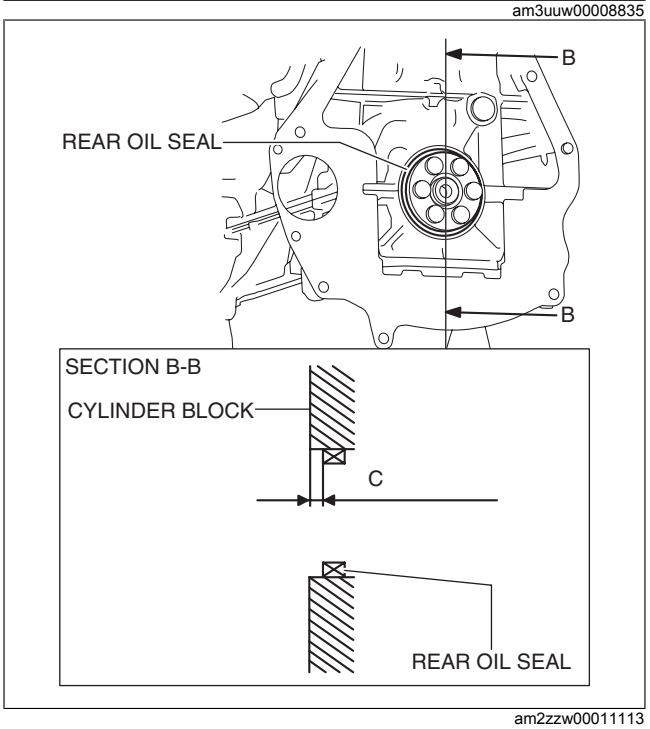

am2zzw00011113